



# Repairing Oster 6344 Toaster Lever

This guide will help you master the art of fixing toaster levers, with optional cleanup as well!

Written By: Daniel



---

## INTRODUCTION

This is how to repair the lever on your Oster Toaster



### TOOLS:

- [Large Needle Nose Pliers](#) (1)
-

## Step 1 — Repairing Oster 6344 Toaster Lever



- Assure the toaster is unplugged.

## Step 2



- Look down into the bread slots and assure that the metal tongues are not bent or crooked.

### Step 3



- If the metal tongues are bent use the pliers to straighten them.

### Step 4



- Plug your toaster back in and test it to see if the lever stays down.



## Step 5



- (Optional): To clean the toaster, make sure it is unplugged, empty the crumb tray and then clean out all visible residue.
- Note: Compressed air, wooden skewers, and slightly damp, lint free cloths are most helpful when cleaning your toaster.
- Be sure that the toaster is completely dry from cleaning before you reassemble it.

To reassemble your device, follow these instructions in reverse order.