



Canon Powershot A70 Shutter/Speaker Panel Replacement

How to replace the shutter/speaker panel in a Canon Powershot A70 camera.

Written By: Shalan Ertis



INTRODUCTION

This guide will explain the simple process to remove the panel on top of the camera, and to gain access to the speaker.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Shutter/Speaker Panel



- Open the battery compartment and remove the batteries.
- Remove the two screws that are deep in the battery compartment with a Phillips #00 screwdriver.

Step 2



- Open the CF compartment and remove the top screw with a Phillips #00 screwdriver.
- The panel that holds the shutter button and zoom will come off.
- ⚠ Be careful! There are two small wires connecting the speaker to the body of the camera. These are very delicate so proceed with caution. *Do not remove.*

To reassemble your device, follow these instructions in reverse order.