

# **RAM Replacement**

Written By: Marjorie



### TOOLS:

Pro Tech Toolkit (1)

### Step 1 — Battery



• Remove all wires then flip the laptop

### Step 2





• Remove the battery

#### Step 3 — RAM








• Flip the Laptop, and unscrew the RAM cover.


## Step 4

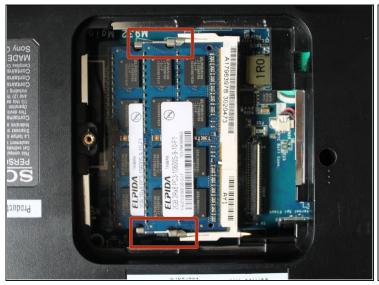



- Unlock the RAM by pulling the locks outward.
- (i) You'll know if its unlocked if it flips up in 45 degrees.

### Step 5

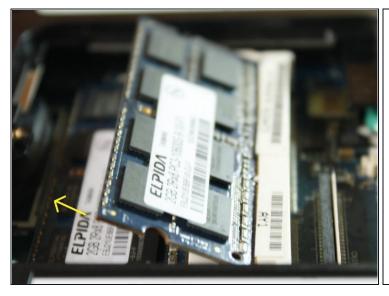



Pull the outer RAM. Repeat Step 4 and 5 for the other RAM.

 $\triangle$  When returning, put the RAM back in at 45 degree angle, NOT 90 degree angle.

To reassemble your device, follow these instructions in reverse order.