



# Professional Series PS77401 Shell Removal

Remove the outer shell of the toaster

Written By: Zachary



---

## INTRODUCTION

This guide will show you how to safely remove the outer shell of the toaster. Note that the outer shell is not the chassis.

---

### TOOLS:

- [T7 Torx Screwdriver](#) (1)
  - [Phillips #2 Screwdriver](#) (1)
-

## Step 1 — Shell



- ★ Make sure that the toaster is unplugged before attempting any sort of disassembly!

## Step 2



- Grip the black plastic lever nub firmly and *carefully* remove it from the metal lever. Use one hand to hold the toaster in place while you pull the lever nub with the other.

⚠ If this is the first time detaching this piece, it will take some effort to remove. Be careful as pulling too hard can cause damage to the inner lever mechanism.

### Step 3



- Flipping the toaster upside down, use a T7 Torx Screwdriver to remove the four 10mm screws that keep the outer shell attached.
  - Flip the toaster back over and slide off the shell making sure to slip the toaster lever (now without the black plastic nub) through the lever opening in the shell.
- i** The outer shell should now only be connected by its internal wiring.

### Step 4



- Locate and remove the two 8mm screws that attach the circuit board (located inside of the shell) from the shell itself using the Phillips #2 screwdriver.
- i** The shell should now be completely separated from the rest of the toaster.

To reassemble your device, follow these instructions in reverse order.