




Sony Cyber-shot DSC-W5 LCD Screen Replacement

Written By: Thomas

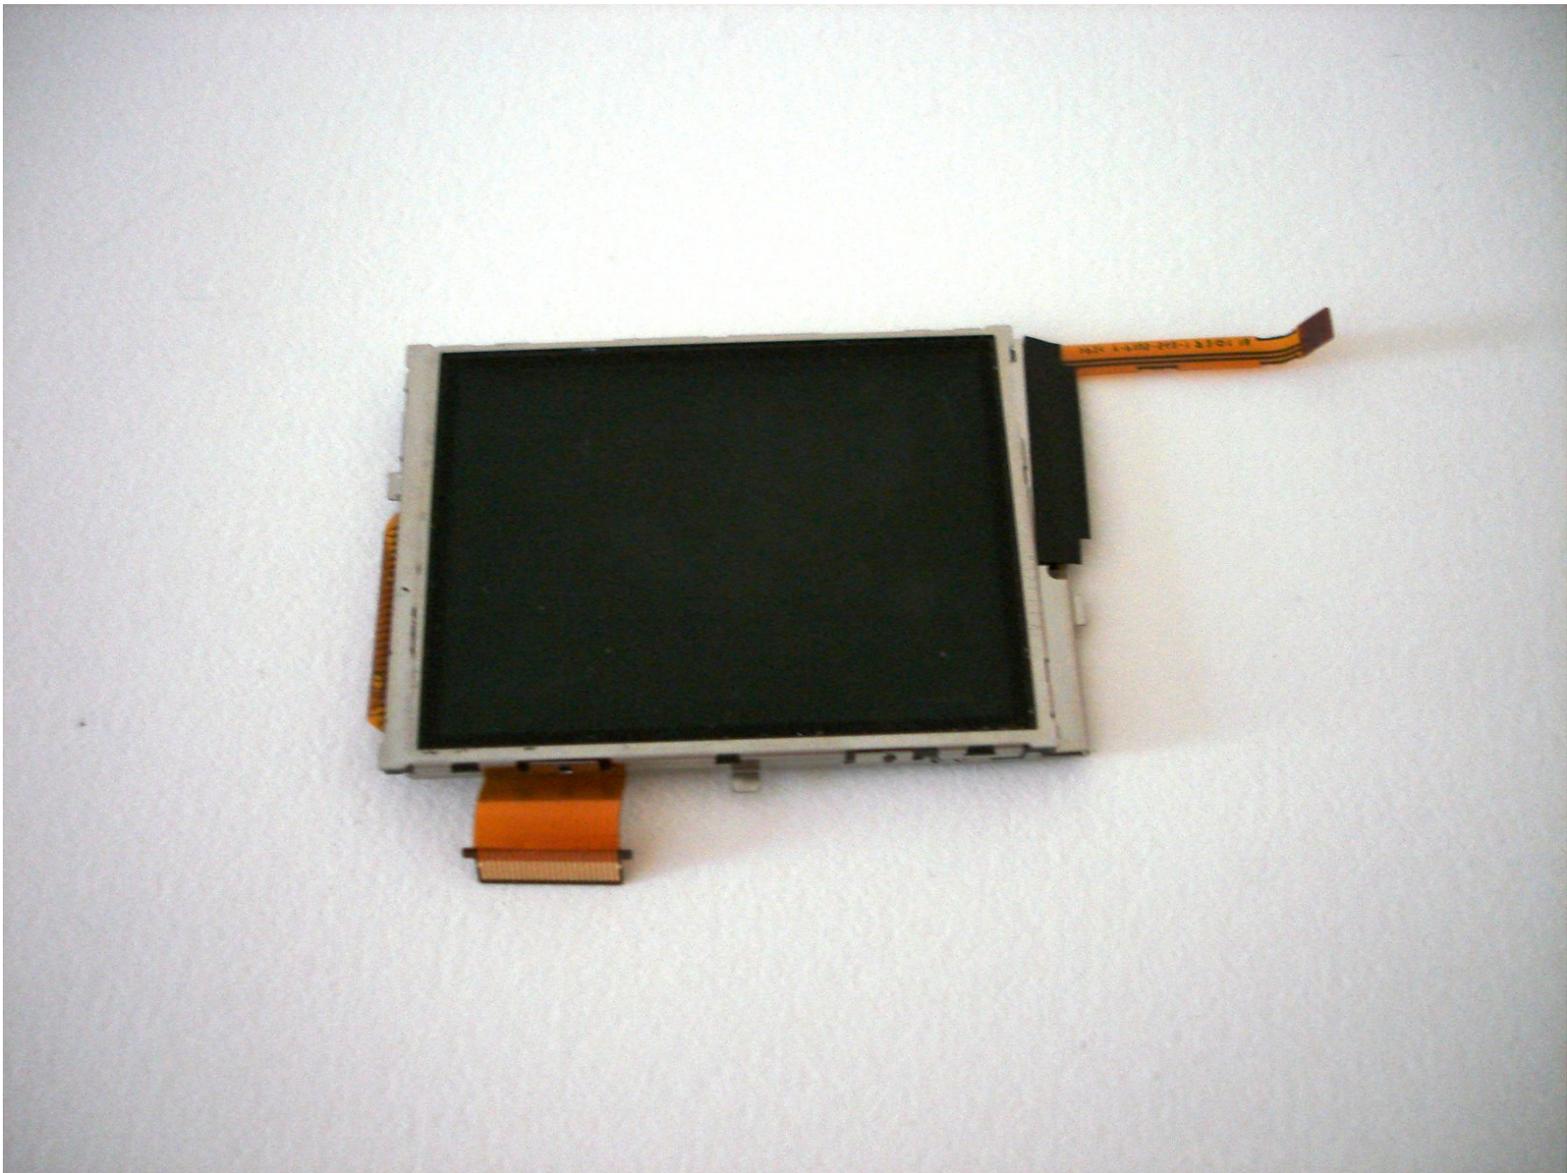


INTRODUCTION

This guide will show you how to access the LCD screen in order to repair or replace the screen.

TOOLS:


- [Phillips #00 Screwdriver](#) (1)
 - [Paper Clip](#) (1)
-

Step 1 — Back Cover

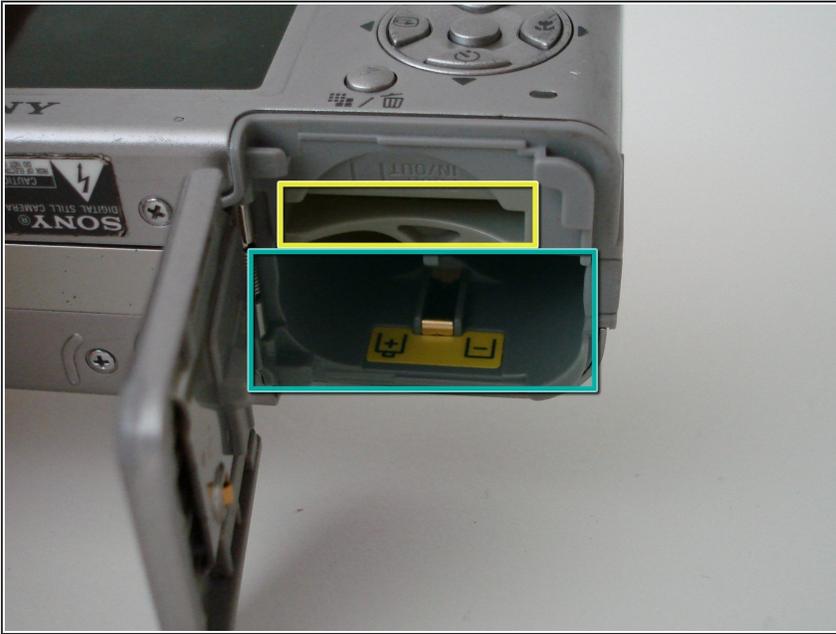

- Remove Memory Stick Pro from the card reader slot on the bottom of the camera.
- Remove both batteries.



Step 2

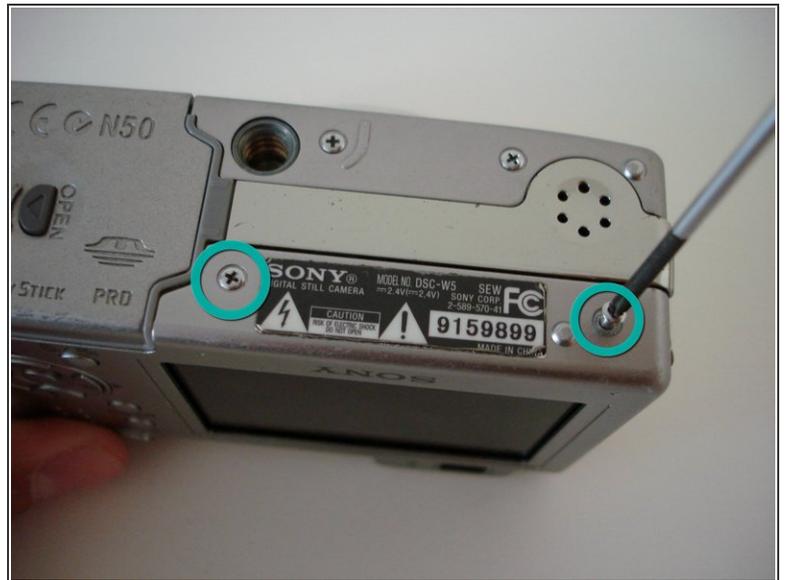

- Remove the single visible screw from both sides of the camera.
 - Remove the two screws that are adjacent to the warning label, which is on the underside of the camera.
- (i)** Do **NOT** remove all four screws from the bottom.


This document was generated on 2020-11-21 08:48:46 AM (MST).

Step 3

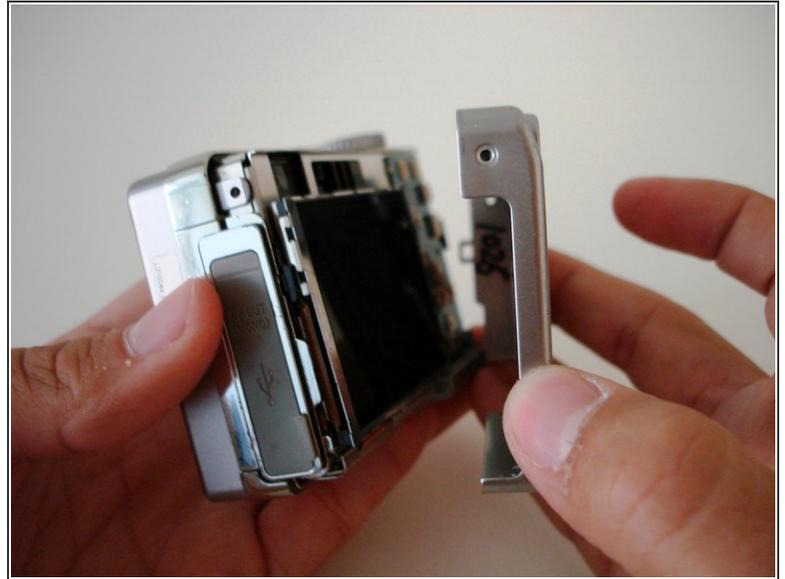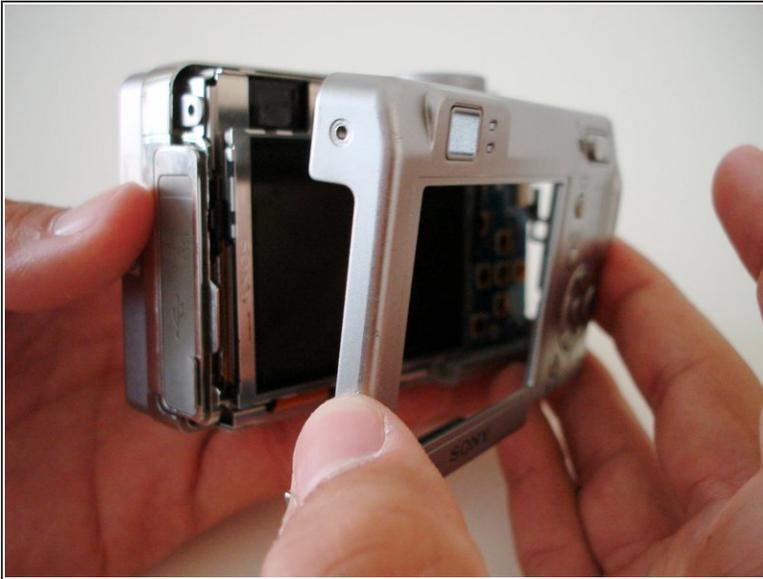


- Gently remove the back cover from the camera.
- ⓘ The first time the case is removed, it will be stiff. Be patient and gently rock the cover back and forth until it slides free.

Step 4 — LCD Screen

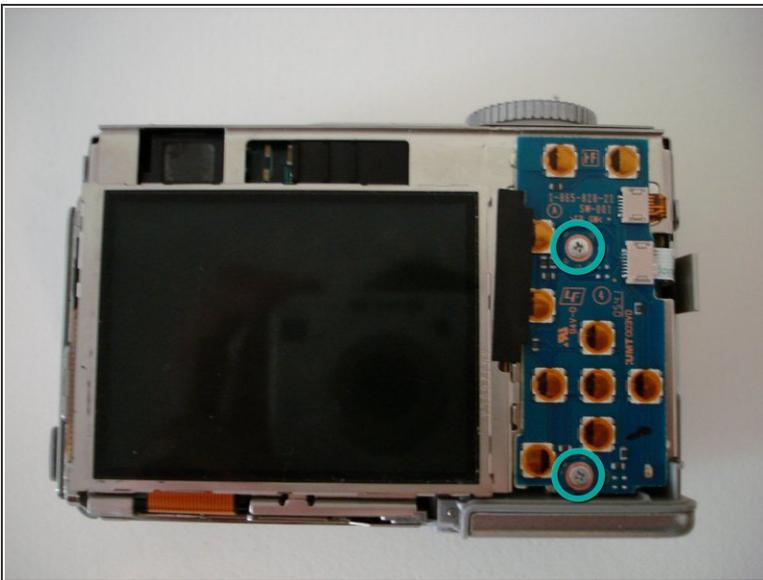


- Remove the two screws holding the circuit board down.

Step 5

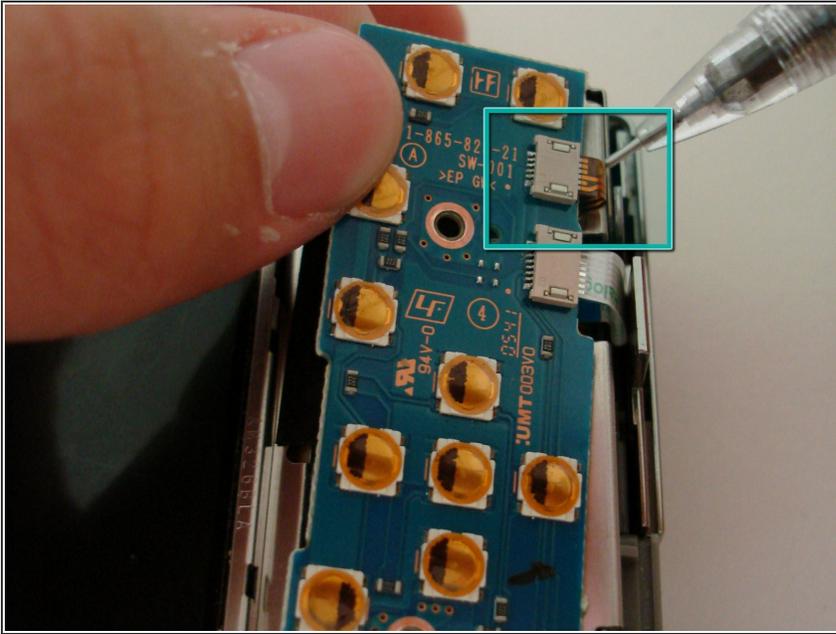

- Detach the orange cable from the board.
- ⓘ Use a thin object, like a paperclip, to gently pry the cable off the connector.

Step 6

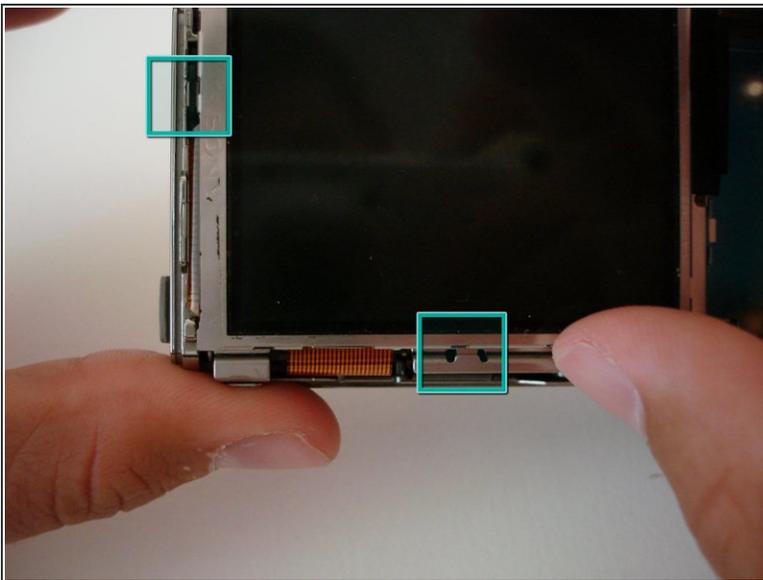

- The LCD screen sits in two slots; one on the bottom, and one on the left edge.
- Slide LCD screen from the two slots.
- ⚠ Do not attempt to completely remove the screen, as it is still attached to the camera.

Step 7



- To remove the LCD screen, detach the orange cable from the board.
- If needed, replace the LCD screen.

To reassemble your device, follow these instructions in reverse order.