

# **Siemens A56 SIM Card Replacement**

The SIM card needs to be replaced when bringing this phone to new service provider or changing to the Siemens A56 phone from a different phone. The SIM card contains relevant information like phone contacts.

Written By: Lauren Young




This document was generated on 2020-11-28 03:15:06 AM (MST).




• iFixit Opening Tools (1)

#### Step 1 — Battery

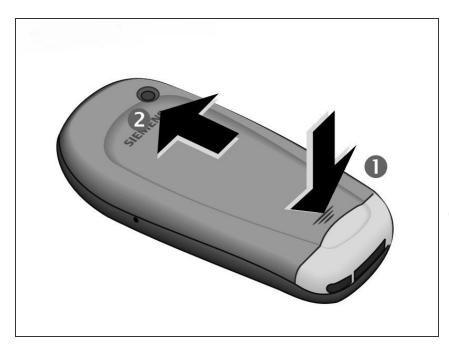

- Press down on the grooved area firmly in the direction of arrow #1.
- While maintaining the downwards pressure, push the back cover in the direction of arrow #2 until the back cover slides off.
- Photos taken from:
  <a href="http://theinformr.com/uploads/manuals/s/si...">http://theinformr.com/uploads/manuals/s/si...</a>

## Step 2

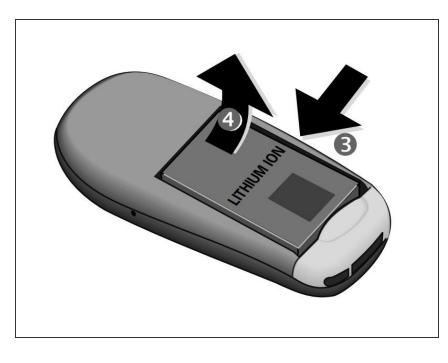

- Turn off the phone before removing the battery to avoid damage.
- Press the latch on the battery in the direction of arrow #3.
- Lift battery at the cutout on the side of the phone, then tilt upwards and remove.
- it may be necessary to use the tip of a fingernail or a plastic lifting tool to remove the battery.
- Photos taken from:
  <a href="http://theinformr.com/uploads/manuals/s/si...">http://theinformr.com/uploads/manuals/s/si...</a>

### Step 3 — SIM Card








- With the phone turned onto its backside, gently slide the metal clasp up to unlock the SIM card.
- (i) It may be easier to move the clasp with a plastic opening tool, but it is not required.
- The SIM card will spring up once the clasp is released.
- Remove the SIM card from phone.

## Step 4

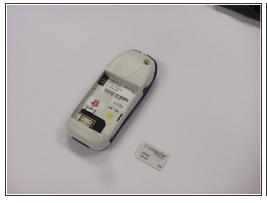





- To replace the SIM card, insert the card back into the slot.
- While pressing the SIM card with one finger, slide the metal clasp down to lock the card in place.