




Toshiba Satellite L305D-S5950 RAM Replacement

This guide is for replacing the RAM modules.

Written By: Ricky Baker

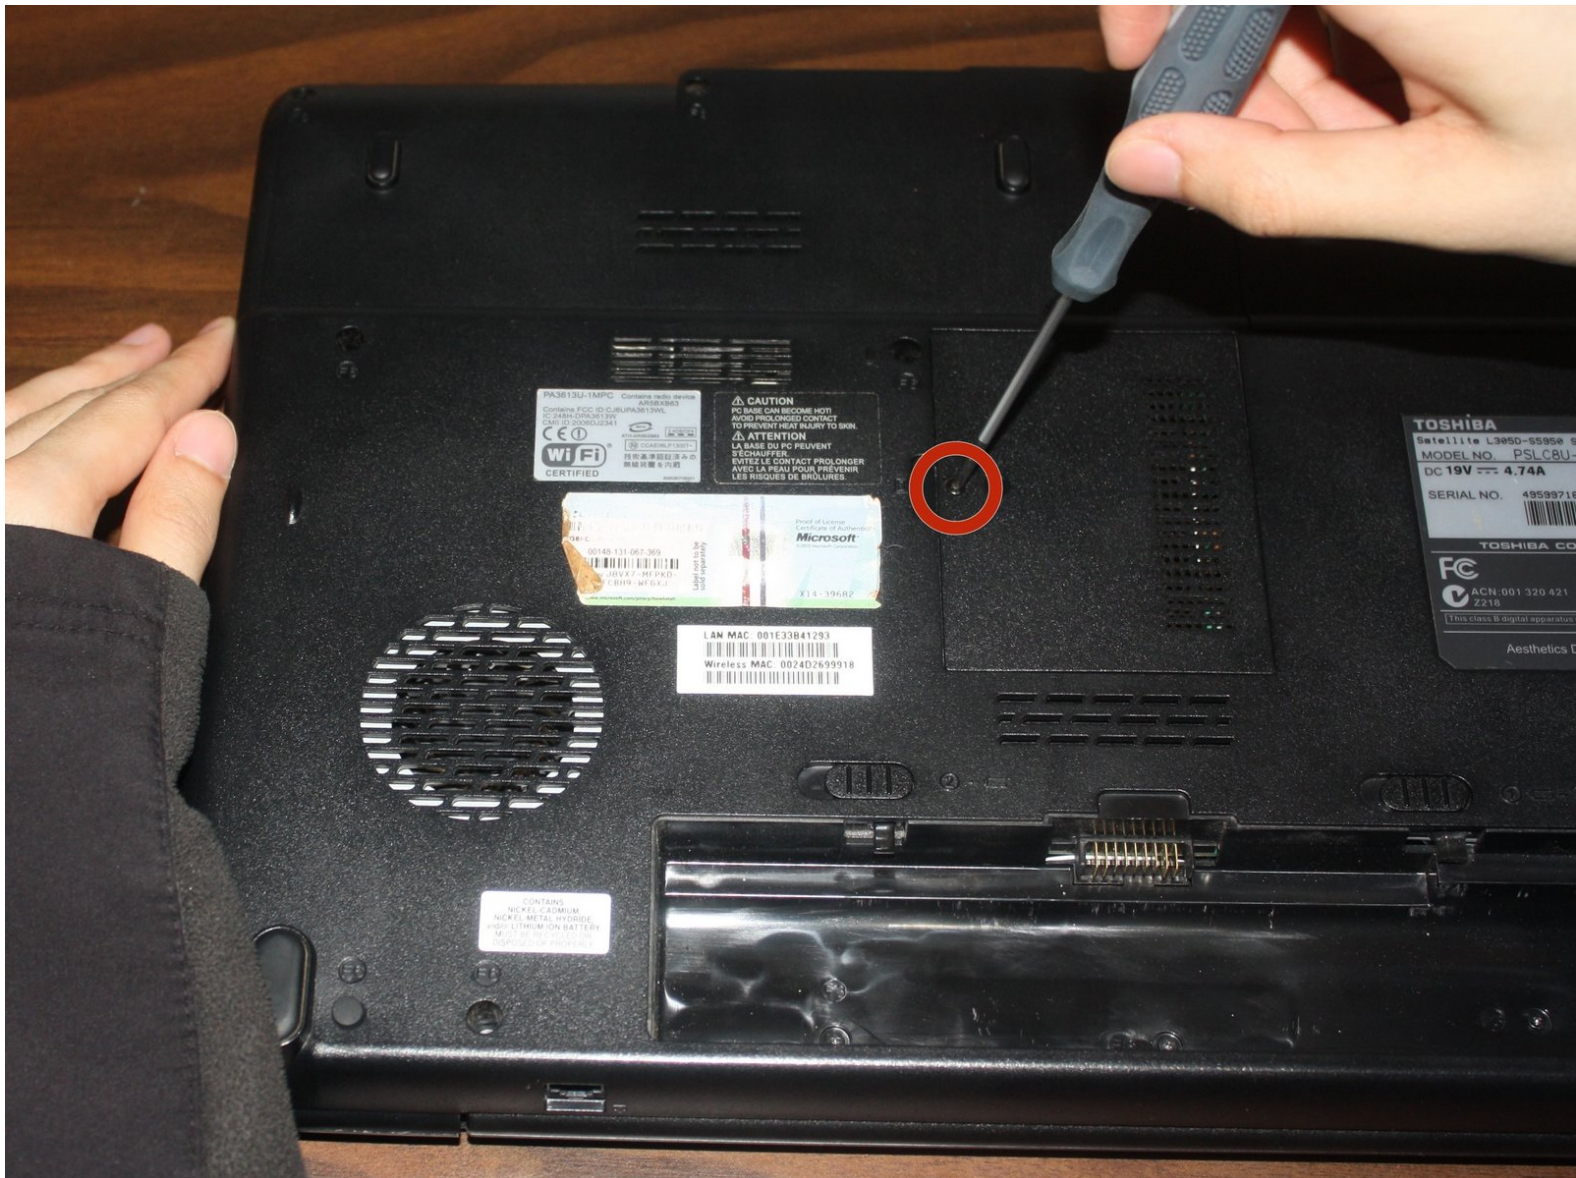



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Battery




- Locate the two sliding battery locks on the underside of the laptop.

Step 2



- Locate the right battery lock and slide it to the right.

Step 3

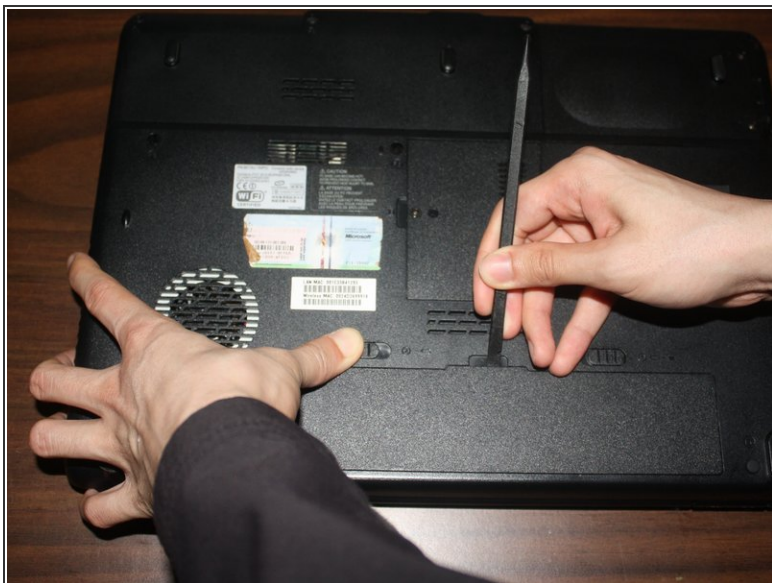

- While holding the left battery lock to the left, lift up the battery using the tab located on the top center of the battery.

Step 4




- Remove the battery from the laptop.

Step 5 — RAM




- Unscrew the RAM cover and rotate the cover up to remove it. The screw should not be fully removed from the cover itself.

Step 6

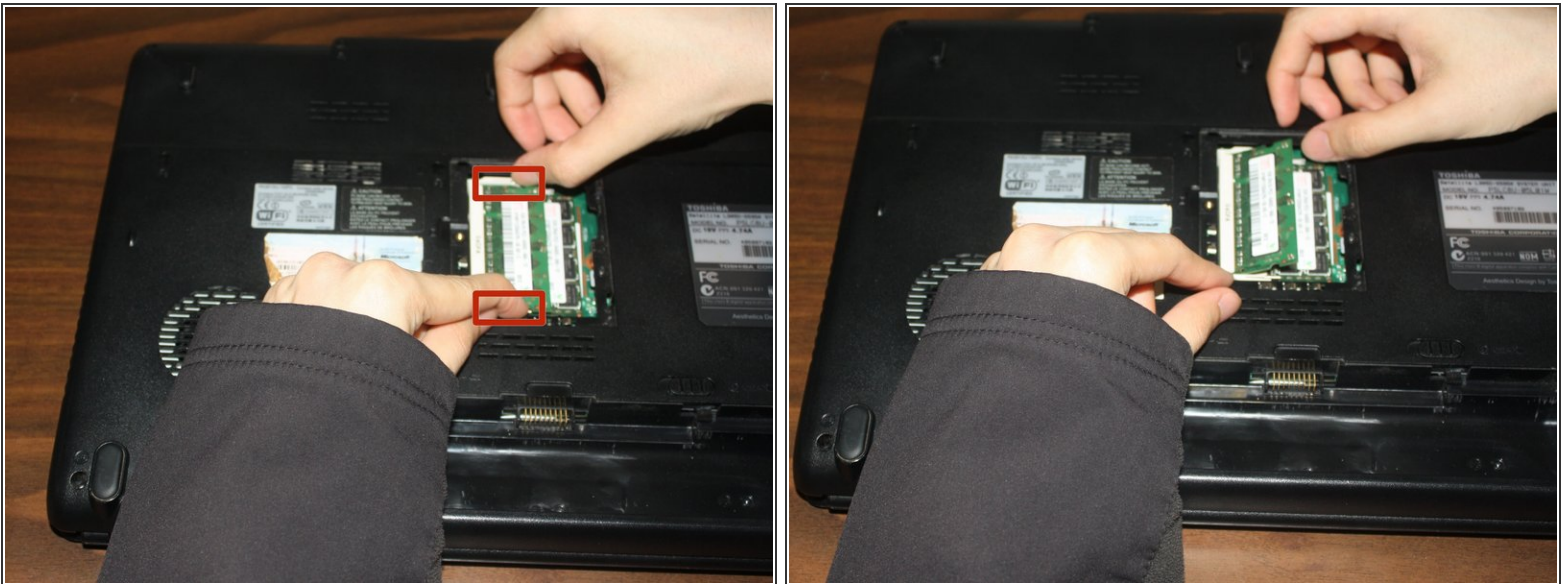


- Push the small levers at the sides of the RAM module away from each other. The RAM module should automatically rotate upwards.

Step 7

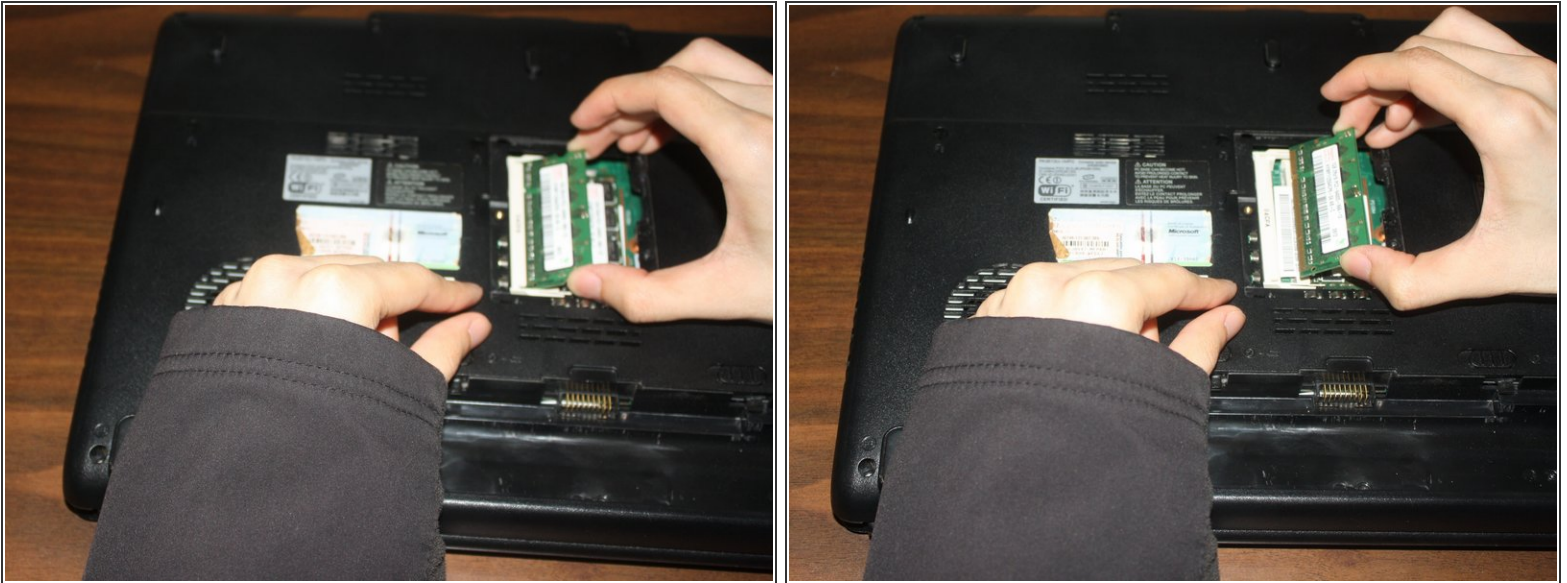

- Remove the RAM module by pulling it out at the angle it was rotated to.

Step 8

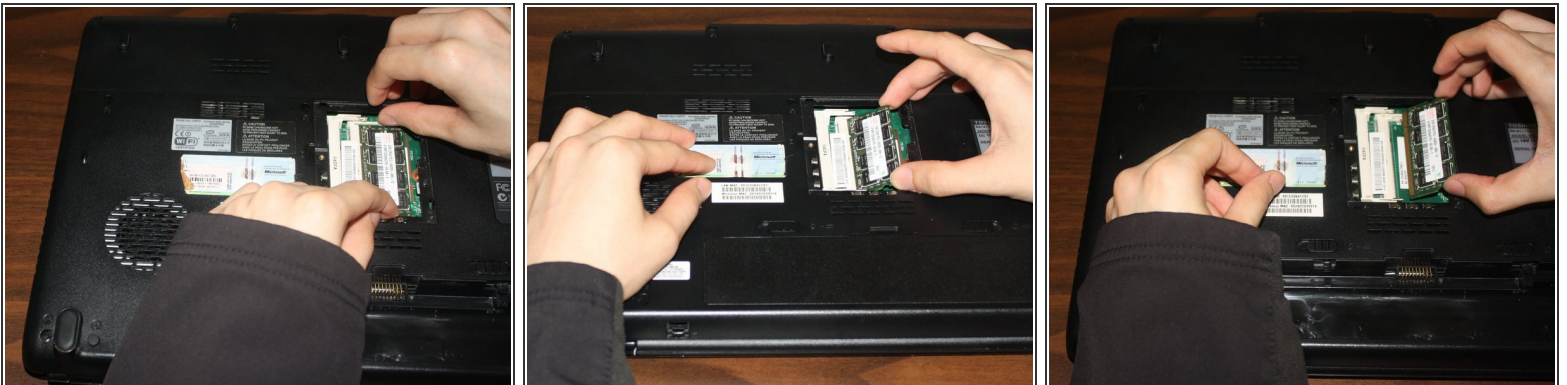

- If you want to replace the second RAM module, apply steps 2 and 3 to do so.

To reassemble your device, follow these instructions in reverse order. When placing the RAM chips in, push them down until the levers snap into place after inserting them into the slot.