



# Removing Front Panel/ Screen Logic Board

Written By: Cecilia



---

## INTRODUCTION

Removing front panel to replace main LCD or small display screen.

---

### **TOOLS:**

- [T6 Torx Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Front panel/ Screen Logic Board



- Using the plastic opening tool, pry off the top faceplate.
- Place the tool in the small crack that runs along the side of the phone and pry.

## Step 2



- Using the T6 Torx Screwdriver remove all 4 small screws.

 


### Step 3




- Remove silver plate from phone.

### Step 4

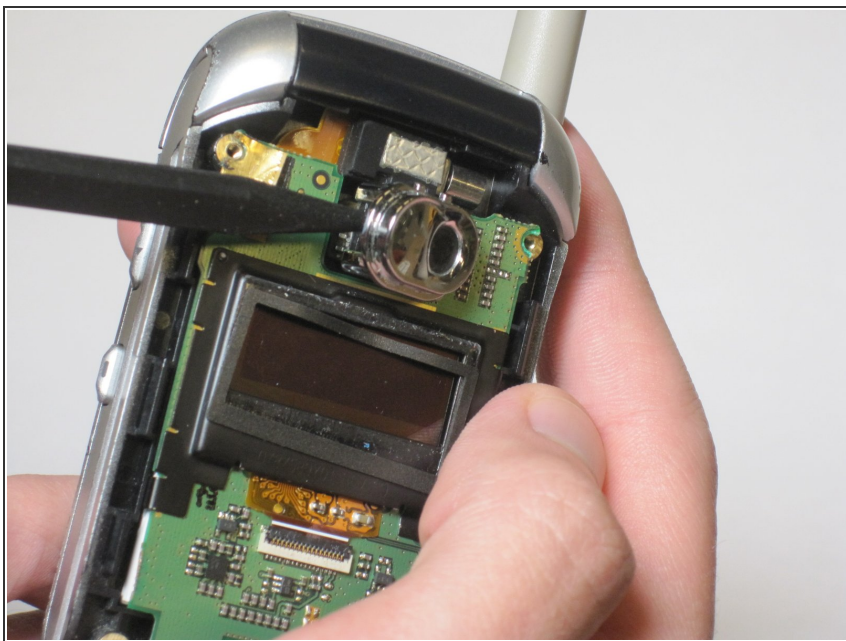

- Using the spudger remove the plastic camera casing

## Step 5

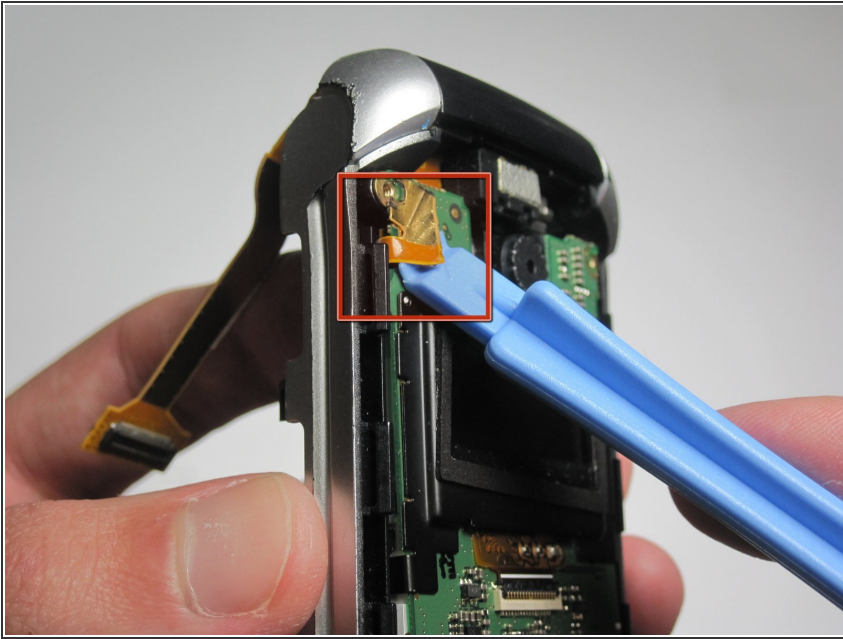 

- Using the iPod Opening Tool remove the yellow flex cable from the green logic board.

## Step 6



- Use Spudger or hands to detach flex cable from front screen logic board

To reassemble your device, follow these instructions in reverse order.