



TomTom ONE Front Cover Replacement

The front cover can get chipped or scratched...

Written By: Trevor Foster



INTRODUCTION

The front cover can get chipped or scratched. In this case it should be replaced.

TOOLS:

Spudger (1)

TR7 Torx Security Screwdriver (1)

TR9 Torx Security Screwdriver (1)

Step 1 — Screen



- Use a T-9 Torx screwdriver to unscrew the four screws on the back cover.

Step 2




- Using the spudger, gently pry apart the back case from the front case. It is easier to start on a side and work your way around the device.

Step 3




⚠ Carefully pull the back cover apart from the front cover. Be careful not to pull too hard because there are two sets of wires connecting the device.

Step 4

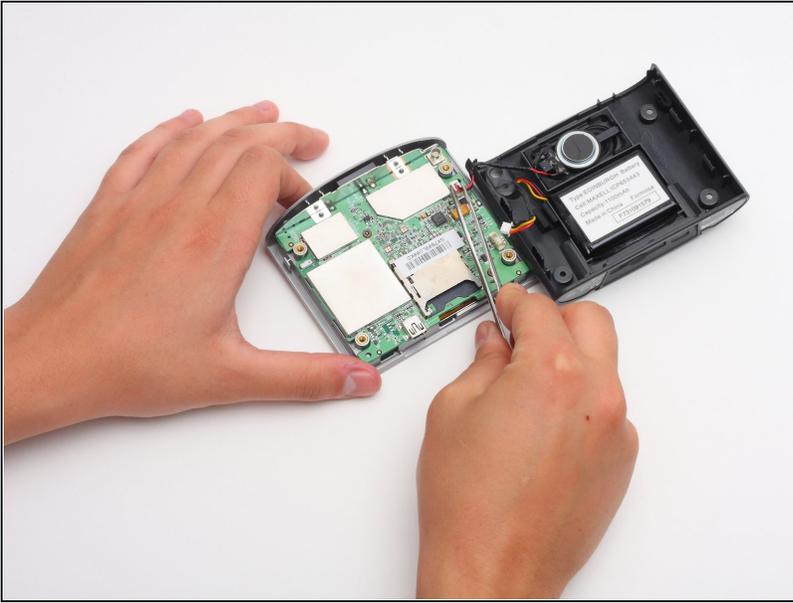



- Once the two covers are separated, use the [tweezers](#), or even your fingers, to gently disconnect the two sets of wires that are connected to the motherboard from the back cover. You may have to wiggle the wires a little bit to get them to disconnect.

Step 5

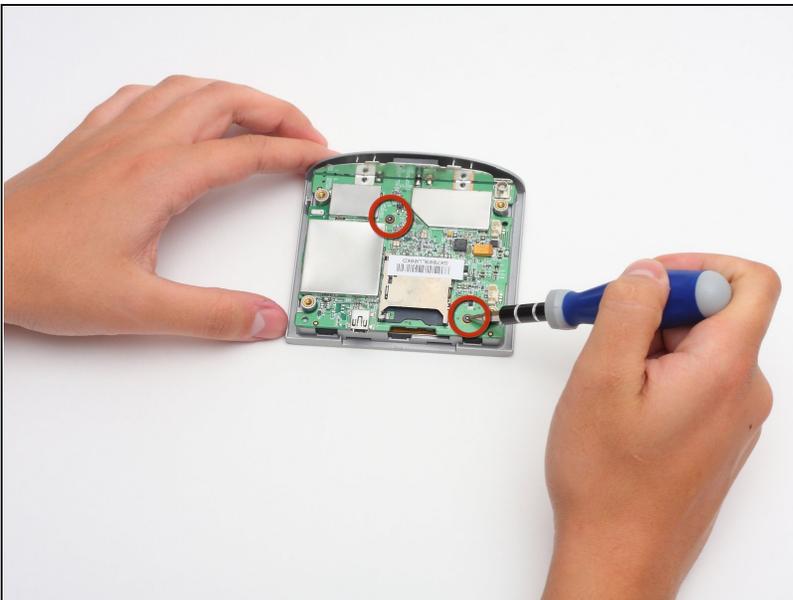

- Next, you must remove the motherboard from the front screen.
- Use a Torx T-7 screwdriver to unscrew the two screws.

Step 6

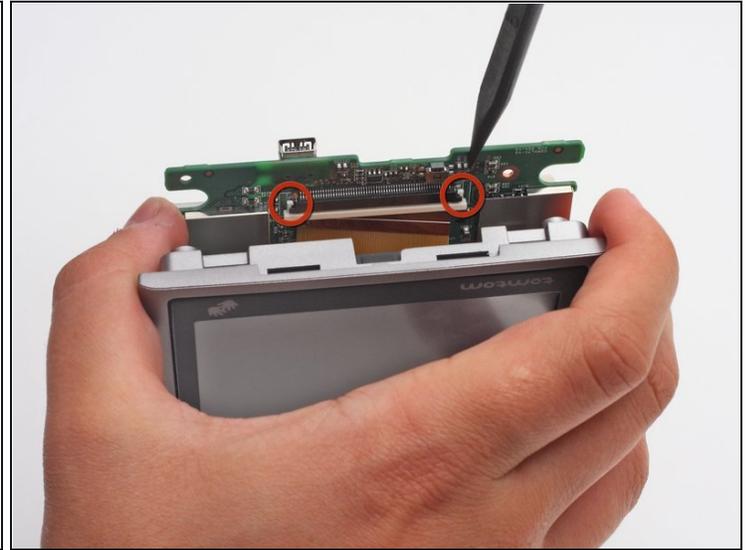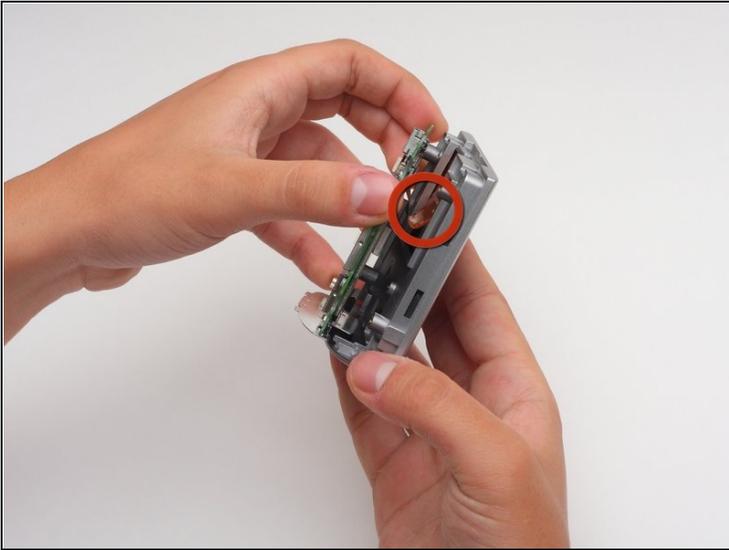

- Before you can separate the motherboard from the front cover, you must disconnect the wire connecting the two.
- To do so, you must use the back end of the spudger to push out the two white tabs connected to the wire, that holds the motherboard and front cover together.

Step 7



- Once separated, use the spudger to pry around the edges of the outer casing.

Step 8



- Apply pressure with thumbs to remove screen from inner casing.
- The screen and front cover are now disconnected.

To reassemble your device, follow these instructions in reverse order.