



LeapFrog LeapPad2 Explorer Back Cover Replacement

Use this guide in order to replace a damaged back cover.

Written By: Nupur Garg



INTRODUCTION

Whether your child has cracked the back cover or decided to cover it in make-up, learn how to replace the back cover.

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Battery



- Before disassembling your LeapPad, ensure your device is shut off.
- Push outward on the plastic side panels to remove and reveal battery.
- The panels should detach fully from the main device.

Step 2



- Push down from the positive end of the battery towards the negative end to pry the battery up out of its dispenser.
- Remove all four AA alkaline batteries from the device.

Step 3 — Back Cover



 This step will void your device warranty.

- Remove the following screws securing the back cover to the main device:
 - Two 10.0 mm Phillips screws
 - Four 4.0 mm Phillips screws
 - Three 3.0 mm Phillips screws

Step 4



- Insert a plastic opening tool into the seam between the front and rear covers to detach the back cover from the rest of the device.
 - Move the plastic opening tool around the perimeter of the LeapPad2.
 - Lift up and remove the rear case from the tablet.
-  A butter knife can help when prying the device.

To reassemble your device, follow these instructions in reverse order.