



# Nikon D5000 Battery Door Replacement

Remove the battery door from the Nikon D5000.

Written By: Jacob Rardin



## INTRODUCTION

Removing the battery door makes it easier to clean up after a battery leak or unscrew the bottom panel. It is also necessary for the installation of certain accessories.

## Step 1 — Battery Door



- On the bottom of the camera, pull the release tab towards the center of the camera, then pull up.

## Step 2



- Grip and hold the front end of the battery door at a 45-degree angle from the case.
  - Pop the battery door out by pulling the front tab up.
- ☞ When reassembling, seat the rear tab in its slot before pushing the front tab back in.

To reassemble your device, follow these instructions in reverse order.