




# Lenovo IdeaPad N586 Memory Replacement

Lenovo IdeaPad N586 memory replacement

Written By: Christopher

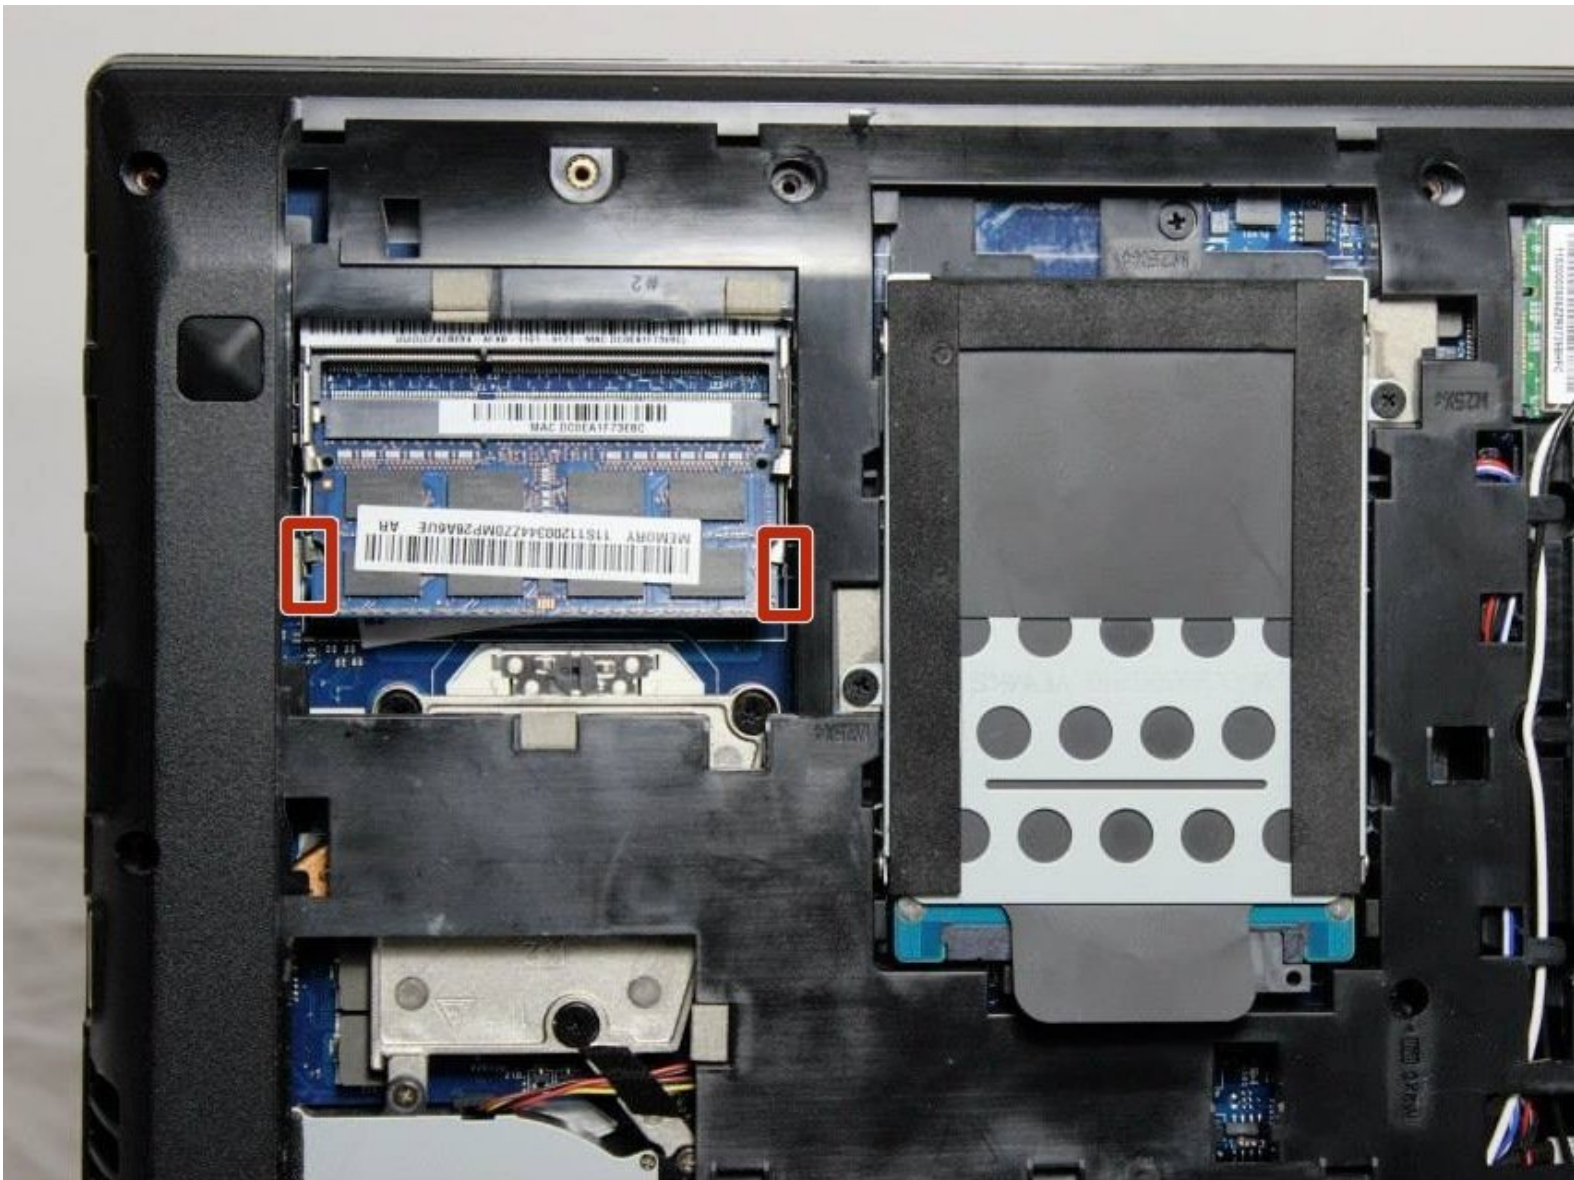



## TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

## Step 1 — Battery



- To unlock the battery, flip the laptop over so that the bottom is facing upward. Then unlock the left clip by pushing the clip to the left.

## Step 2



- Now push the right clip to the right and hold it while using your other hand to pull the battery out.




## Step 3 — Back Panel





- Remove the two screws highlighted.

## Step 4

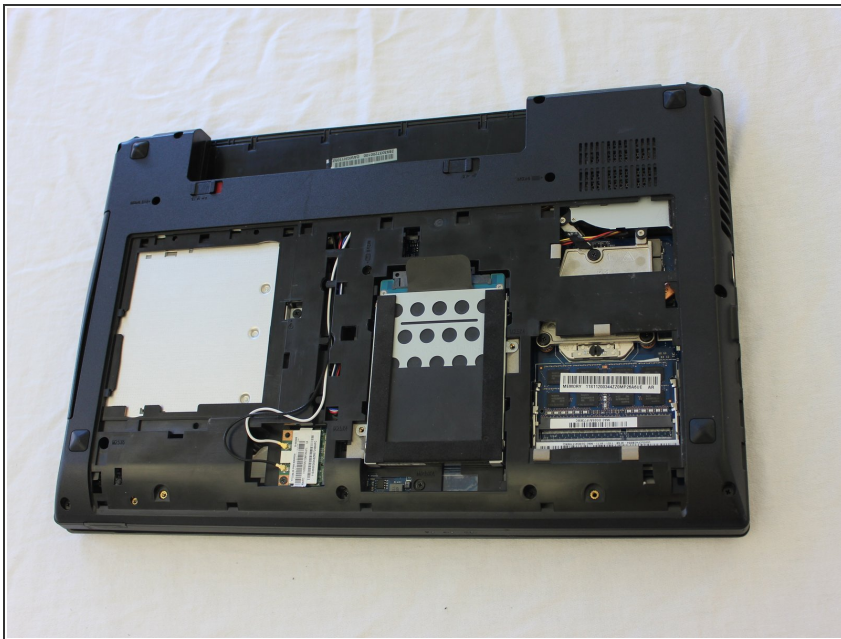


- This is the back of the laptop with the cover removed.

## Step 5 — Memory

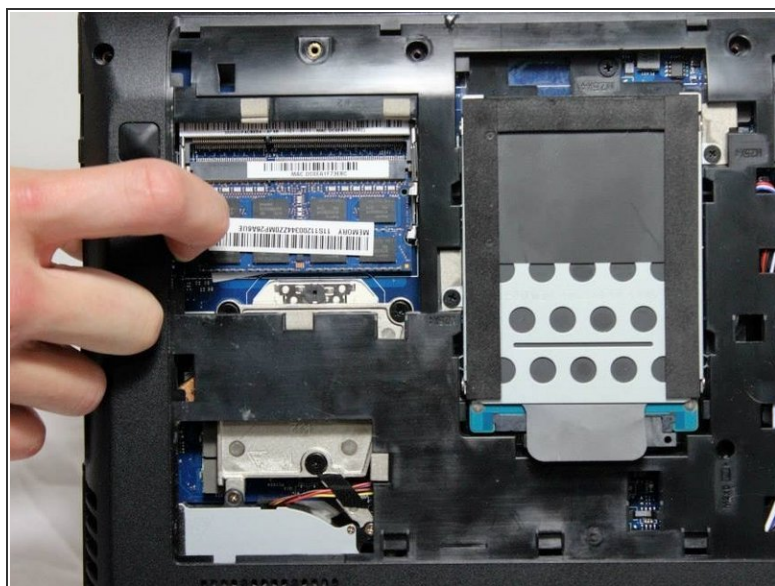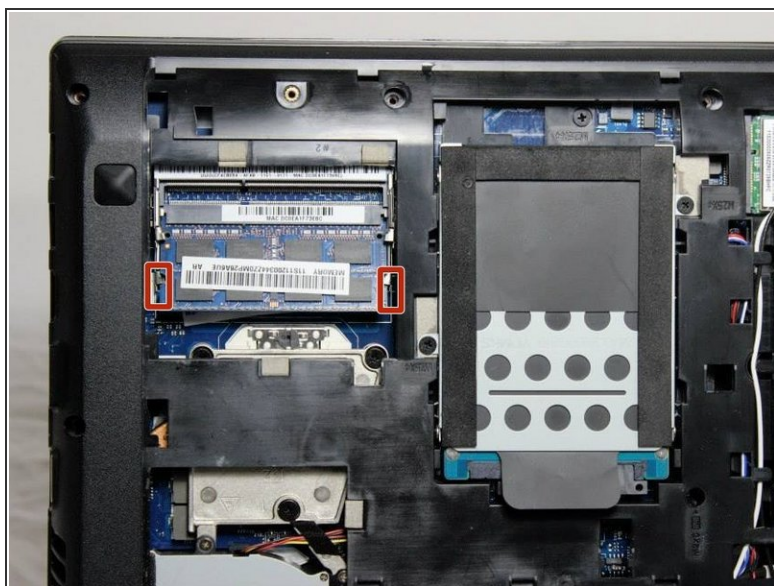

- Now push the little clips out away from the memory to unlock the memory.

## Step 6

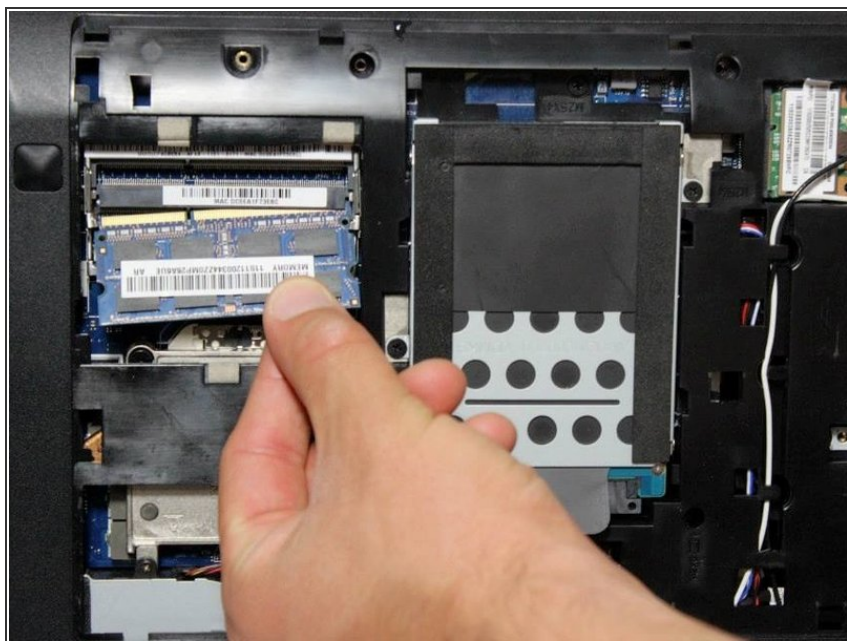

- After unlocking the memory from it's position, pull the memory out.

To reassemble your device, follow these instructions in reverse order.