


# Conair Infiniti Pro Model 259NP Heat Shield Replacement

This guide will show you how to replace the heat shield that protects your hair dryer's heating element.

Written By: Timothy Lo

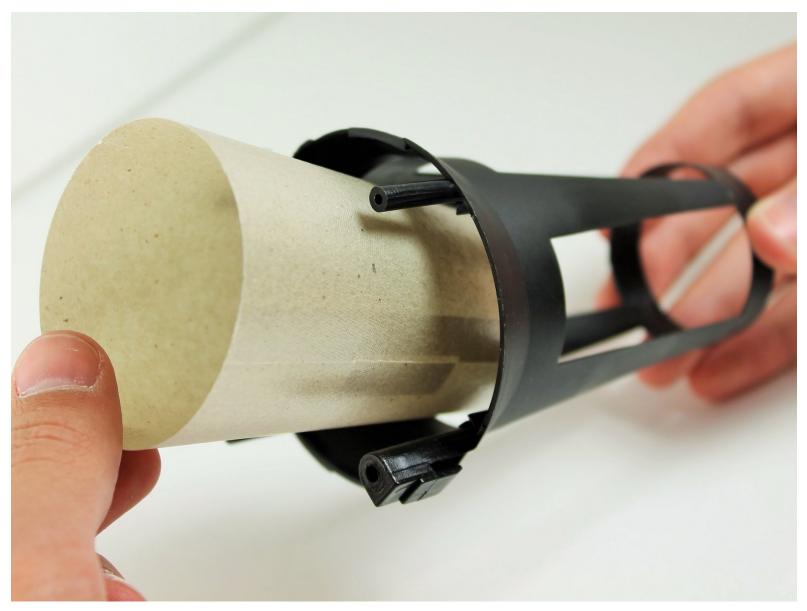

## INTRODUCTION

If your hair dryer's nozzle is overheating, this guide will show you how to replace the heat shield.

## **TOOLS:**

• Phillips #2 Screwdriver (1)

#### Step 1 — Back Panel



- Caution: Unplug the hair dryer before attempting this guide. Leaving the device plugged in may result in electrocution and damage to the device.
  - Hold the hair dryer by the handle so that the back panel faces up.

#### Step 2




• Remove the two 15.875 mm Phillips #2 screws from the back panel.

#### Step 3




- Starting from where the cord attaches to the handle, pull apart the two plastic panels.
- Continue separating the back panel, working along the seam.
- With moderate force, completely remove the back panel from the hair dryer.

#### Step 4 — Fan Motor Assembly

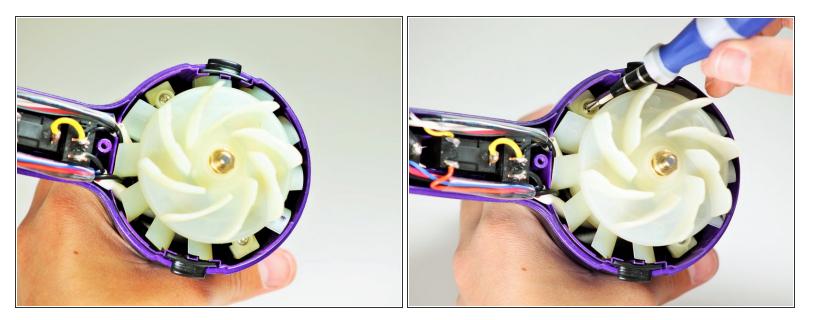

- Hold the hair dryer by the nozzle so that the handle points to the left.
- Remove the two 1-inch Phillips #2 screws from the back of the fan motor.


#### Step 5

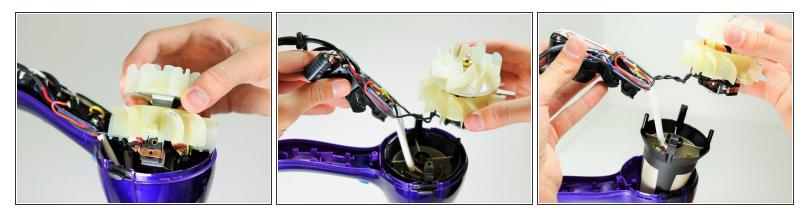

Caution: If you recently used the hair dryer, wait at least 10 minutes before attempting this step. The heating element may still be very hot and can cause serious burns.


- Pull on the back of the fan motor to gently lift the motor out of the hair dryer.
- Lift the attached electrical wiring and heat shield completely out of the hair dryer.

#### Step 6 — Heat Shield

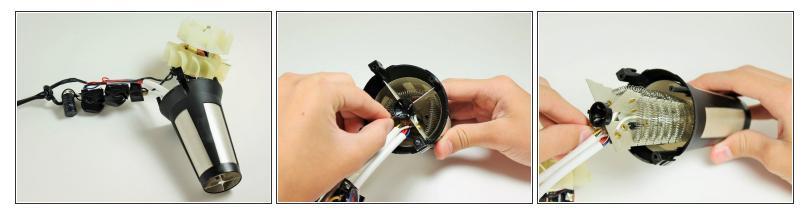

- If you recently used the hair dryer, the heating element may still be hot! Do not attempt this guide, you may severely burn yourself.
- Hold the heating element with the wider end facing upward.
- Gently pull the heating element out of the heat shield.

### Step 7

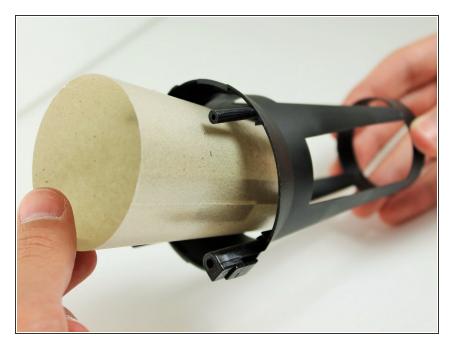

• Gently pull the heat shield out of its sheath.

To reassemble your device, follow these instructions in reverse order.