




# Kodak EasyShare C713 Battery Door Replacement

Written By: Trevor DeVore

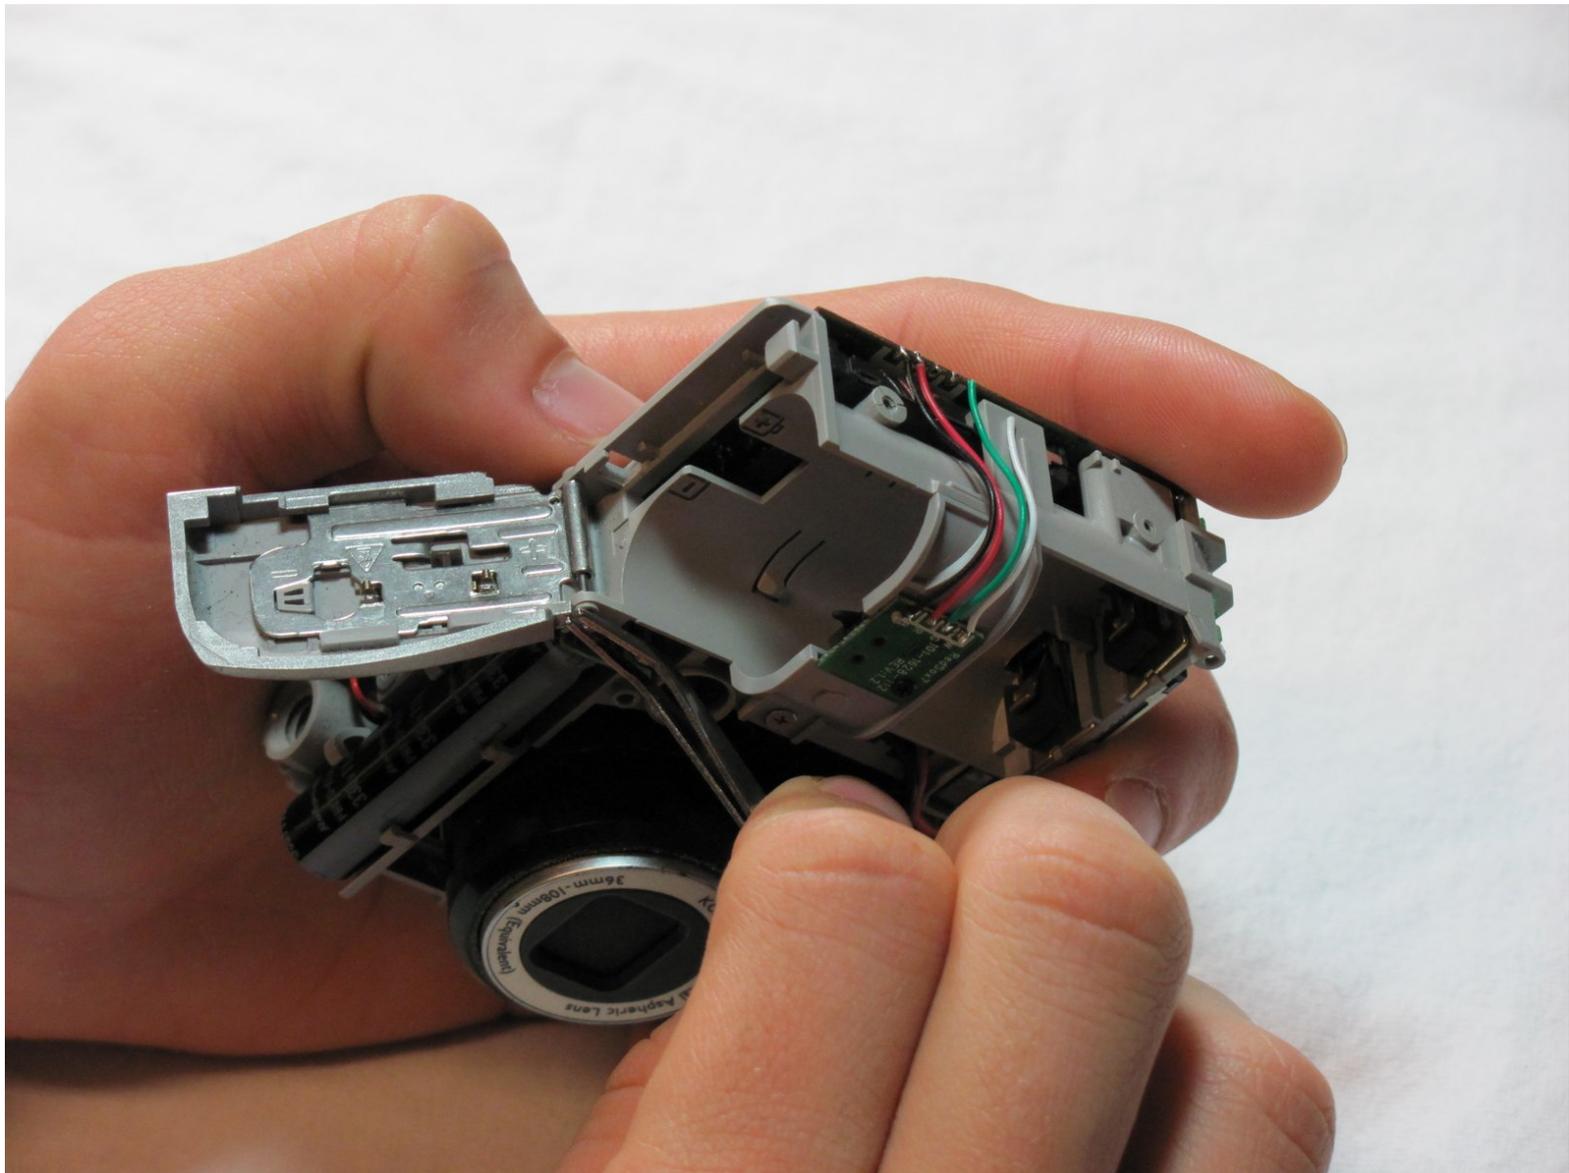

---

## INTRODUCTION

Use this guide to remove and replace the battery door.

---

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
  - [Tweezers](#) (1)
-

## Step 1 — Batteries



- Use your finger tip to slide battery cover door away from the center of the camera.
- The battery door should spring open.
- If this does not happen, gently open the door lifting from the outer bottom side of the camera.

## Step 2




- Remove the old batteries.

## Step 3 — Outer Case





- Remove the seven screws from the outer case with a Phillips #00.
  - All screws are 4.45mm.
  - There are 2 screws on the port side.
  - There are 2 screws on starboard side.
  - There are 3 screws on the bottom.

## Step 4

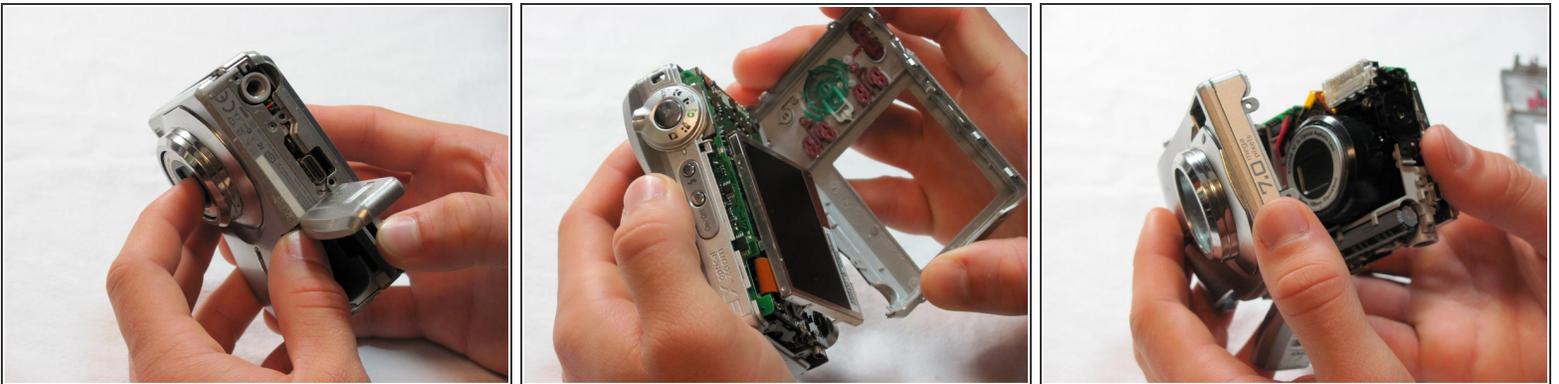

- ⚠ Make sure the battery cap is "up".
  - Pull the outer case off with your hands.

## Step 5 — Battery Door

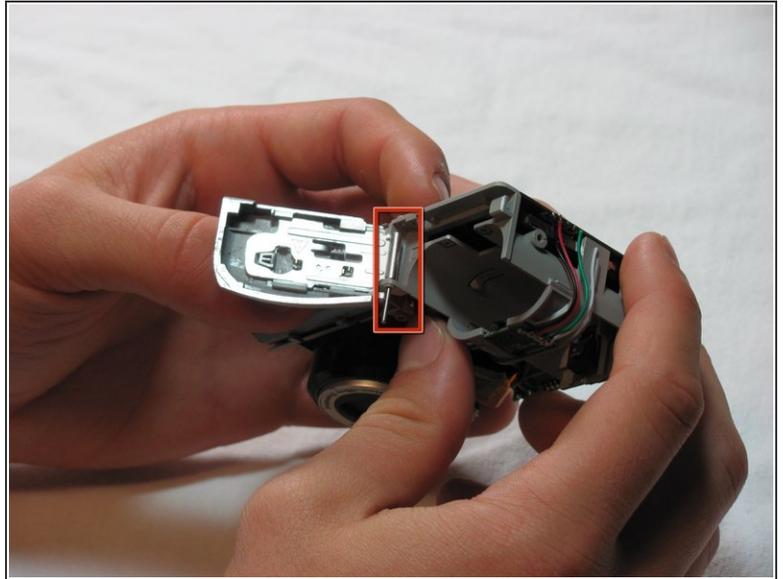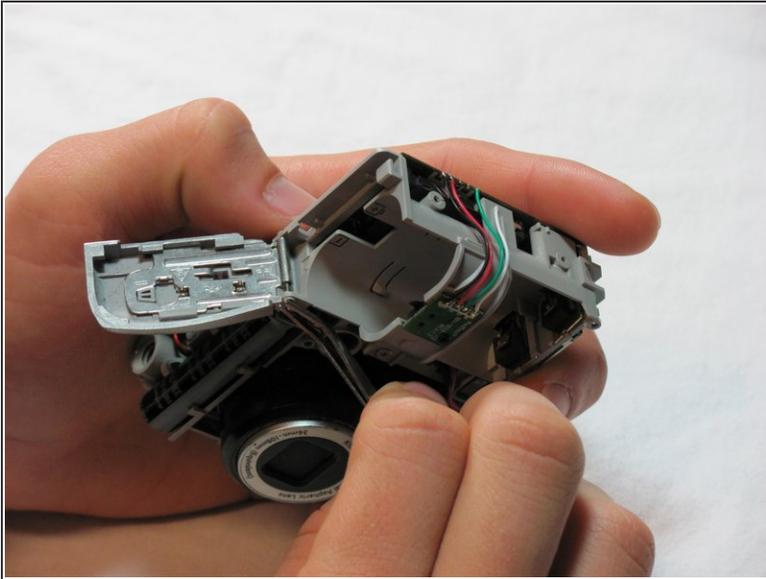

- Make sure the battery door is open.
- Using a pair of tweezers, remove the metal rod at the junction of the battery door and the inner camera case.
  - ⓘ This rod serves as the hinge for the door.
  - ⚠ Make sure not to lose the battery door spring which may fall when the rod is removed.

To reassemble your device, follow these instructions in reverse order.