



Panasonic Toughbook CF-29 Battery Replacement

Written By: Clint Kirsop



INTRODUCTION

This guide will show where to find, and how to remove the battery.

PARTS:

- [Panasonic Toughbook CF-28 Compatible Battery](#) (1)
-

Step 1 — Battery



- Locate the bay door for the battery on the left side of the laptop.

Step 2



- Slide the latch to the right and then down to unlock it.
- Pull out the battery.

To reassemble your device, follow these instructions in reverse order.