 


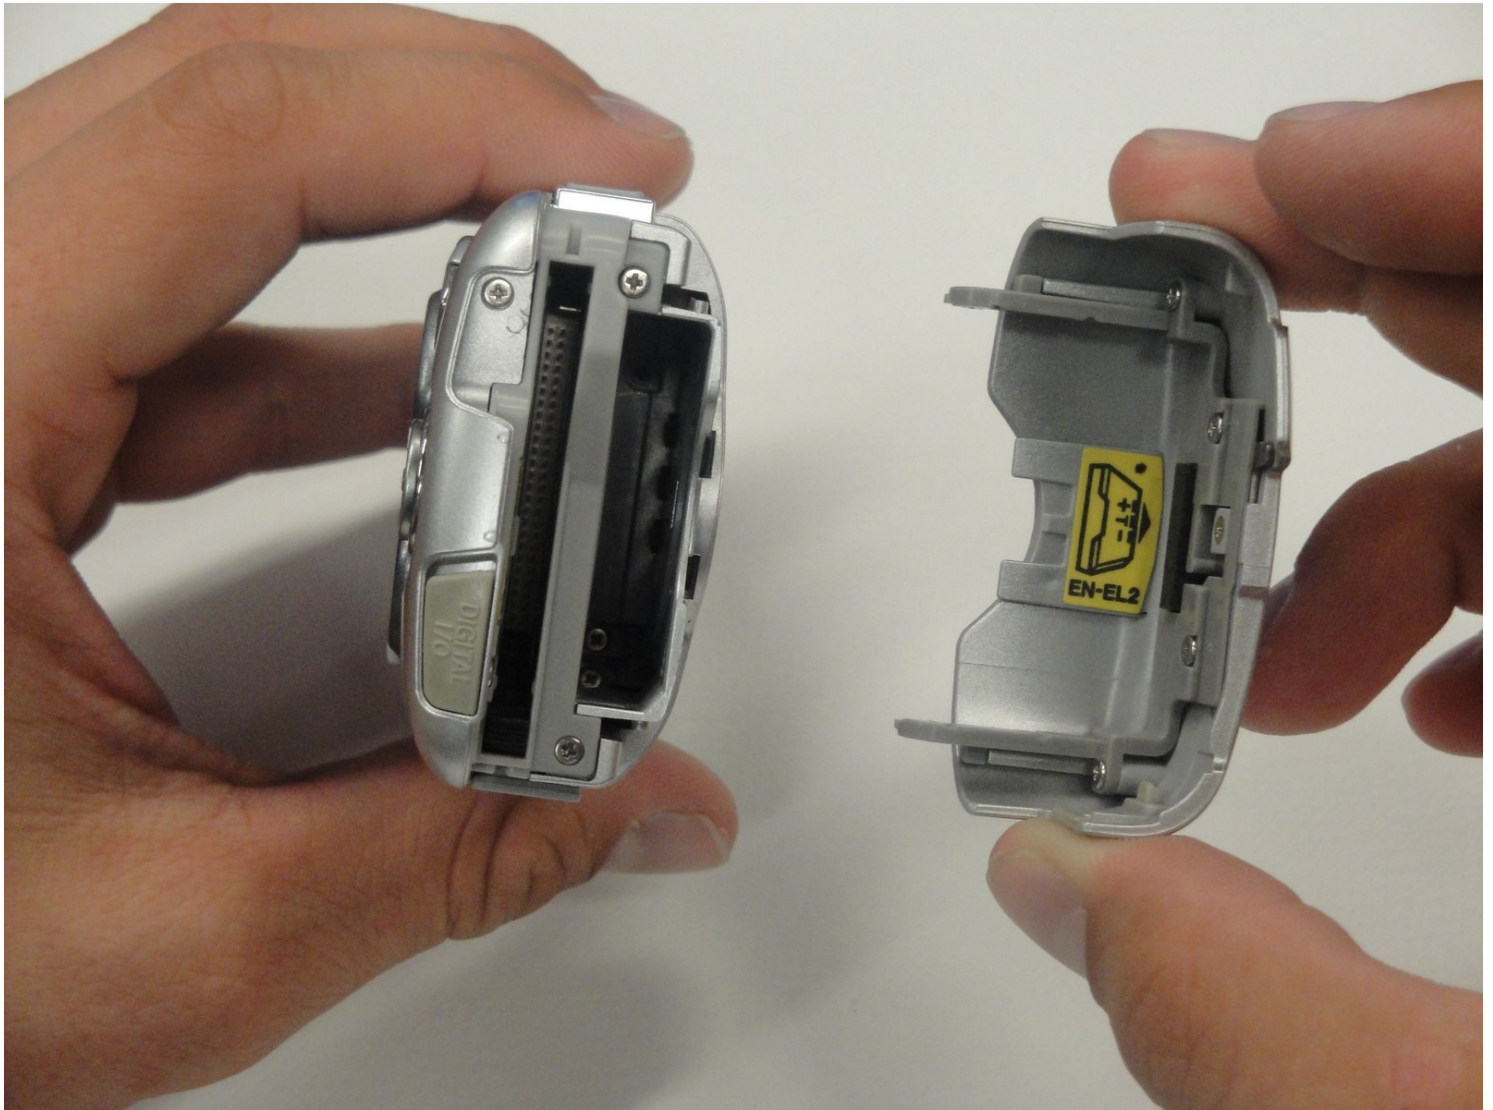

Nikon Coolpix 3500 Battery Replacement

Replacing the battery of a Nikon Coolpix 3500

 
Written By: richard guenther



INTRODUCTION

Replacing the battery of a Nikon Coolpix 3500

Step 1 — Battery

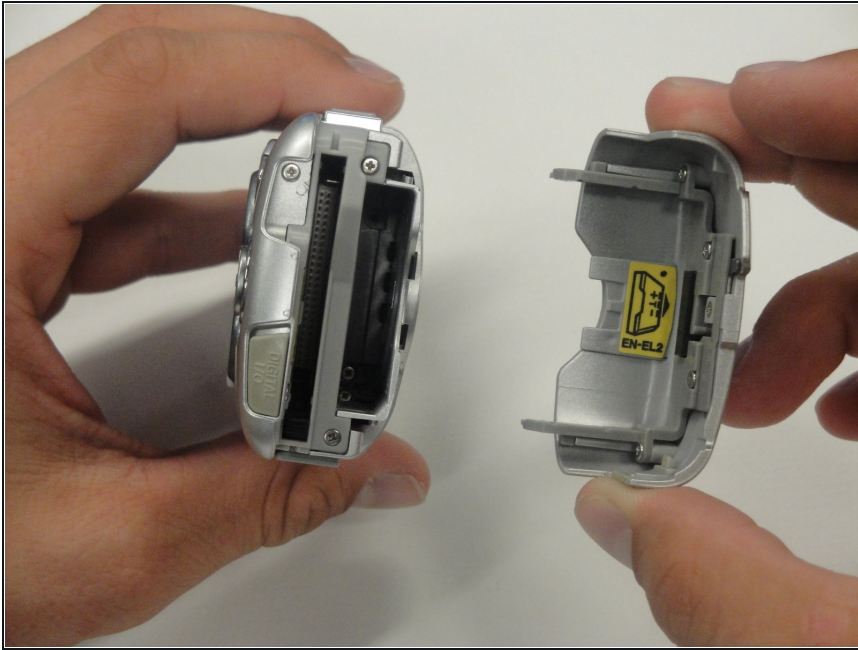

- Unlatch the battery cover and slide the cover out. Place cover to the side, it will not be needed for the next few steps.
- Remove the battery.
- Remove the battery cover without using excessive force. Keep in mind this cover is fragile.

To reassemble your device, follow these instructions in reverse order.