

Disassembling Nokia 3560 LCD Display

Written By: Sam Ryan




INTRODUCTION

This guide will show you how to remove the LCD Display from the Nokia 3560.

TOOLS:64 Bit Driver Kit (1)

Step 1 — Back Cover

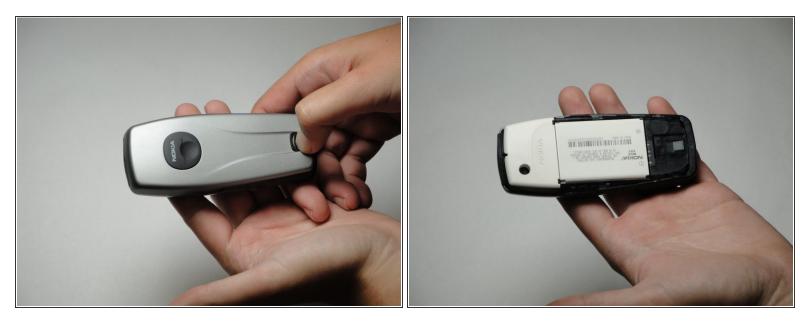


- Press down on the release latch on the bottom of the cover.
- Once the latch is released, lift the cover from the phone.



Step 2 — Disassembling Nokia 3560 Keypad

• Lift the front case off of the phone body.

Step 3

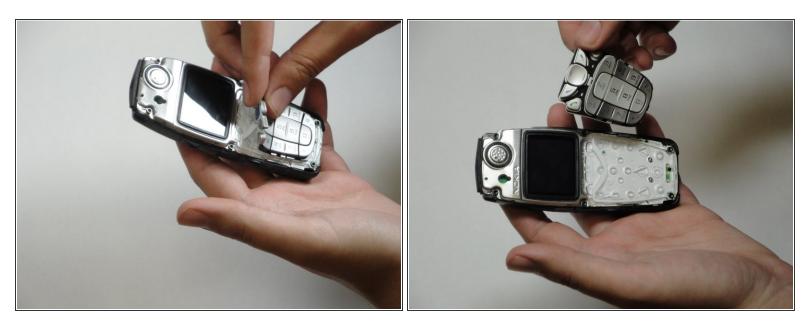

• Lift the keypad off of the phone.

Step 4 — Disassembling Nokia 3560 LCD Display




The screen is held to the body by six screws.

Step 5




 Unscrew the six screws with a Torx screwdriver (six-pointed star shaped bit).

Step 6

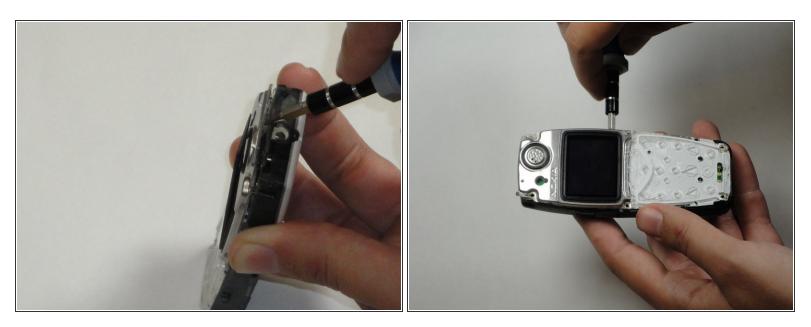

• Insert a flat screwdriver between the black body and plastic layer.

Step 7

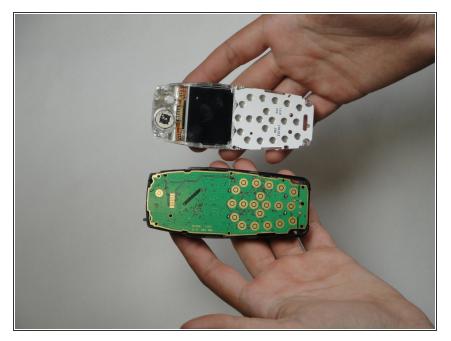

• Pry the layers apart. The LCD and plastic layer will lift out as one piece.

To reassemble your device, follow these instructions in reverse order.