

LG LX150 Screen Replacement

Use this guide to remove the LG LX150's sceen.

Written By: Tye Barba



INTRODUCTION

Use this guide to remove the LG LX150's sceen.



TOOLS:

Spudger (1)

Step 1 — Front Cover







- Use the spudger to pry out the indicated rubber squares.
- Use the #0 Phillips screwdriver to take out the revealed screws.

Step 2








- Carefully lodge the spudger between the face plate and the hinge mechanism.
- Gently pry the face plate until it releases from place holders.

Step 3 — Screen

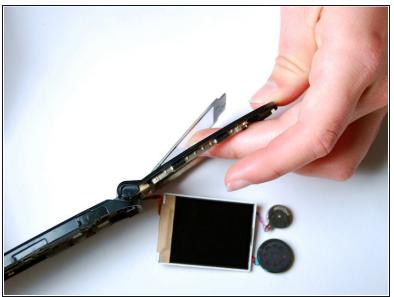



Apply even amounts of force upon removing screen, otherwise cracking may occur.

- Gently loosen the screen from its adhesive by pressing around the screen's rear perimeter with a spudger. Place upward pressure in crevices between face plate and screen.
- Carefully use both thumbs and apply pressure to the back of the screen to pop out.

To reassemble your device, follow these instructions in reverse order.