

Dell Optiplex 745 Ultra Small Form Factor CPU Replacement

Looking to replace your original CPU with...

Written By: donnavon



INTRODUCTION

Looking to replace your original CPU with faster yet compatible one? Or are you just replacing a faulty one? This guide will walk you through replacing your existing CPU with a newer one.

🖌 TOOLS:

Anti-Static Wrist Strap (1)

Step 1 — Side Panel



- Make sure to shut down the computer! Go to the start menu and click shutdown from the power options first
- Ensure all cables, speakers and other devices are unplugged and turned off before opening the computer case.

Step 2




- Lay the computer on its side; you will see a blue knob.
- Turn said knob 90 degrees counter clockwise.

Step 3




 While the knob is still turned, slide the panel case forward about 1/2 inch, and then lift the panel off the computer.

Step 4 — CPU Heat Sink

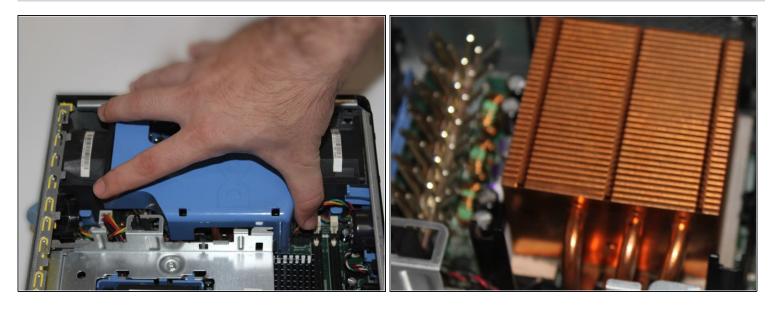

• Remove the blue shield by sliding it straight upwards.


Step 5

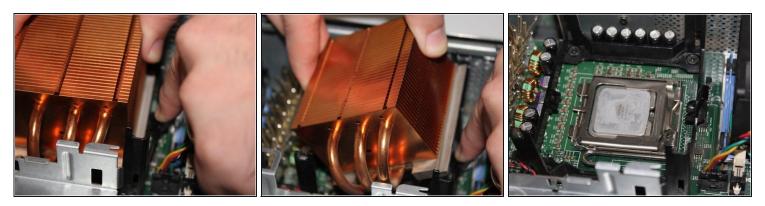

- Pull back on the tab nearest to the front case fan.
- Slide the CPU heat sink from under the clip and pull upward.

i You may need to twist the CPU heat sink side to side to free it from the thermal paste.

Step 6 — CPU

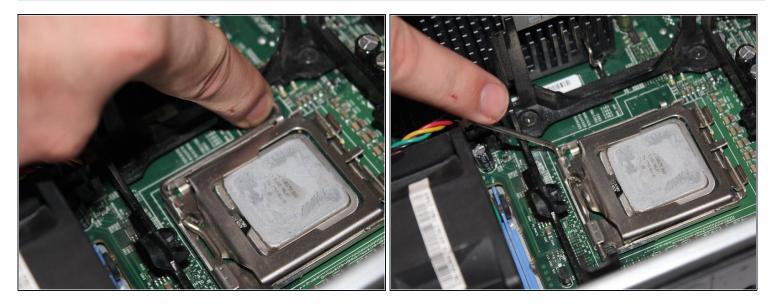

Ground yourself before removing any internal components.

• Push release lever down slightly and away from CPU.

Step 7



- Lift and rotate processor cover off of CPU.
- *i* Processor cover will remain attached.

Step 8



- Using two fingers holding the sides, lift the CPU from the socket.
- ▲ Do not touch the underside of the CPU or any of the pins.
- A When replacing the CPU, do not use excessive force.
- Ensure to use the alignmentnotches on the new CPU, when replacing.

To reassemble your device, follow these instructions in reverse order.