


Audiovox Tri-mode CDM-9000 Keypad Replacement

This guide will help assist you on how to replace the keypad on your Audiovox cell phone.

Written By: Summer Sines

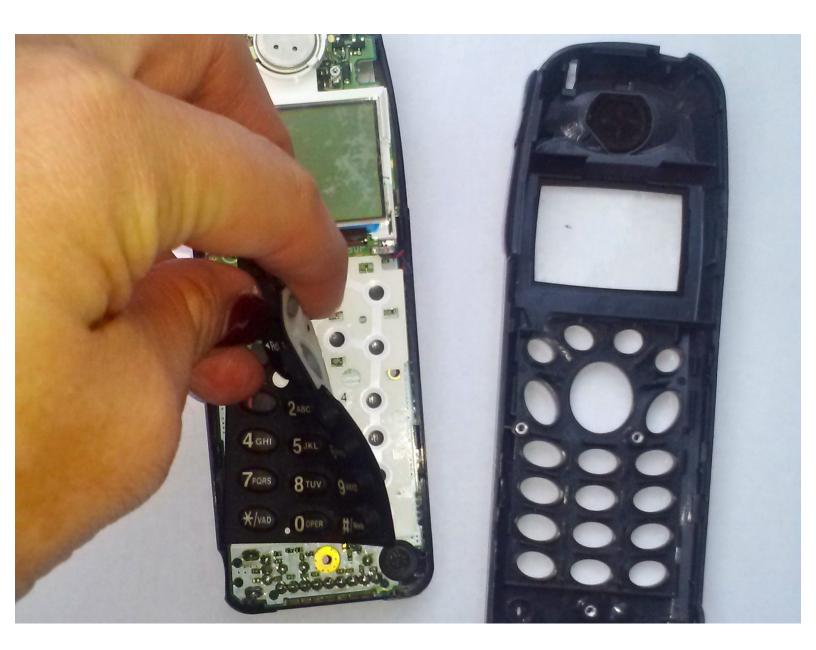

This document was generated on 2020-11-22 06:53:43 AM (MST).



- Phillips #00 Screwdriver (1)
- Spudger (1)

Step 1 — Keypad








Guide ID: 30549 - Draft: 2018-04-18

- Flip your phone over so the screen is facing down.
- About half way down there is a small button with a few groves. Push this button in an upward fashion. This will release the battery from the back of the cell phone.

Step 2



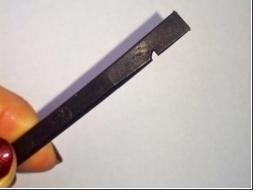



- Once the battery has been removed, you will need a small Phillips 60 mm screwdriver. Remove the two 1.2mm Phillips #1 screws on the back of the phone.
- Use a spudger tool to pry apart the phone. It may be a little difficult to pry open. Use the flat part of the spudger tool and go all around the phone. It will come apart.

Step 3







- Once you have the phone apart simply remove the key pad and replace it with the new one.
- Don't forget to put the screws back in. Place the battery back on the phone.
- Push the two parts of the phone back together. You will here a loud click when the phone is back together.

To reassemble your device, follow these instructions in reverse order.