


Samsung Galaxy Tab 3 8.0 Speakers Replacement

This step by step troubleshooting guide can be...

Written By: Kyle Ballard

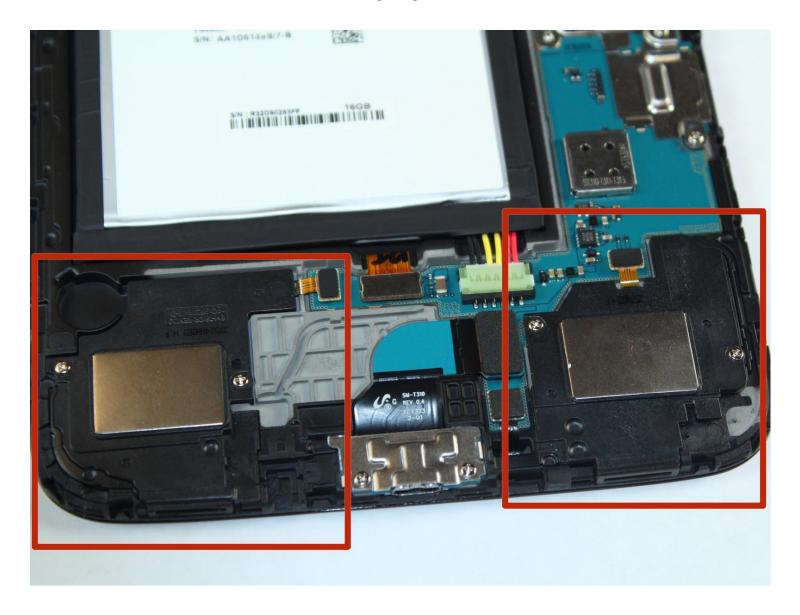

INTRODUCTION

This step by step troubleshooting guide can be used to resolve issues such as water damage, heat and/or excessive heat that may arise with the Samsung Galaxy Tab 3 8.0 Speakers.

Great caution must be taken when removing or replacing parts of the tablet as further damage can occur.




iFixit Opening Tool (1)
Tweezers (1)
Phillips #000 Screwdriver (1)

PARTS:

Samsung Galaxy Tab 3 8" Right Speaker (1)
Samsung Galaxy Tab 3 8" Left Speaker (1)


Step 1 — Battery - Open up the tablet

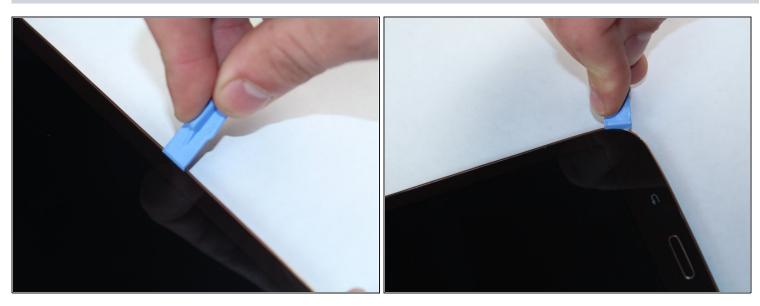

 Start out by separating the screen from the back cover using the larger plastic opening tool to pry them apart.


 \triangle Be careful when removing the screen as negligence can cause damage.

Step 2 — Remove Back Cover

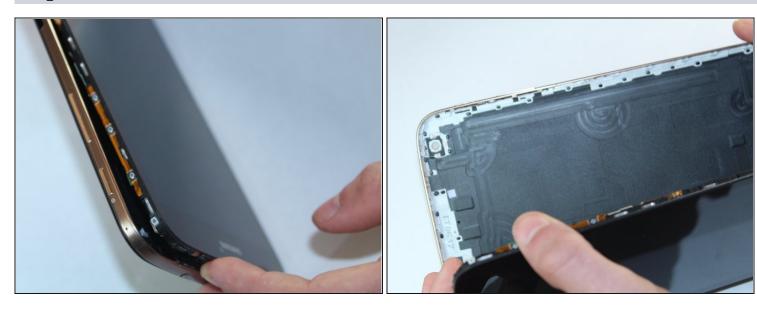

 Once every part of the screen is separated from the back cover, you should be able to fully remove it with your hands.

Step 3 — **Disconnect Battery**

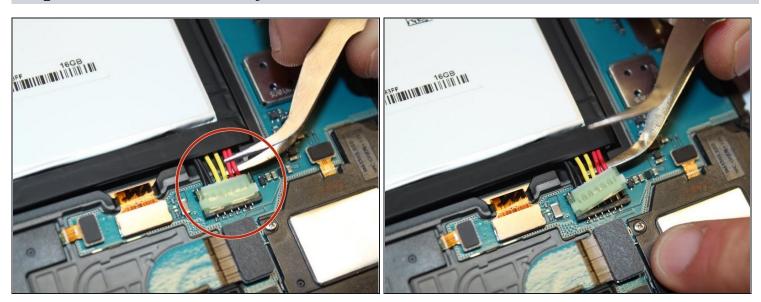

- To remove the battery you must use something small, such as <u>tweezers</u>, to disconnect the battery from its port.
- (i) Note: the connection lifts up to remove.

Step 4 — Remove Battery



 After the battery is disconnected, use the pulling tab to safely remove the battery.

Step 5 — Disconnect Speakers



• Disconnect the relays attached to the motherboard.

Step 6 — Unscrew Speakers



 Unscrew the 2.9mm screws from the speakers using a Phillips head #000 screwdriver, then lift the speakers from the device.

To reassemble your device, follow these instructions in reverse order.