




Disassembling Nerf Vortex Vigilon Inner Mechanism

Prerequisite only.

Written By: Cara Pew

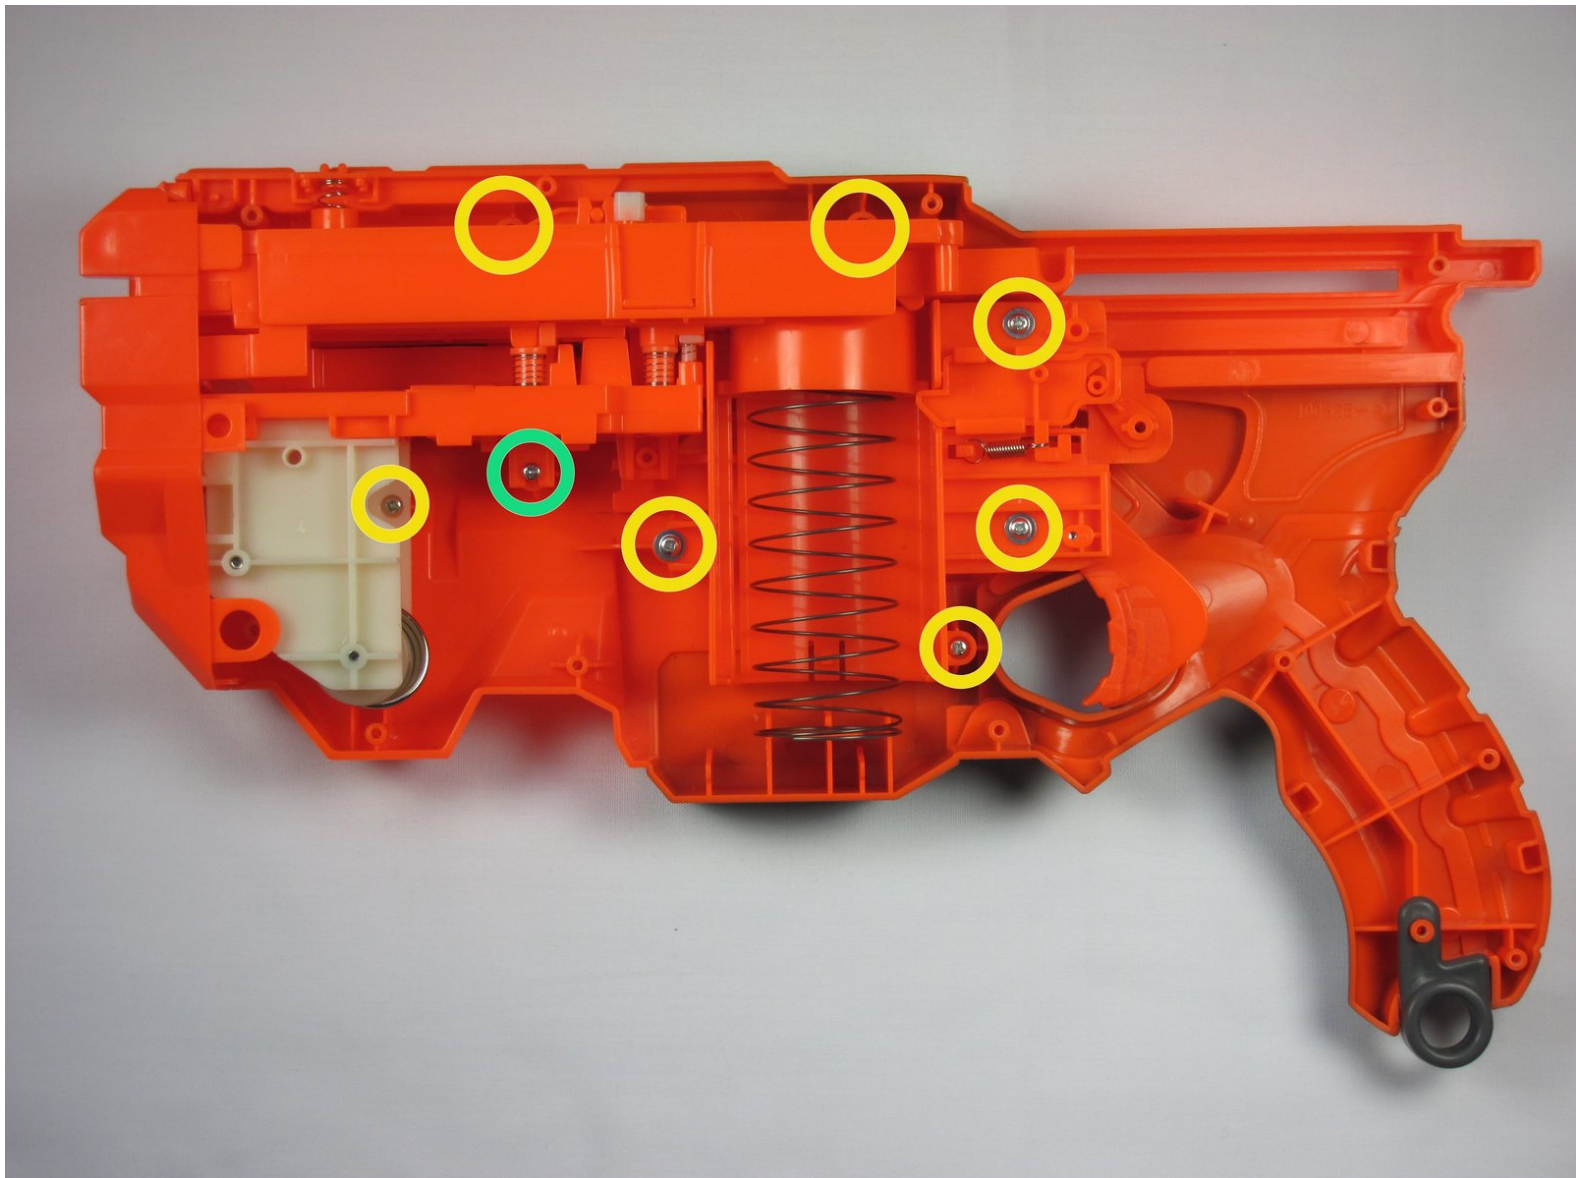




TOOLS:




- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Removing the inner mechanism's screws

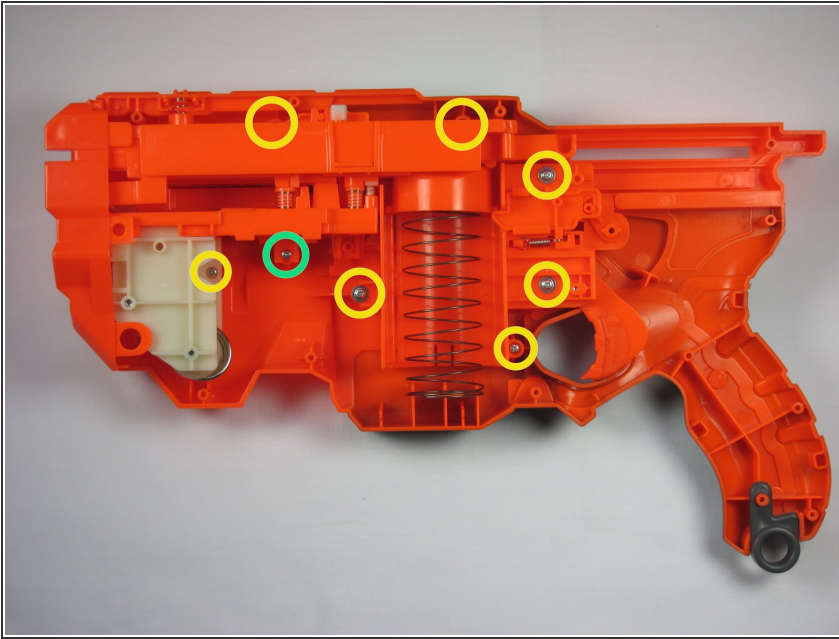

- Remove the seven #00 1 cm Phillips screws that attach the inner mechanism to the back cover.
- Remove the #00 1.2 cm Phillips screw located to the right of the white casing.

Step 2 — Removing the front cover

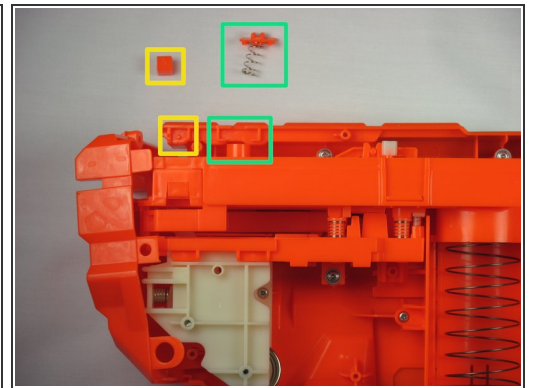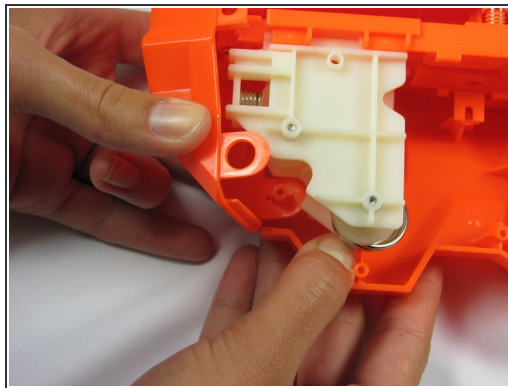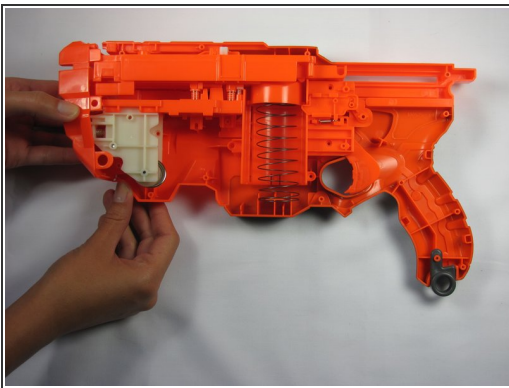


i An orange block will likely fall out as you remove the front cover. The clip and spring will fall out as well, if they have not already.

- Wiggle the front cover out from under the white piece and lift up from the gun.

i Pulling the cover off is tricky due to its inner fitting.

✦ Be sure to replace the orange block, spring, and clip before this step in reassembly.

Step 3 — Removing the inner mechanism

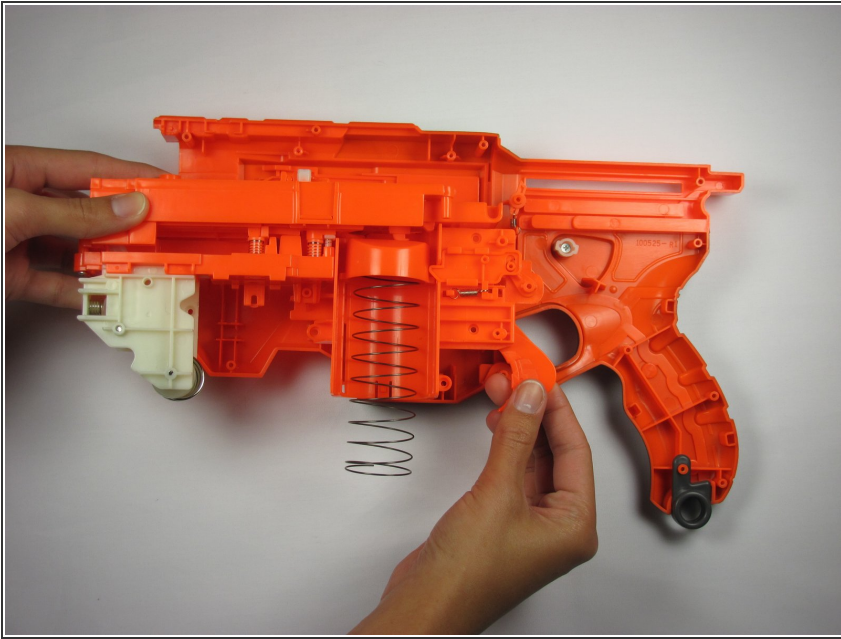

- ⓘ The spring, cap, and rotating lever will likely fall out as you remove the inner mechanism.
- Disconnect the inner mechanism from the outer cover by lifting the inner mechanism towards you.
- ★ Be sure to replace the spring, cap, and rotating lever before this step in reassembly.

To reassemble your device, follow these instructions in reverse order.