


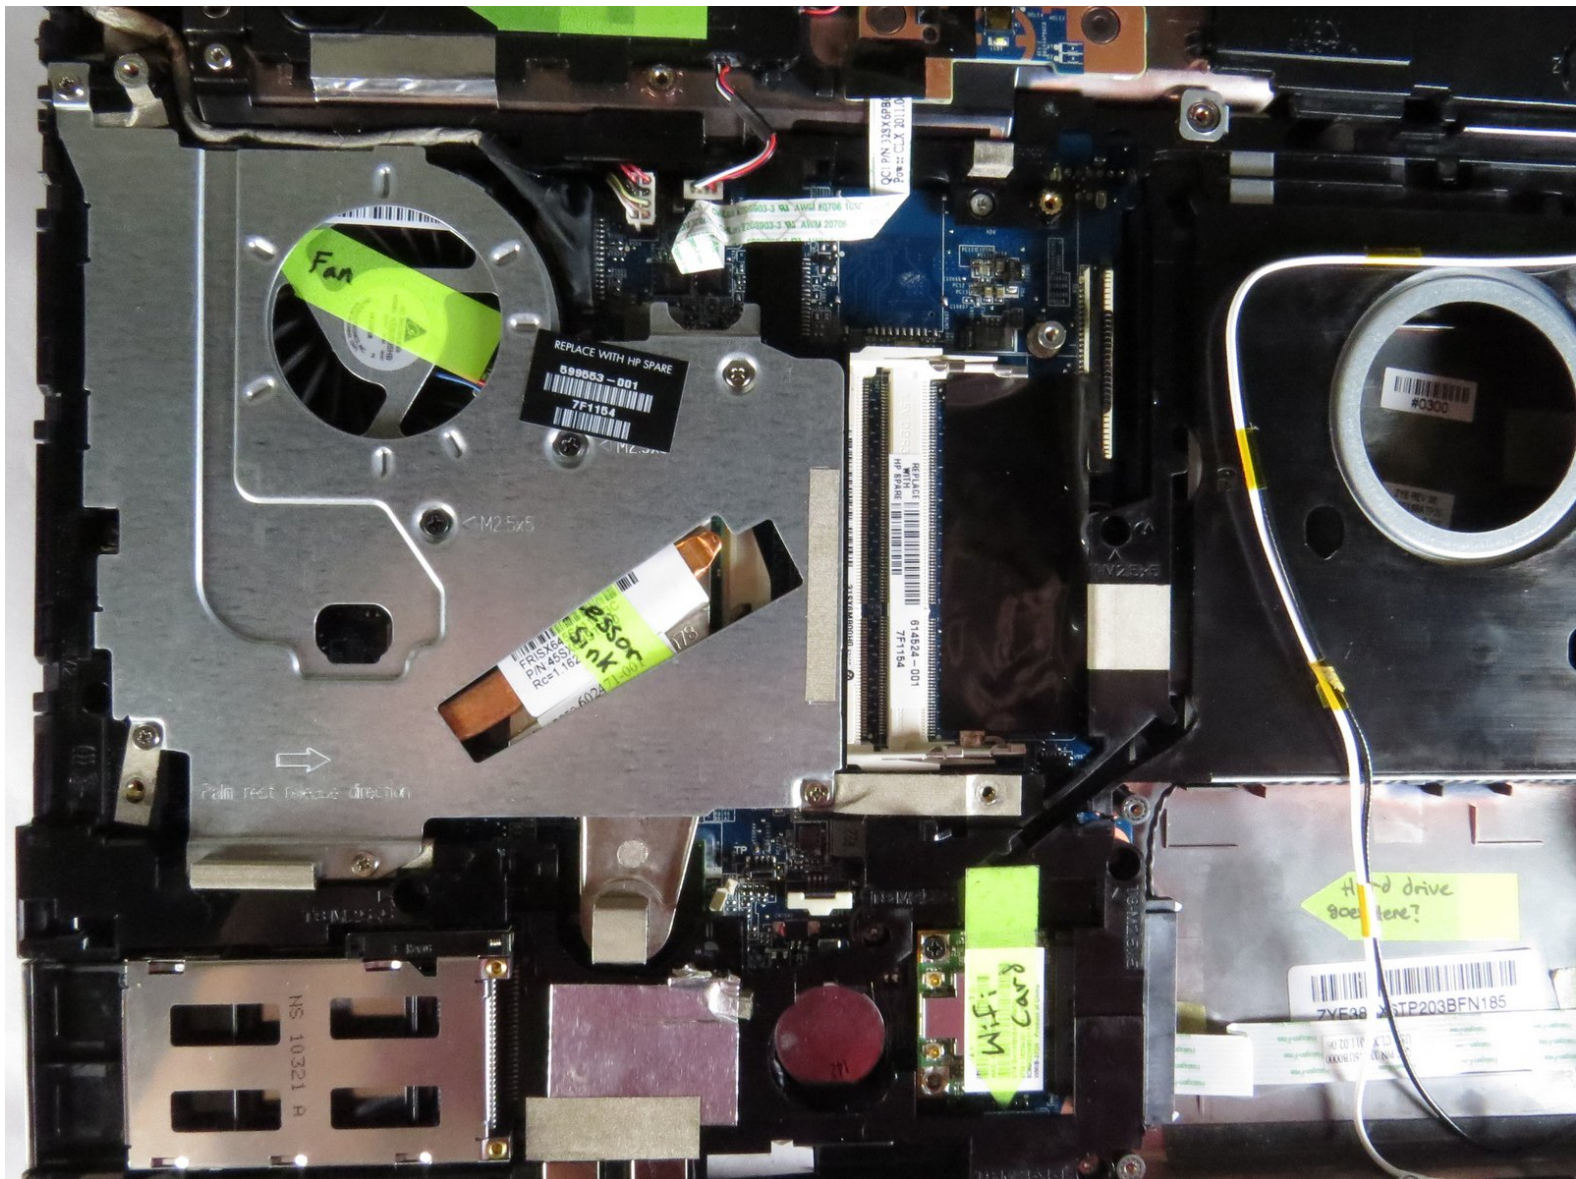

# HP ProBook 4320t Computer Fan Replacement Guide

If your computer is always over heating due to...

Written By: Eric Markham




## INTRODUCTION

If your computer is always over heating due to the fan not properly cooling down the internal components, then you may need to replace the fan. The fan allows for air circulation throughout the computer.




## Step 1 — Computer Fan

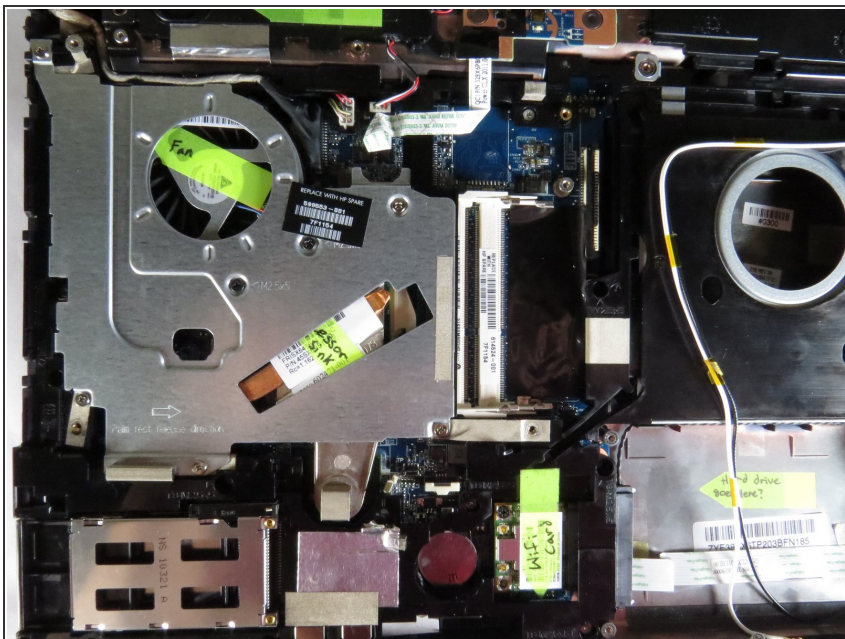

- Locate silver holding panel on the left side of the computer.

## Step 2

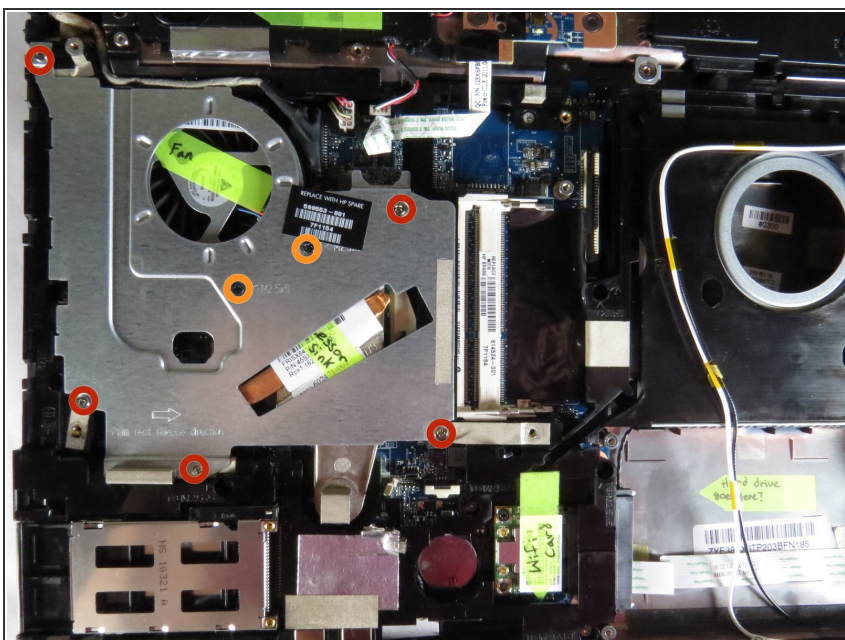


- Unscrew the five silver (2.5 mm Phillips) screws that are holding the panel in.
- Unscrew the two black (3.0 mm Phillips) screws that are holding the panel in.

## Step 3



- Remove holding panel and put aside.


## Step 4

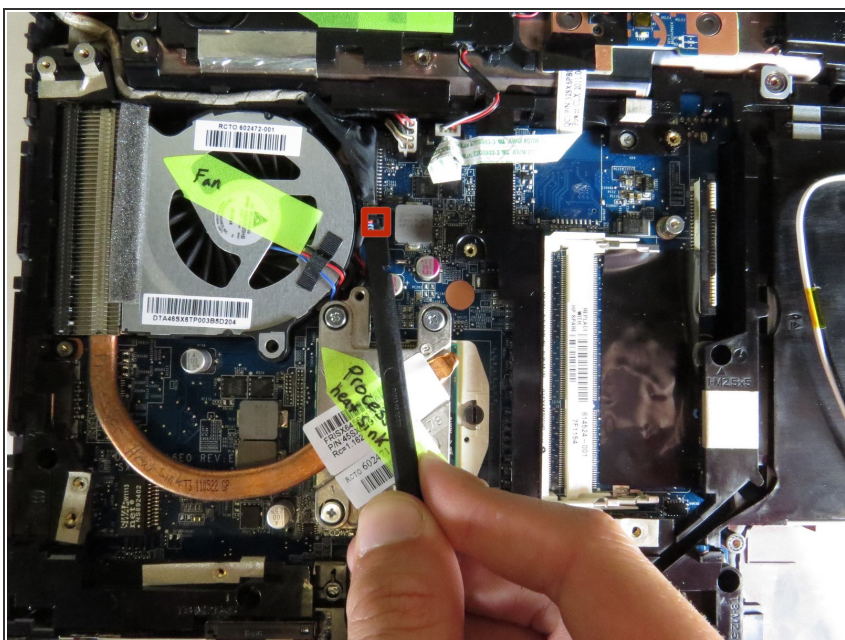

- Disconnect the red, black, and blue ribbon cable connector using the black spudger.



## Step 5

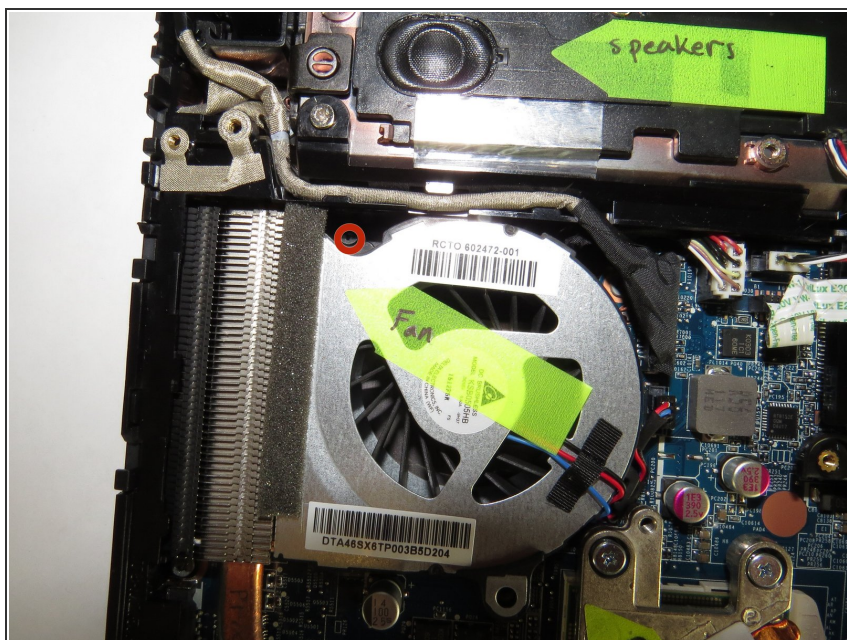

- Unscrew the one (2.0 mm Phillips) screw holding in the fan.

## Step 6



- Lift fan up carefully and replace.

To reassemble your device, follow these instructions in reverse order.