


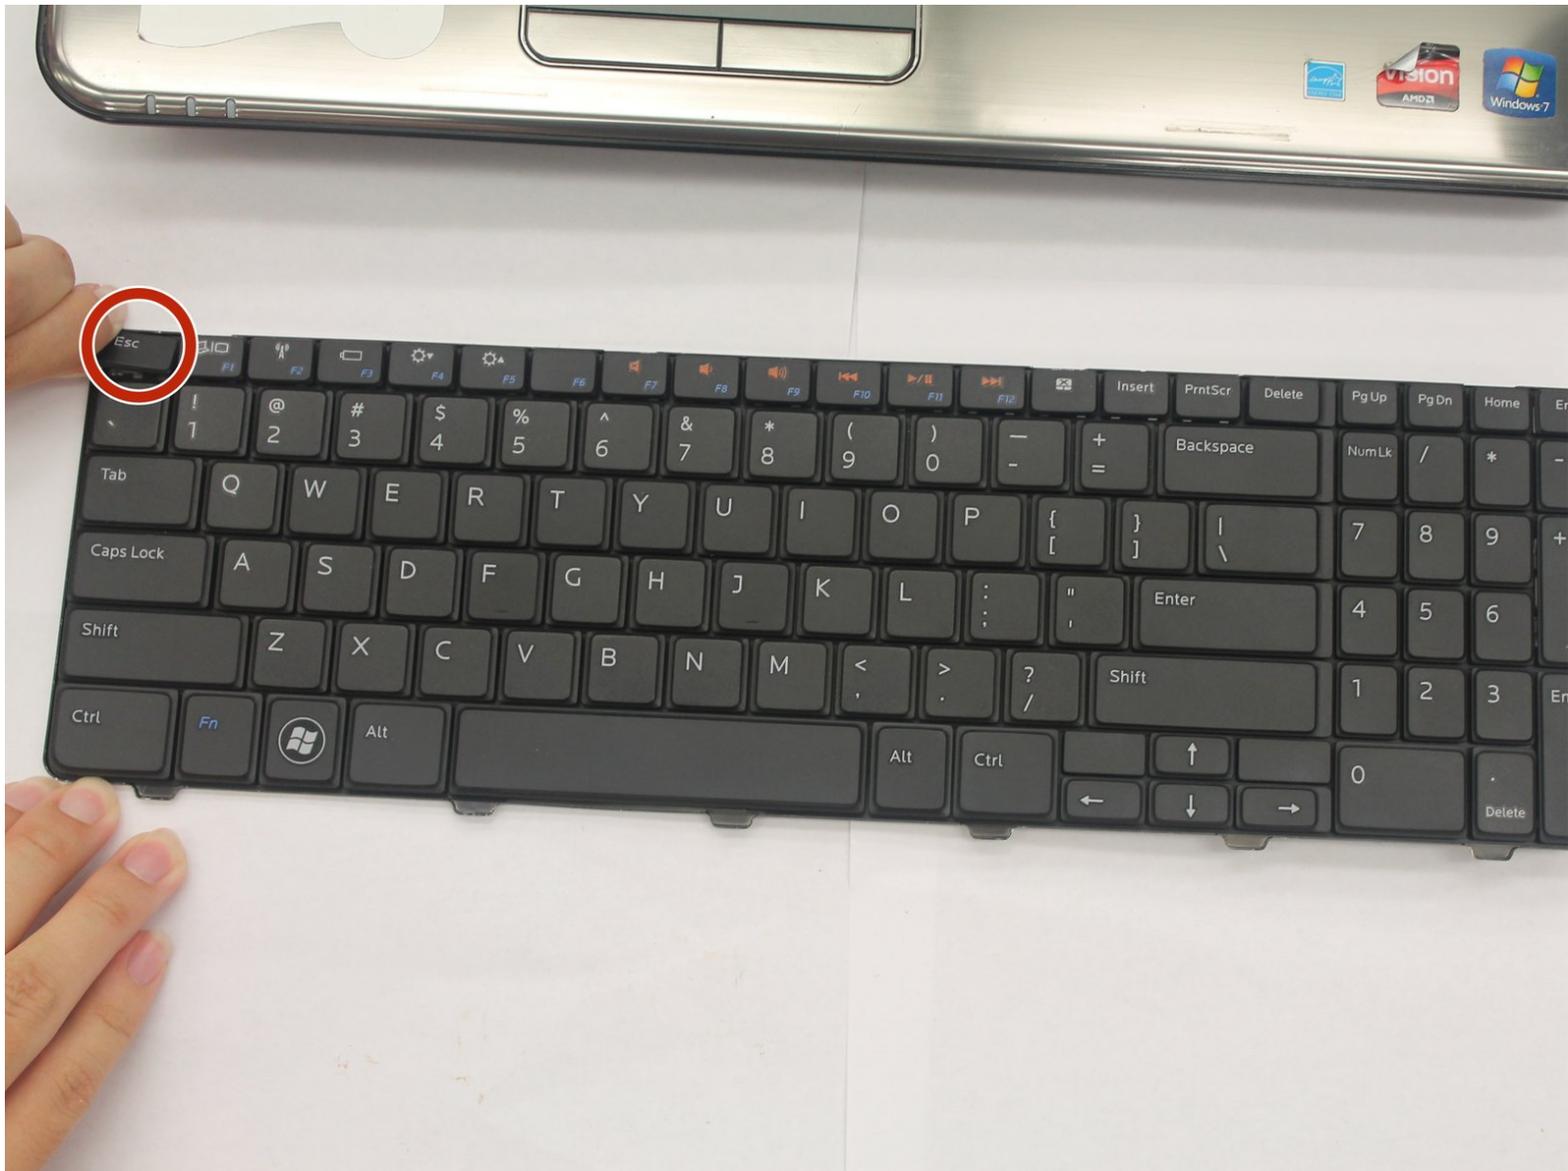

Dell Inspiron M5010 Keyboard Keycap Replacement

This guide will demonstrate how to remove single keycaps from the keyboard.

Written By: April Poucher



INTRODUCTION


This guide will demonstrate how to remove individual keycaps from the keyboard of a Dell Inspiron M5010.

Step 1 — Battery




-  Make sure laptop is powered off before removing the battery.
-  Slide both arrow tabs towards the outer edge of the computer to release the battery.
-  Battery is not shown.

Step 2 — Removal Preparation

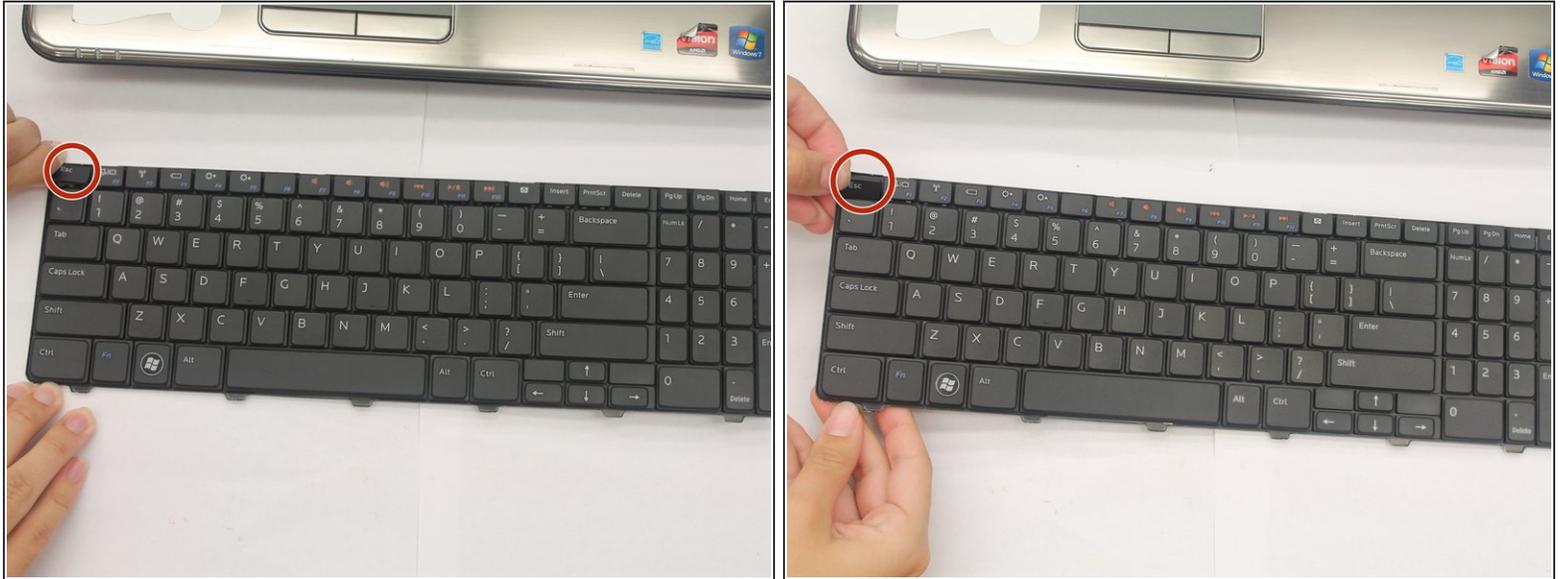

- Grasp the top of the keycap, and pull it up slightly.
- ⓘ The keyboard does not have to be removed from the laptop to replace a keycap.

Step 3 — Keycap Removal

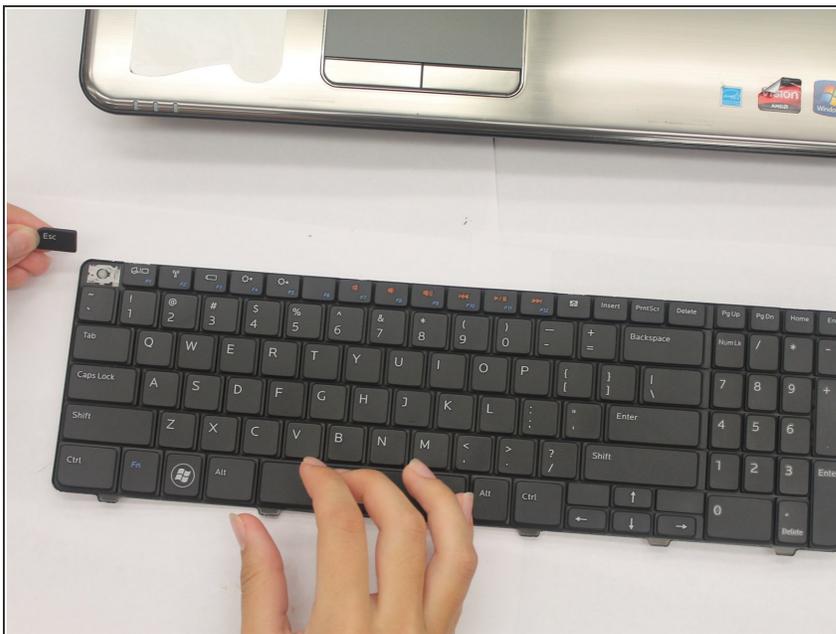

- Gently unsnap the keycap you are replacing.
- ⚠ Be careful not to snap the switch below the keycap.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2020-11-17 06:01:56 AM (MST).

