


# Disassembling KitchenAid Classic Mixer K45SSWH Motor Housing Cover

Removing the motor housing cover is a prerequisite for many internal repairs and replacements on the KitchenAid Classic Mixer.

Written By: Chris Gonzales

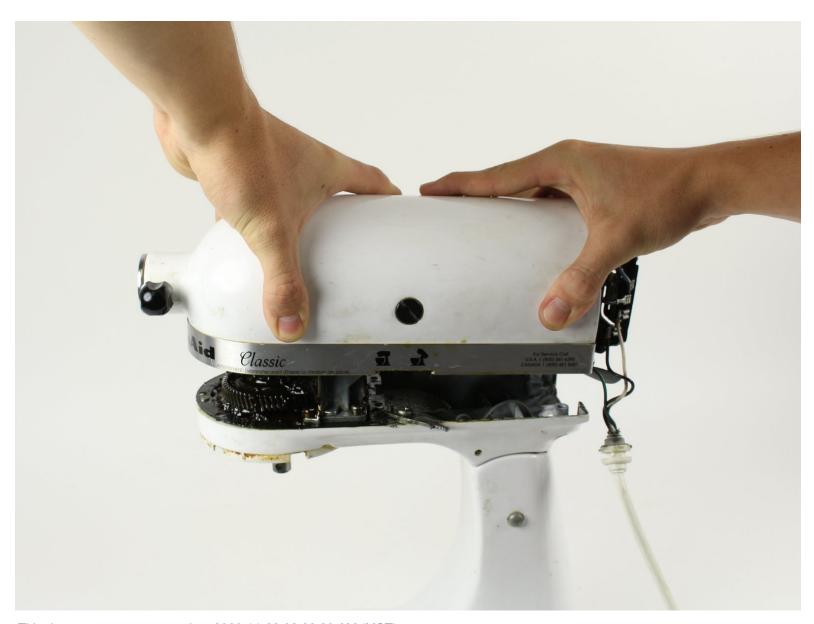

This document was generated on 2020-11-28 03:38:20 AM (MST).

# **INTRODUCTION**

In this guide, you will learn how to disassemble the motor housing cover.



# **TOOLS:**

- Phillips #2 Screwdriver (1)
- Hammer (1)
- Flathead Screwdriver (1)
- Pin Punch (1)

1 mm

- Spudger (1)
- Putty knife (1)

## **Step 1 — Motor Housing Cover**





Using a spudger, gently pry off the aluminum drip ring.

## Step 2



 Using a 4 mm pin punch and hammer, hammer the pin until it is dislodged from the planetary gear cover.

#### Step 3






Using a spudger, pry the planetary gear cover from the mixer shaft.

#### Step 4



- Using a flathead screwdriver, remove the five 28 mm front motor housing screws.
- Using the same flathead screwdriver, remove the two 28 mm locking screws.
- One of the locking screws contains a safety locking mechanism. Do not interchange these screws with the front motor housing screws.

#### Step 5

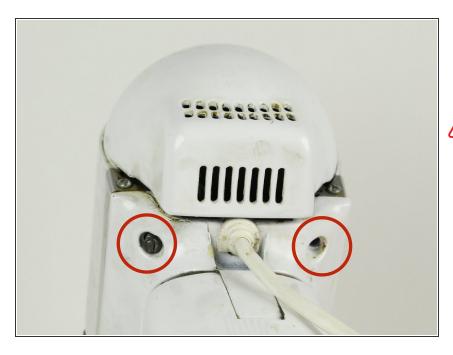

- Turn your device around. Using the same flathead screwdriver, remove the two 28 mm rear locking screws.
- One of the rear motor housing screws contains a safety locking mechanism. Do not interchange these screws with the front motor housing screws.


#### Step 6






- Using a Phillips #2 screwdriver, remove the 10 mm screw from top of back cover.
- (i) The rear cover is now completely free from the mixer.

## Step 7

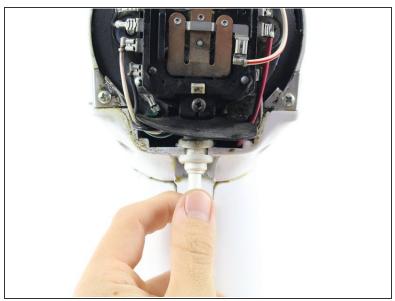

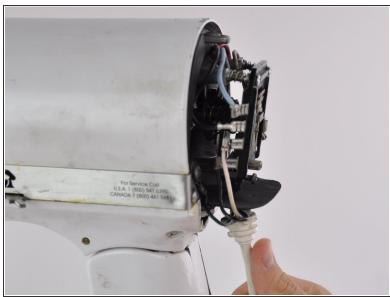

- Carefully pull the power cord from the notch in back of the mixer.
- (i) The motor housing cover is now completely free from the base of the mixer.

# Step 8



- Lift the motor housing cover from the mixer base.
- Be sure to place the cover upsidedown to prevent grease from leaking out.

To reassemble your device, follow these instructions in reverse order.