


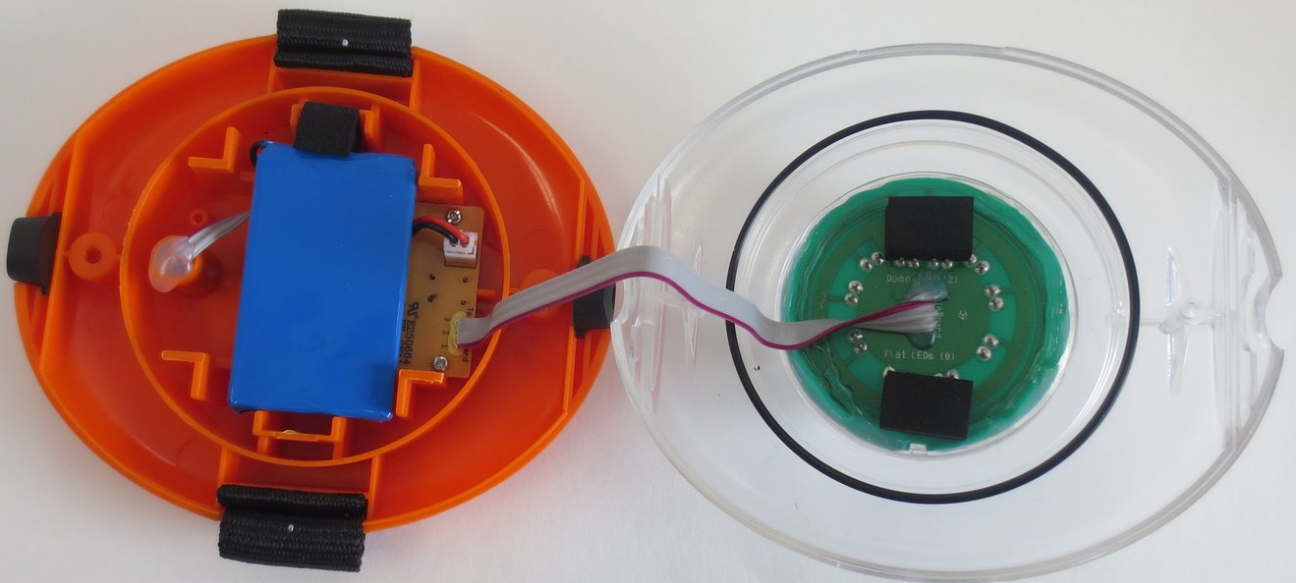

Sun King Solo Solar Lantern Outer Case Replacement

This guide will walk you through the disassembly of the Sun King Solo Solar Lantern device.

Written By: Anna



INTRODUCTION

Use this guide to learn how to disassemble the device in its entirety.

TOOLS:


- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Locate and Remove the Screws



- Place the lamp *LED side down* on a clean workspace.
- Remove the screws holding the casing together using a Phillips #1 Screwdriver.

Step 2 — Separate the Device

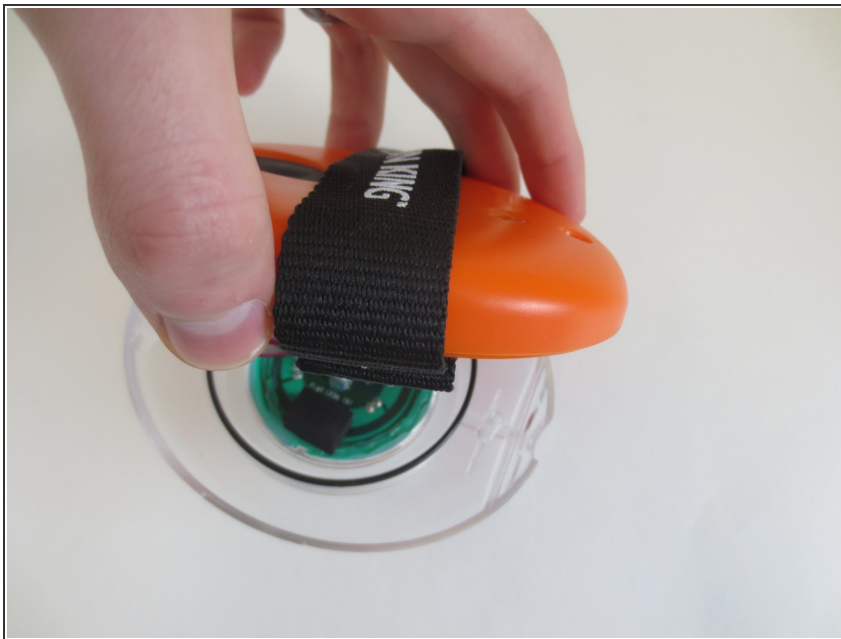

- Gently pull the two halves of the lamp apart.

To reassemble your device, follow these instructions in reverse order.