



# LG Optimus L9 P769 Speaker Replacement

If the phone has any audio distortion or does not produce any sound the speaker component may need to be replaced. See Prerequisite of Battery Replacement

Written By: Mekia Edwards



---

## INTRODUCTION

This guide will show you how to replace the speaker in an LG Optimus L9 P769.



### TOOLS:

- [Essential Electronics Toolkit](#) (1)
-

## Step 1 — Position



- Position the phone face-down.


## Step 2 — Rear Case Removal



- Hold the phone in your hand and position your fingernail or a opening tool under the lip at the bottom of the case.
- Pry rear case upwards until you hear a click.
- Remove rear case.

This document was generated on 2020-11-15 03:04:02 AM (MST).

## Step 3 — Battery Removal

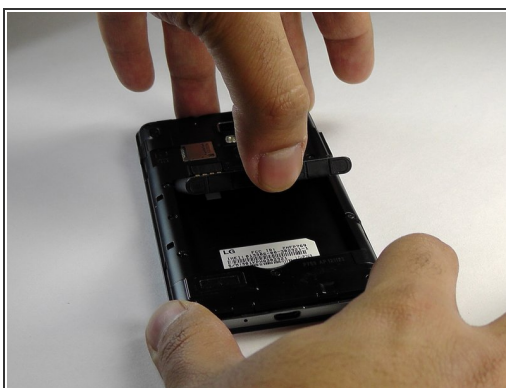

- Place the phone face-down.
- Place your thumb or tool in the indentation and remove the battery.

## Step 4 — Unscrew The Bottom



- Remove the three screws from the bottom of the phone to unscrew the speaker.



## Step 5 — Remove Speaker



- Place a prying tool between the speaker and the phone.
- Gently lift the speaker out of the phone.

To reassemble your device, follow these instructions in reverse order.