


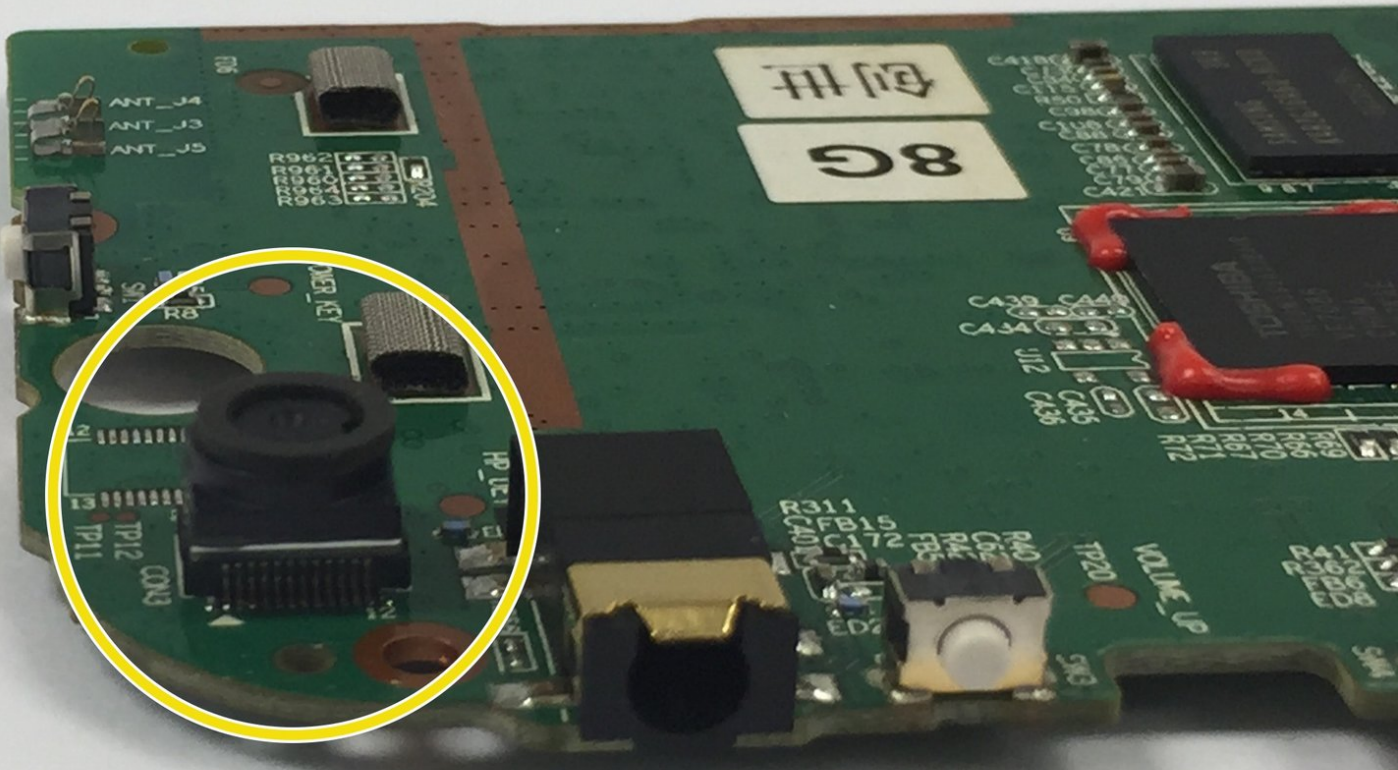

Written By: Reyna Serrato



INTRODUCTION


This guide will show you how to replace the camera on your Toshiba Excite 7c. The camera itself plugs directly into the motherboard and can be slightly more difficult to replace than other components.



TOOLS:


- [Tweezers](#) (1)
 - [iFixit Opening Tool](#) (1)
-

Step 1 — Motherboard

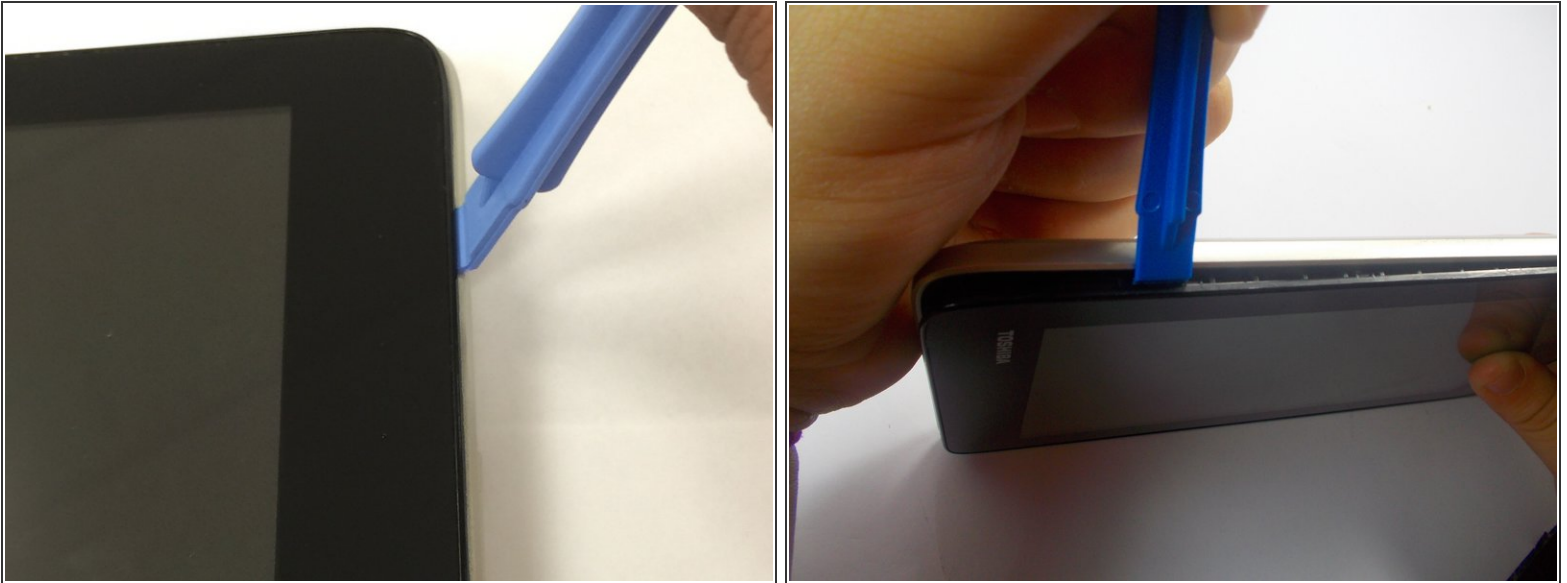


- Place an iFixit opening tool in the seam between the screen and back casing.
- Apply pressure down all four sides to separate the back casing from the screen.
- Place the tablet face down and carefully remove the back panel.

Step 2

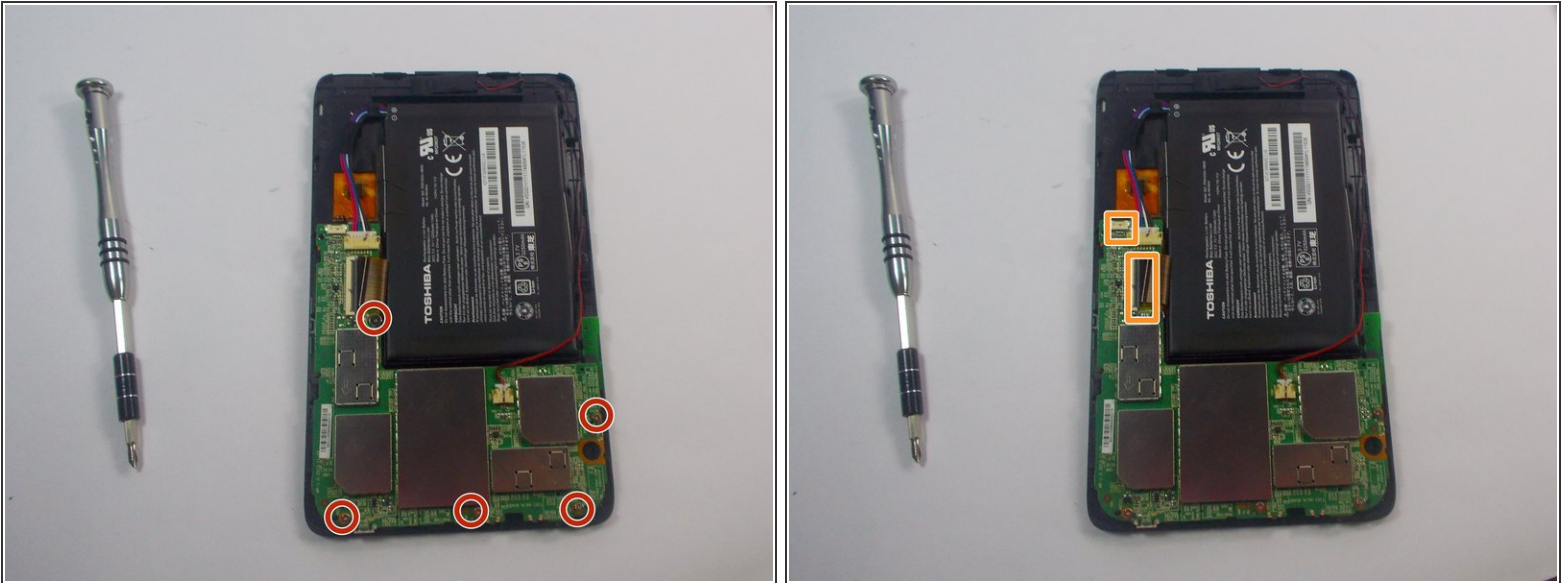

- Use a Phillips screwdriver to remove the five 6 mm screws from the motherboard.
- Use tweezers to gently disconnect the two ribbon cables.
- Pull straight up to remove the board.

Step 3 — Camera

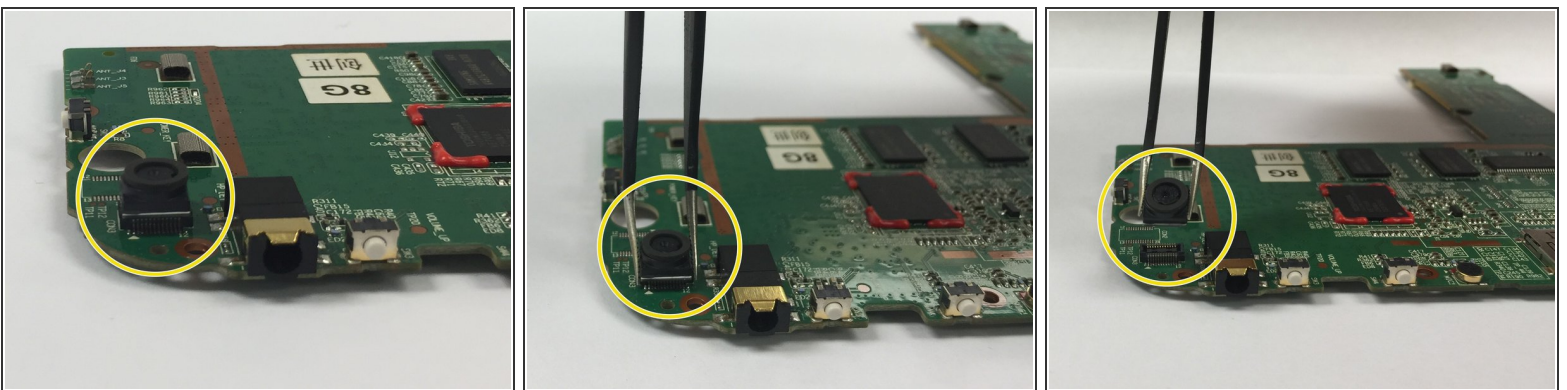

- Locate the camera on the top portion of the motherboard as seen here.
- Grip using the tweezers and pull directly up applying as much force as necessary to remove the camera.

To reassemble your device, follow these instructions in reverse order.