


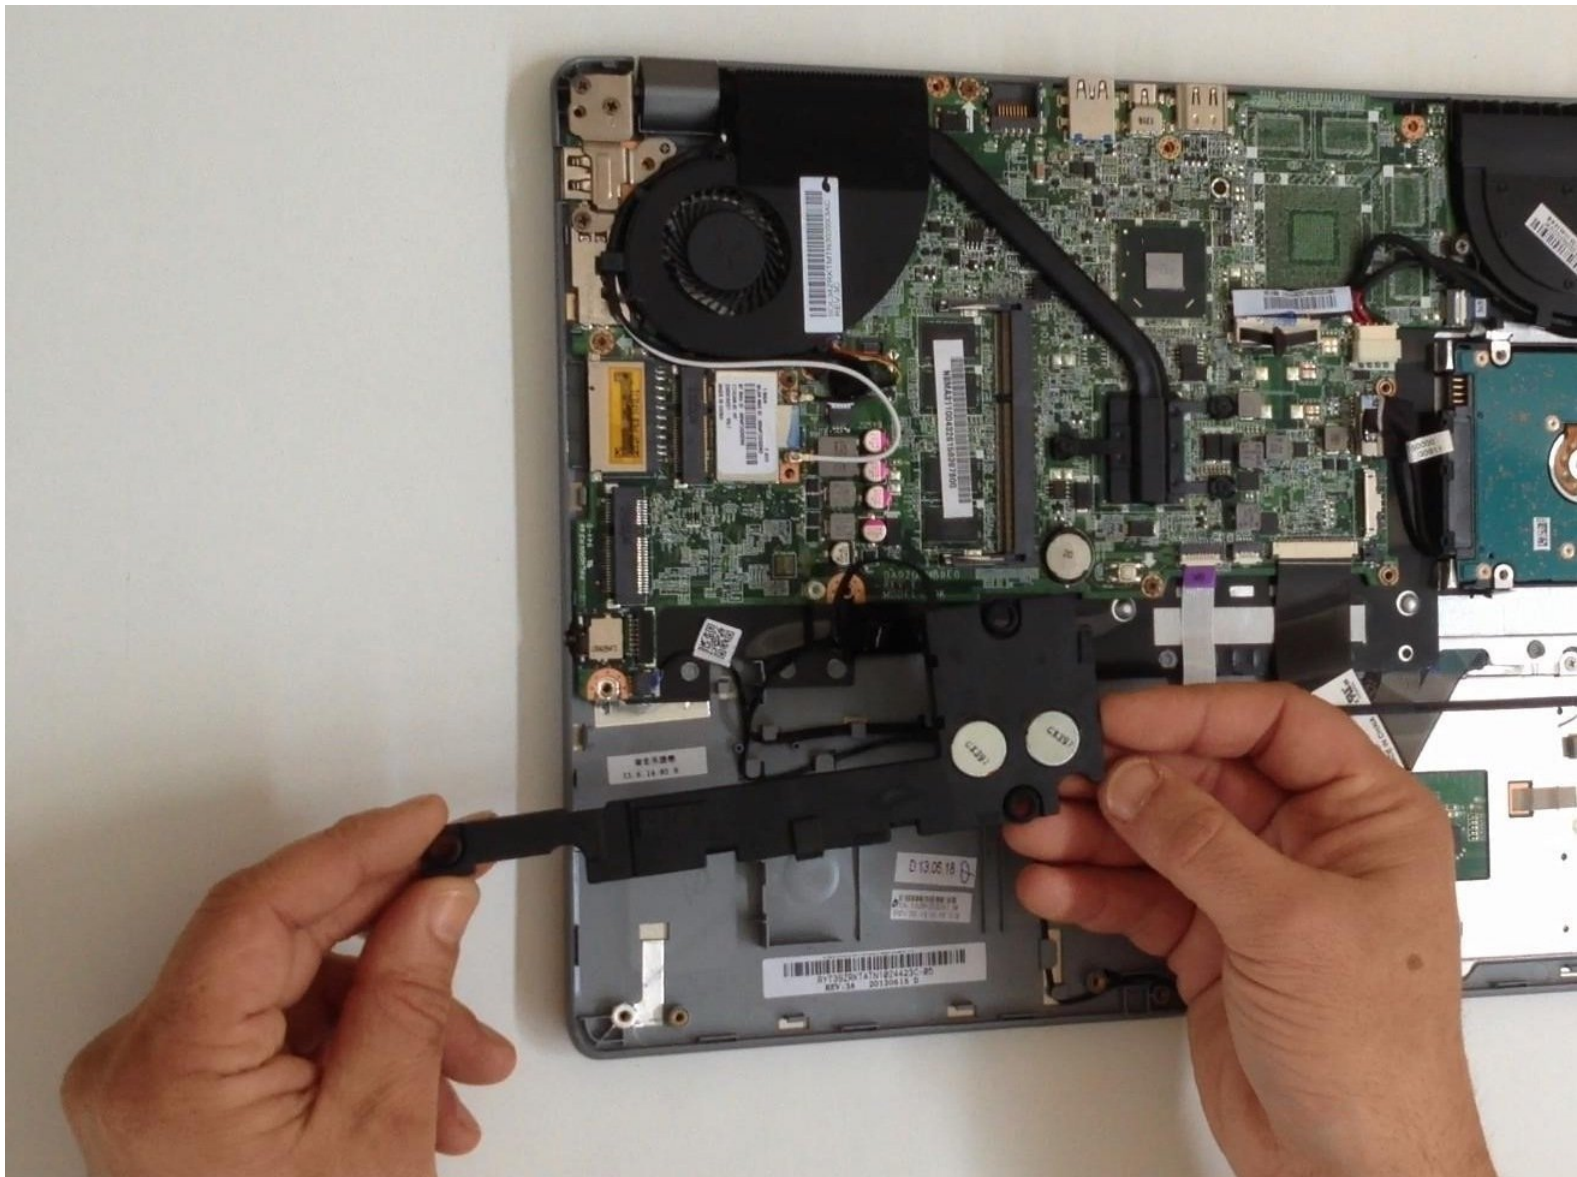

# Acer Aspire V5-572, V5-572G Loudspeakers and Microphone Replacement

Acer Aspire V5-572, V5-572G Loudspeakers and Microphone Replacement

Written By: ZFix



---

## INTRODUCTION

Acer Aspire - V5-572, V5-572G

How to disassemble the Laptop and change the Loudspeaker modules.


[video: <http://youtu.be/Sg8tUXZL864>]


---

## TOOLS:

- [Phillips #0 Screwdriver](#) (1)
  - [iFixit Opening Tool](#) (1)
  - [iFixit Opening Picks \(Set of 6\)](#) (1)
-

## Step 1 — Bottom Cover

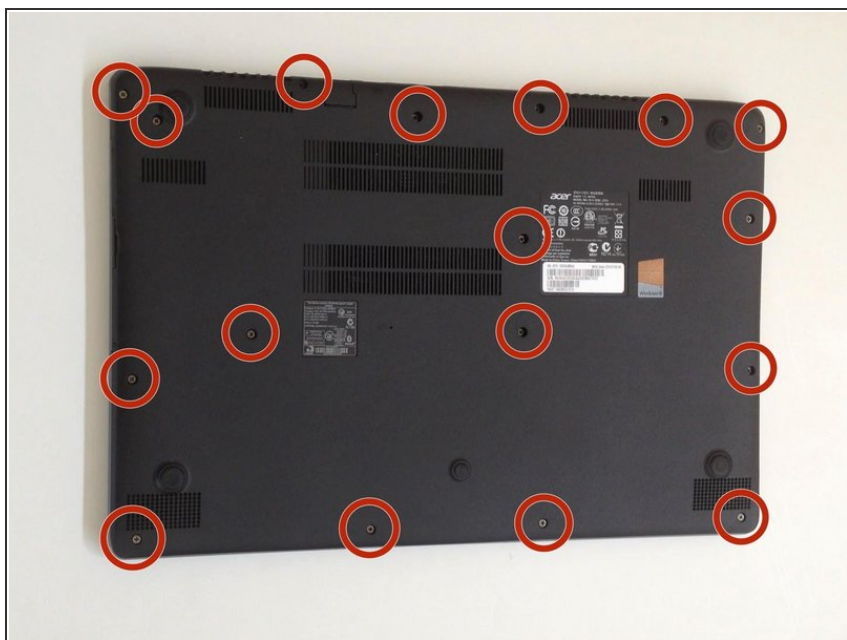

 Switch-off the Laptop.

- Remove the seventeen Philips #0 screws.


## Step 2



- If there is a plastic storage tray in the laptop, remove it.



## Step 3

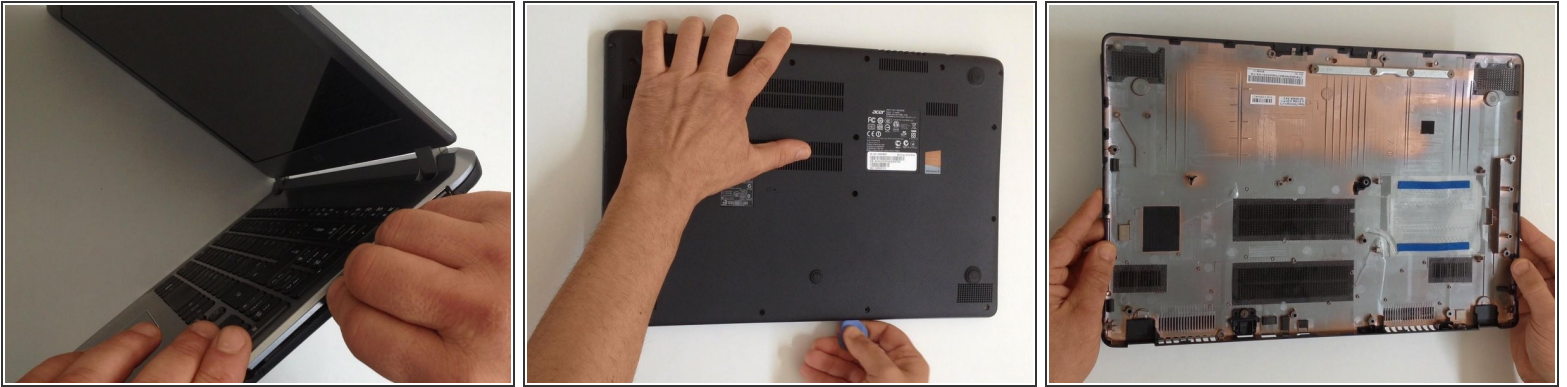



- Starting from the SD Memory Card hole, start prying between the top and bottom cases.

 Use plastic tools to avoid damaging the cover.

- Remove the bottom case.


## Step 4

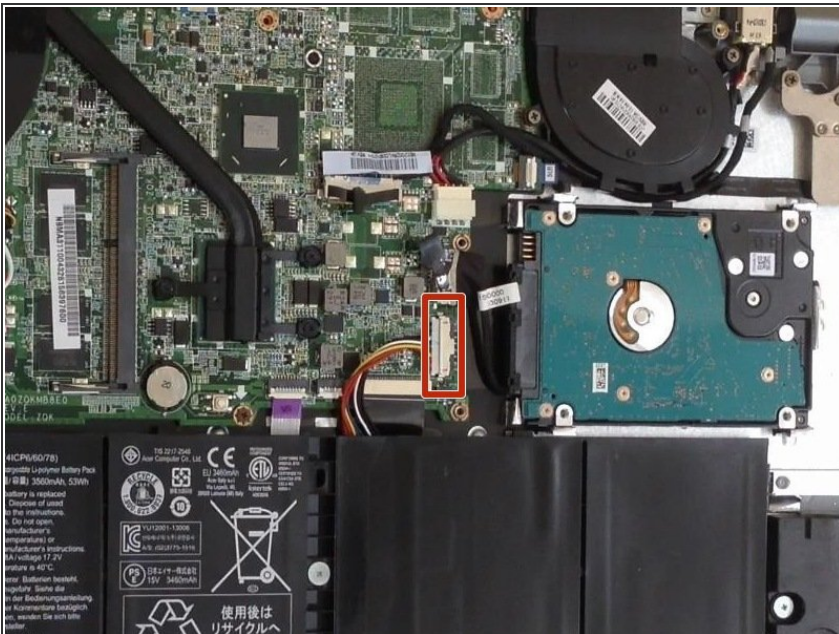

 Disconnect the battery immediately for a safer repair.


- Pull the battery connector away from the hard drive to disconnect it.

## Step 5 — Battery

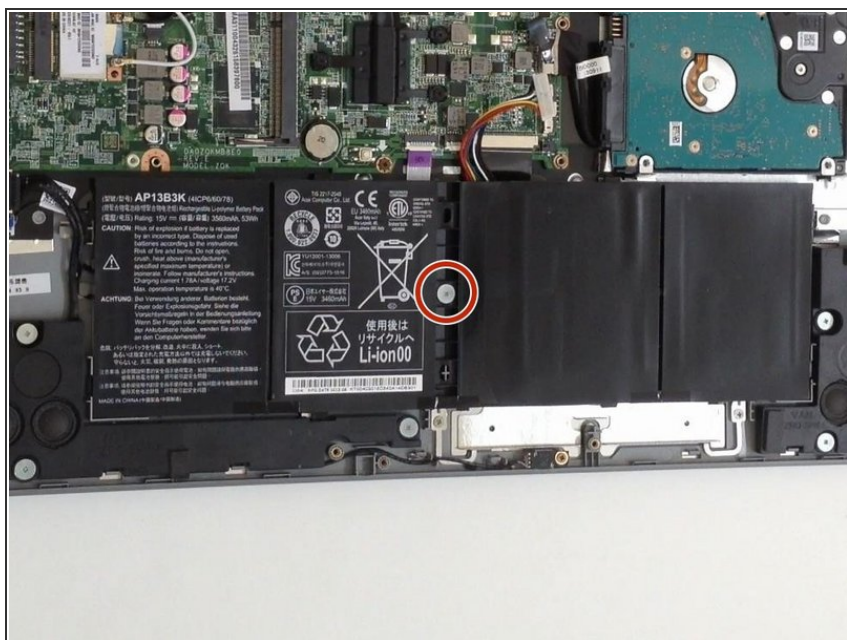




- Remove the single Phillips 0 screw securing the battery.

## Step 6

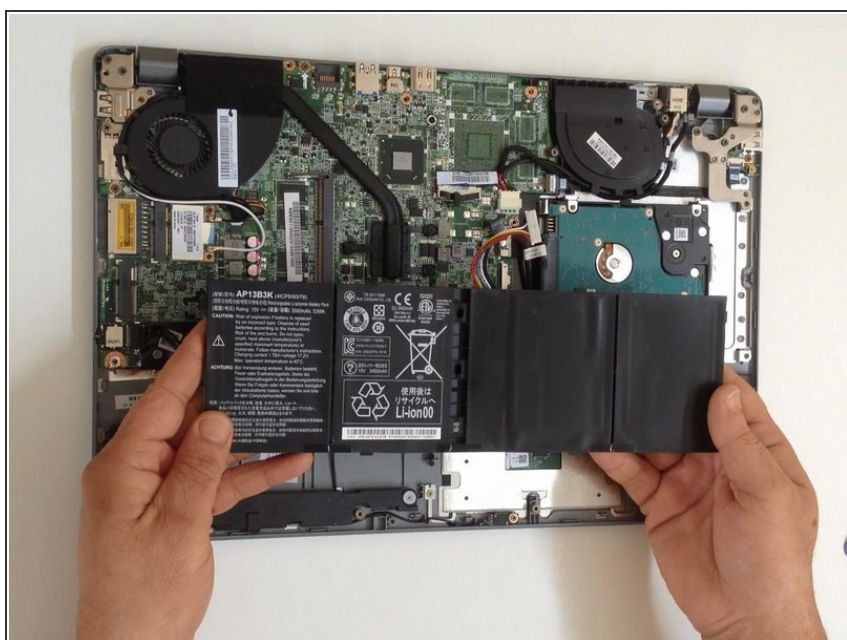

- Remove the battery

## Step 7 — Loudspeakers and Microphone

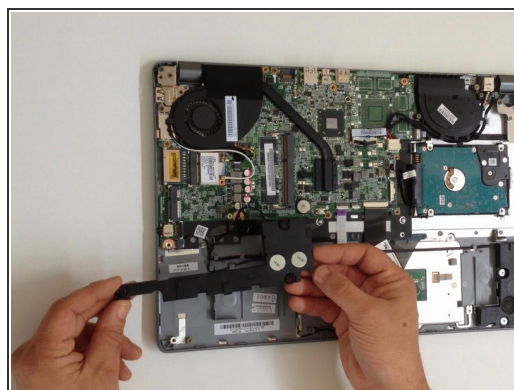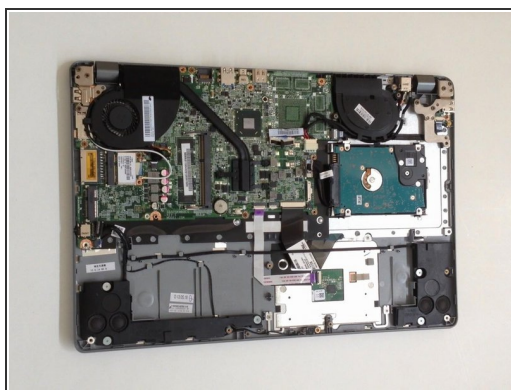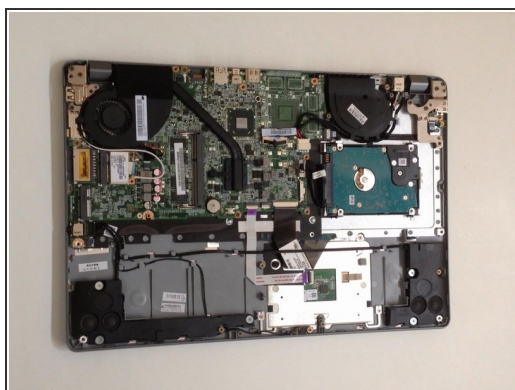

- Disconnect the Loudspeakers cable.
- There are two modules with loudspeakers, connected with one wire.
- Unscrew the screws and remove the Loudspeaker modules together with the cable.

To reassemble your device, follow these instructions in reverse order.