



HP G62-223CL Battery Replacement

This guide will show the user how to remove the battery.

Written By: Garret Layton



INTRODUCTION

This guide will show the user how to remove the battery.




PARTS:

- [HP MU09XL Replacement Laptop Battery](#) (1)
-

Step 1 — Battery Removal



 Removing the battery while the laptop is still on may corrupt your files.

- Turn the device over to expose the bottom of the device.
- Slide the battery release all the way to the left.
- There will be a click and the battery will be released from its compartment.

Step 2



- Carefully remove the battery from its compartment.

To reassemble your device, follow these instructions in reverse order.