



Sony Action Cam HDR-AS15 Battery Replacement

Sometimes batteries die. In this guide, we will...

Written By: Justin Colean



INTRODUCTION

Sometimes batteries die. In this guide, we will show you how to replace the battery in the Sony Action Cam HDR-AS15. This is a relatively simple guide, not requiring the removal of any screws.

TOOLS:

[Tweezers](#) (1)

Step 1 — Battery



- To access the battery, gently pry open the rear cover of the action cam.

Step 2



- Using a pair of [tweezers](#), firmly grip the protrusion where the PULL signifies and remove the tray and battery.

To reassemble your device, follow these instructions in reverse order.