



Kyocera Event Battery Replacement

This guide will teach you how to remove the battery in a Kyocera Event and put another battery to Kyocera Event efficiently.

Written By: Jen Michaels



INTRODUCTION

A battery is essential to turn on the phone. In this guide you will learn how to remove the battery in a Kyocera Event and put another battery to Kyocera Event efficiently.

TOOLS:

- [iFixit Opening Tools](#) (1)
-

Step 1 — Battery



- Locate the small notch on the bottom right side of the phone.
 - To remove the cover, hook your thumb or fingernail into the slot. Then, gently lift the cover up and off.
- i** The back cover may flex slightly as you remove it. This is normal, but avoid applying excessive force.

Step 2



- Locate the small notch below the battery. You may see a white plastic notch sticking out of this space; if so, grasp that tab to pull the battery out of its compartment. If you do not see a white plastic tab, then place your fingernail in the notch and pull upward to release the battery from its compartment.

i The plastic prying tool can be used to help remove the battery.

To reassemble your device, follow these instructions in reverse order.