



ComNet Ericsson Panther 600P Buttons Replacement

This guide will show you how to remove the buttons from the ComNet Ericsson Panther 600P.

Written By: Bryn McAllister



INTRODUCTION

If you press a button and the button does not move or if people cannot hear you talking while the talk button is pressed down, the buttons may need to be cleaned or replaced.

TOOLS:

- [T15 Torx Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Locate the release button.



- Look for the release button on the back of the radio.
- Press the button and pull down on the battery at the same time. The battery will come free.

Step 2 — Antenna



- Twist the antenna counter-clockwise to unscrew it from the antenna jack.

Step 3 — Dials



- Pull up on the dials to remove them from the underlying pegs.

Step 4 — Exterior Case



- Using a T15 Torx screwdriver, unscrew the two screws.
- Using a plastic opening tool, pry the internal case from the external case.

Step 5 — Remove Buttons



- Grip the corner of the button pad and gently peel it away from the faceplate.
- Clean off any sticky residue and/or replace the buttons.

To reassemble your device, follow these instructions in reverse order.