




# Sirius Stiletto 2 LCD Display Replacement

This guide will show you how to replace the LCD display for the Sirius Stiletto 2.

Written By: Benjamin Her

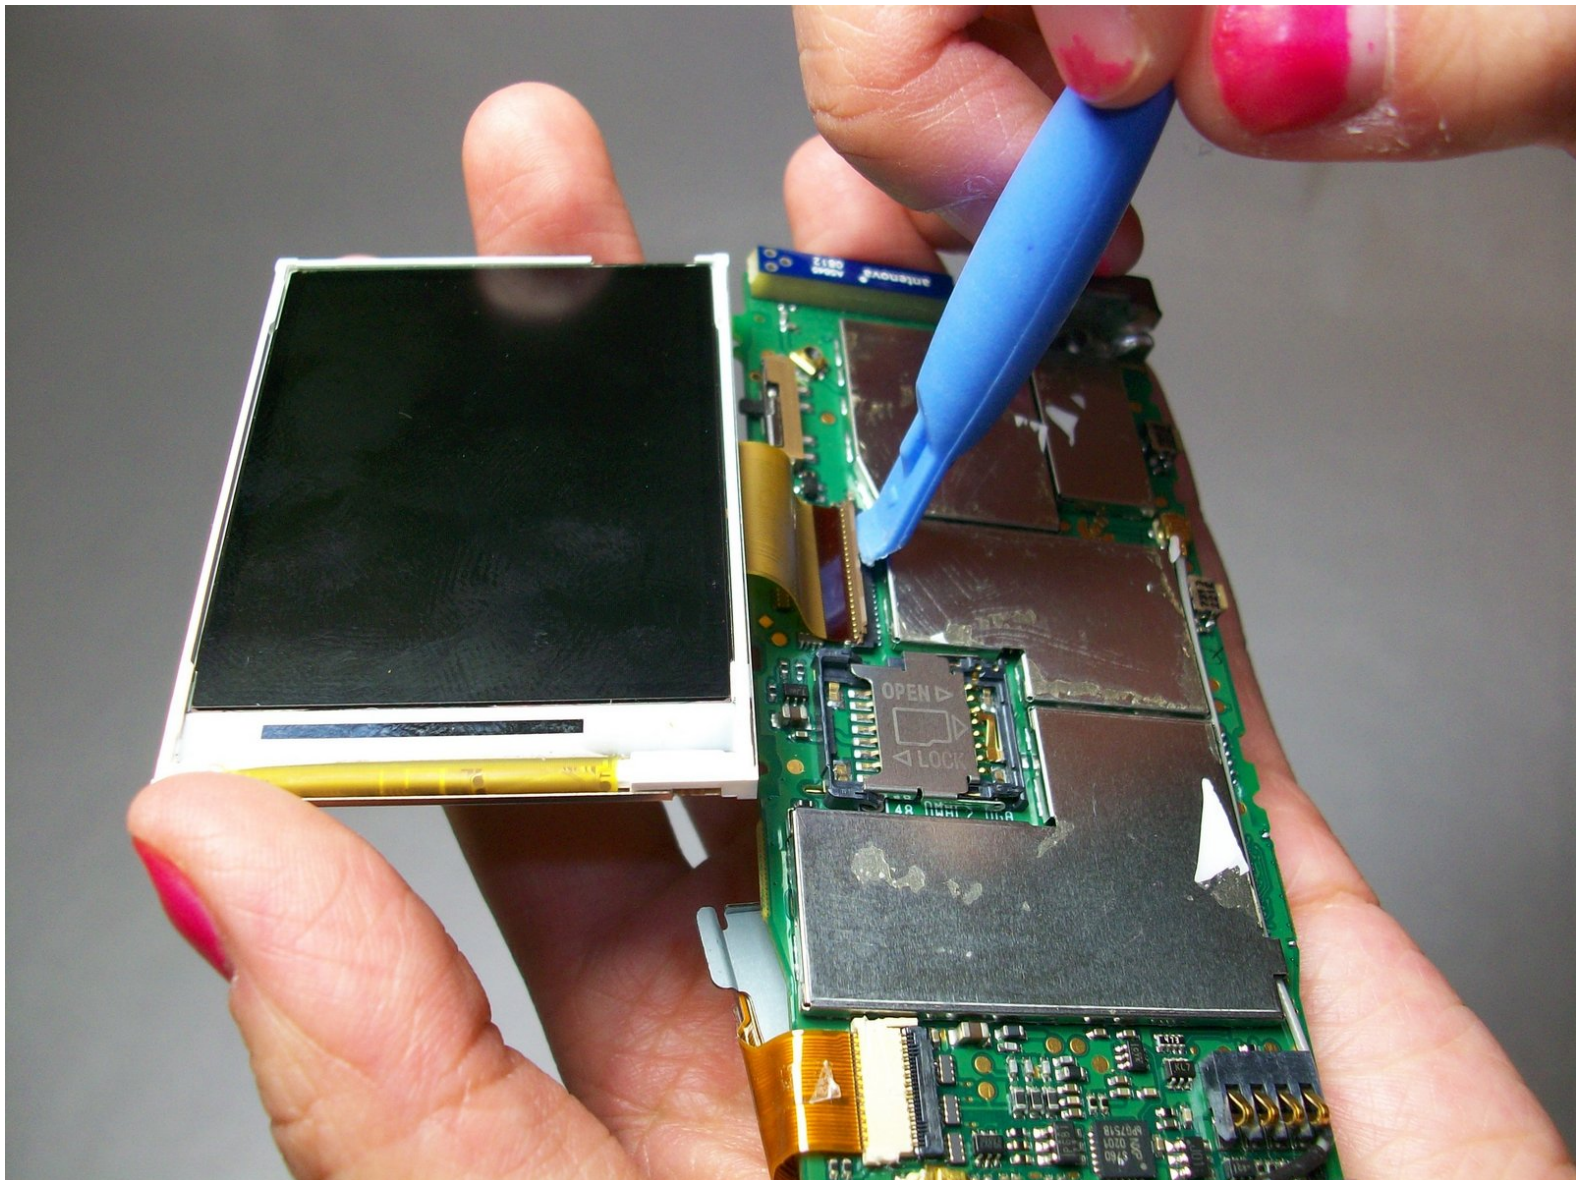

---

## INTRODUCTION

Replace your LCD display only as a last option. Since the LCD display uses a flexible flat cable(FFC), improperly inserting the cable may cause damage to your device.

---



### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-



## Step 1 — Battery




- From the back of the device, slide the back panel downwards to unlock the panel.
- Lift the panel up, exposing the battery.

## Step 2



- Pinch the battery from both sides and lift the battery to remove it.

## Step 3 — Front Cover

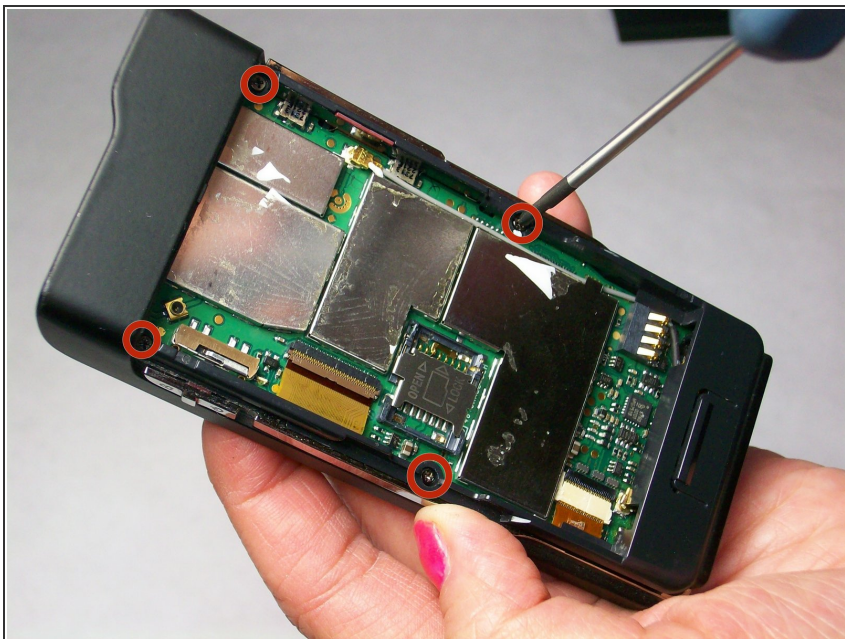

- Unscrew the four 6.68mm (1.43mm diameter) Philips #00 screws.
- ⓘ If needed, remove the sticker to see the screws


## Step 4



- Start by using a plastic opening tool to loosen the front cover from the sides.
- Work your way to the bottom of the cover then the top.
- Carefully pry the front cover off.





## Step 5 — LCD Display

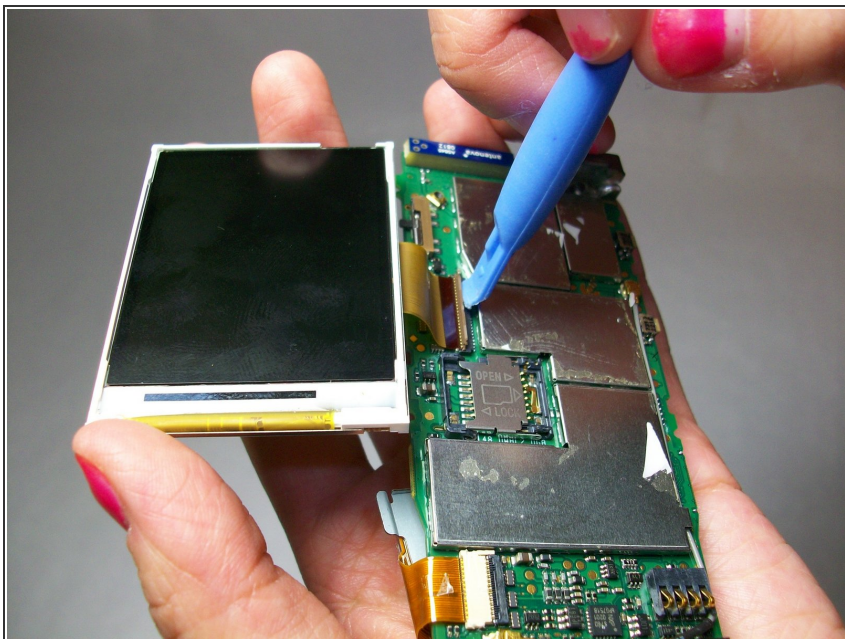


- Gently lift the latch on the the ribbon cable connector inward (towards the motherboard).

## Step 6

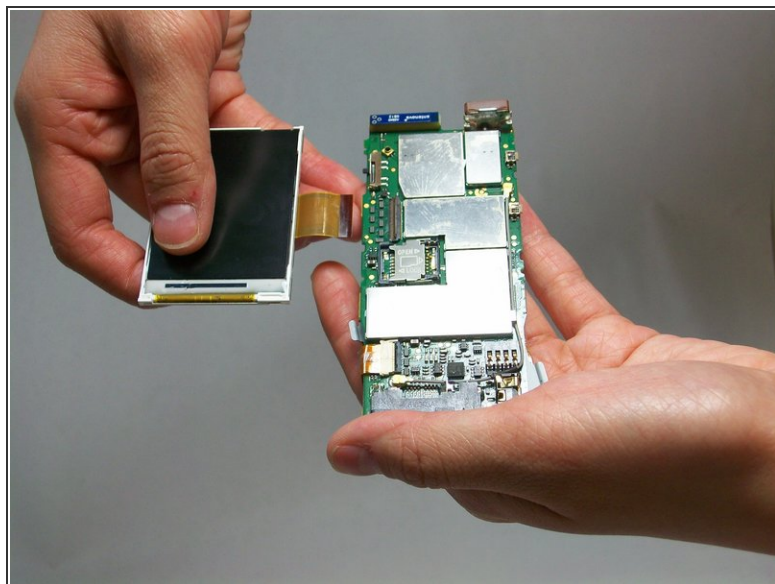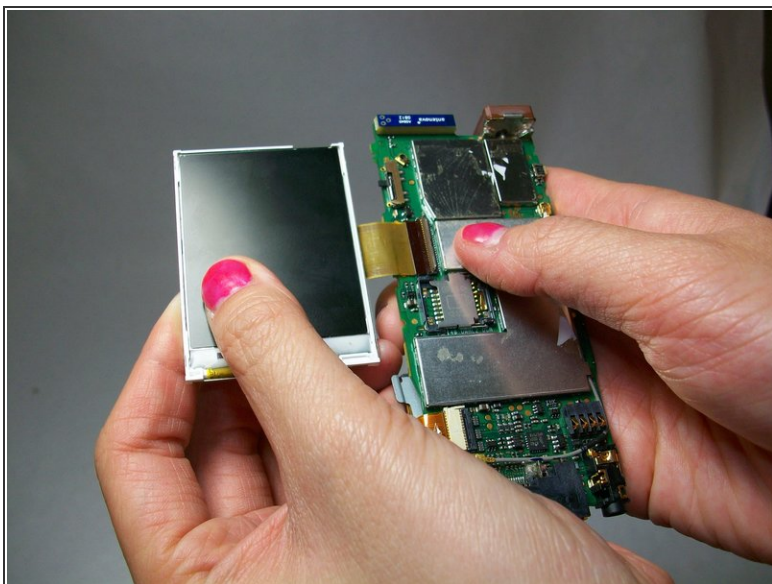

- Carefully grip the screen and pull it away from the ribbon connector located on the motherboard.

## Step 7

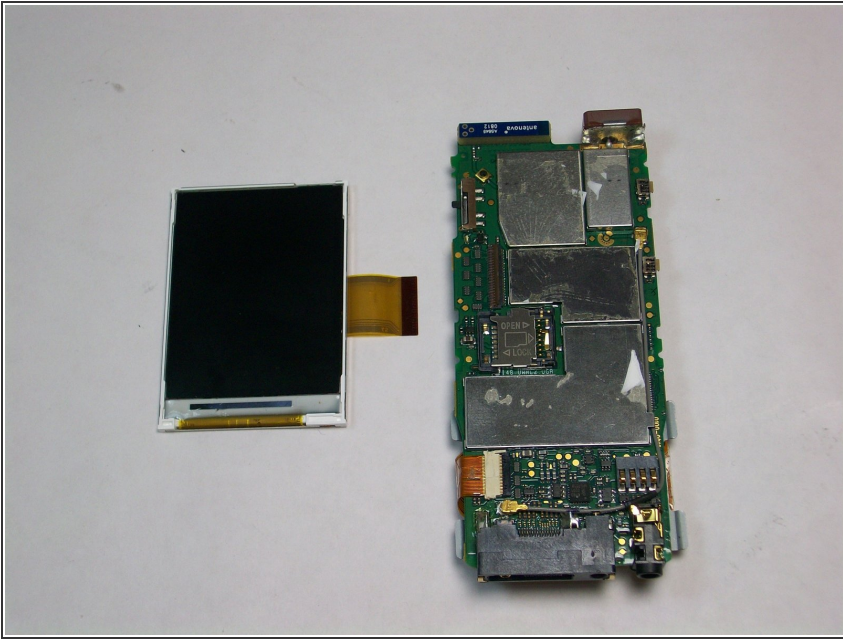

- LCD display (left).

To reassemble your device, follow these instructions in reverse order.