



Kindle Touch Bezel Replacement

This guide will cover how to remove and replace...

Written By: Jerome Narine



INTRODUCTION


This guide will cover how to remove and replace the bezel on a Kindle Touch and requires using a plastic opening tool and PH00 screwdriver.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tool](#) (1)
-

Step 1 — Back Cover

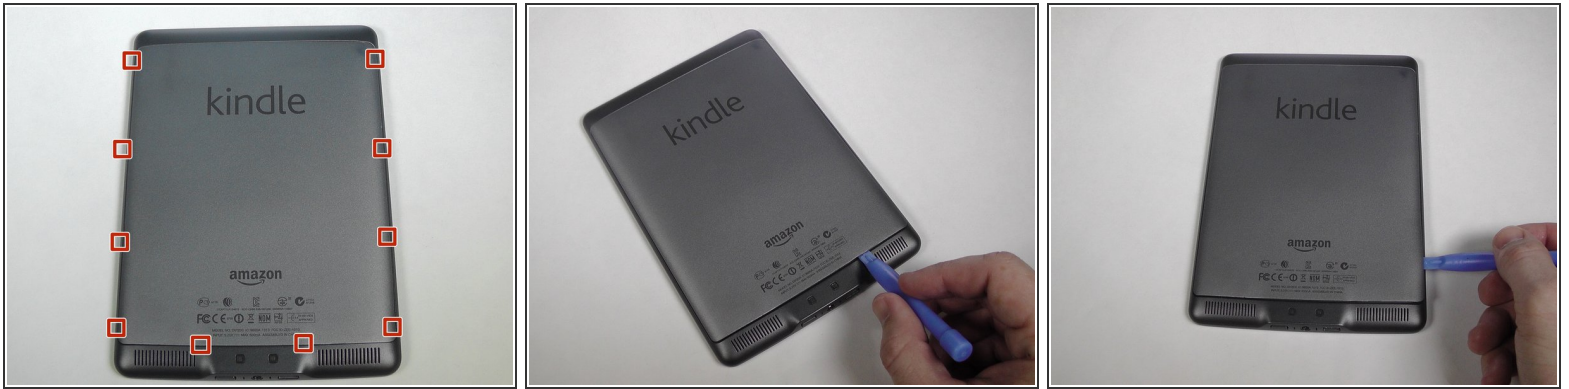


- Use the plastic opening tool to undo the ten plastic clips around the back panel of the Kindle.

Step 2




- Gently lift the bottom and slide the panel off.

Step 3 — Bezel

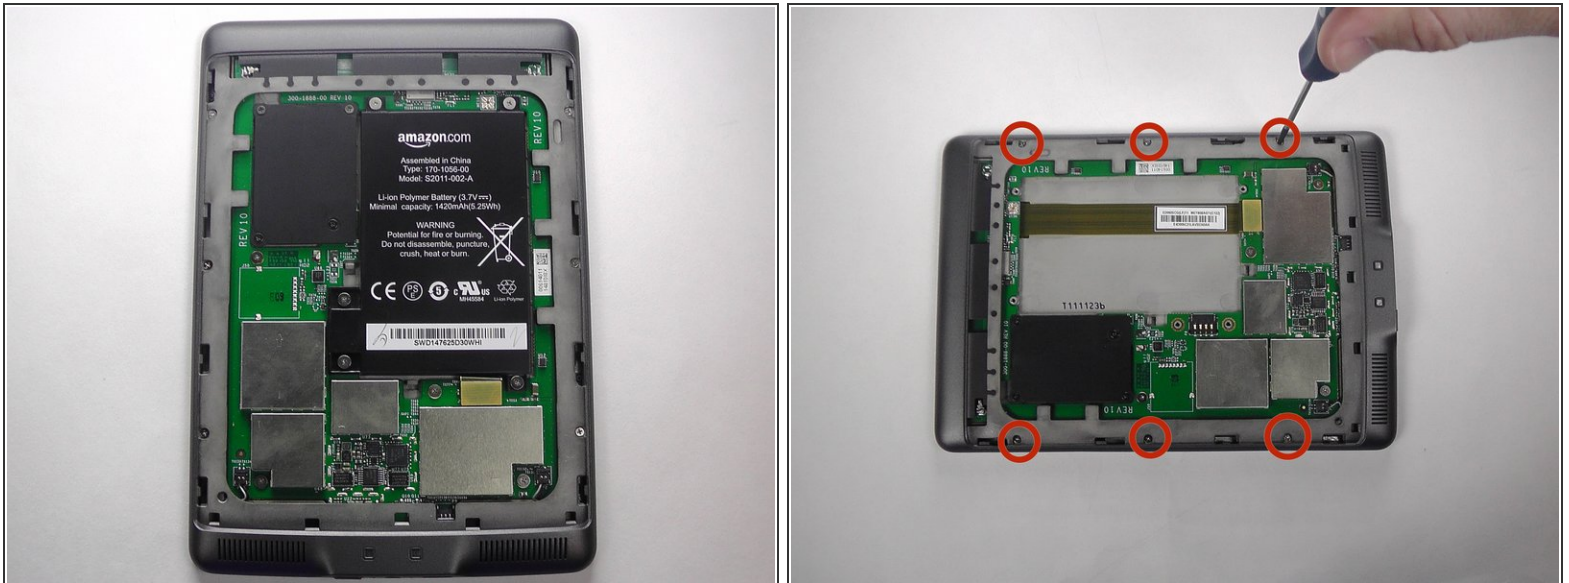

- Using a Phillips #00 screwdriver, remove the six 4 mm screws to access the front plate.

Step 4

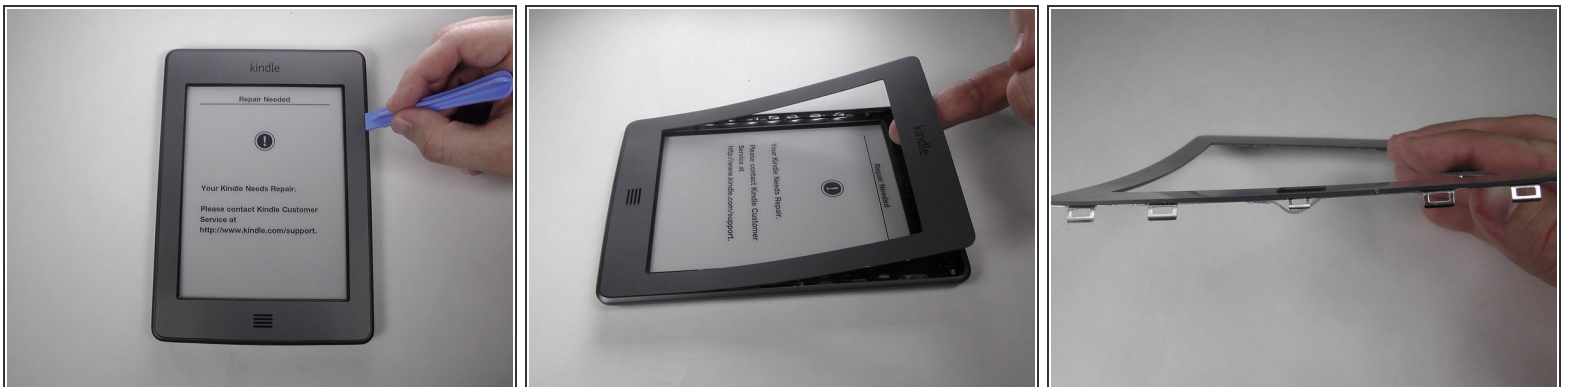

- Use the plastic opening tool to pry the bezel from the top and sides
- ⓘ The bottom of the bezel will be glued, so be careful when sliding the clips out.

⚠ The clips can be easily bent, so do not try to force them out. If you do bend some, they can be bent back.

To reassemble your device, follow these instructions in reverse order.