




Lenovo Y410P Cooling Fan Replacement

This guide will show you how to remove the heatsink and apply new thermal paste in the Lenovo Y410P laptop.

Written By: Eric Chen

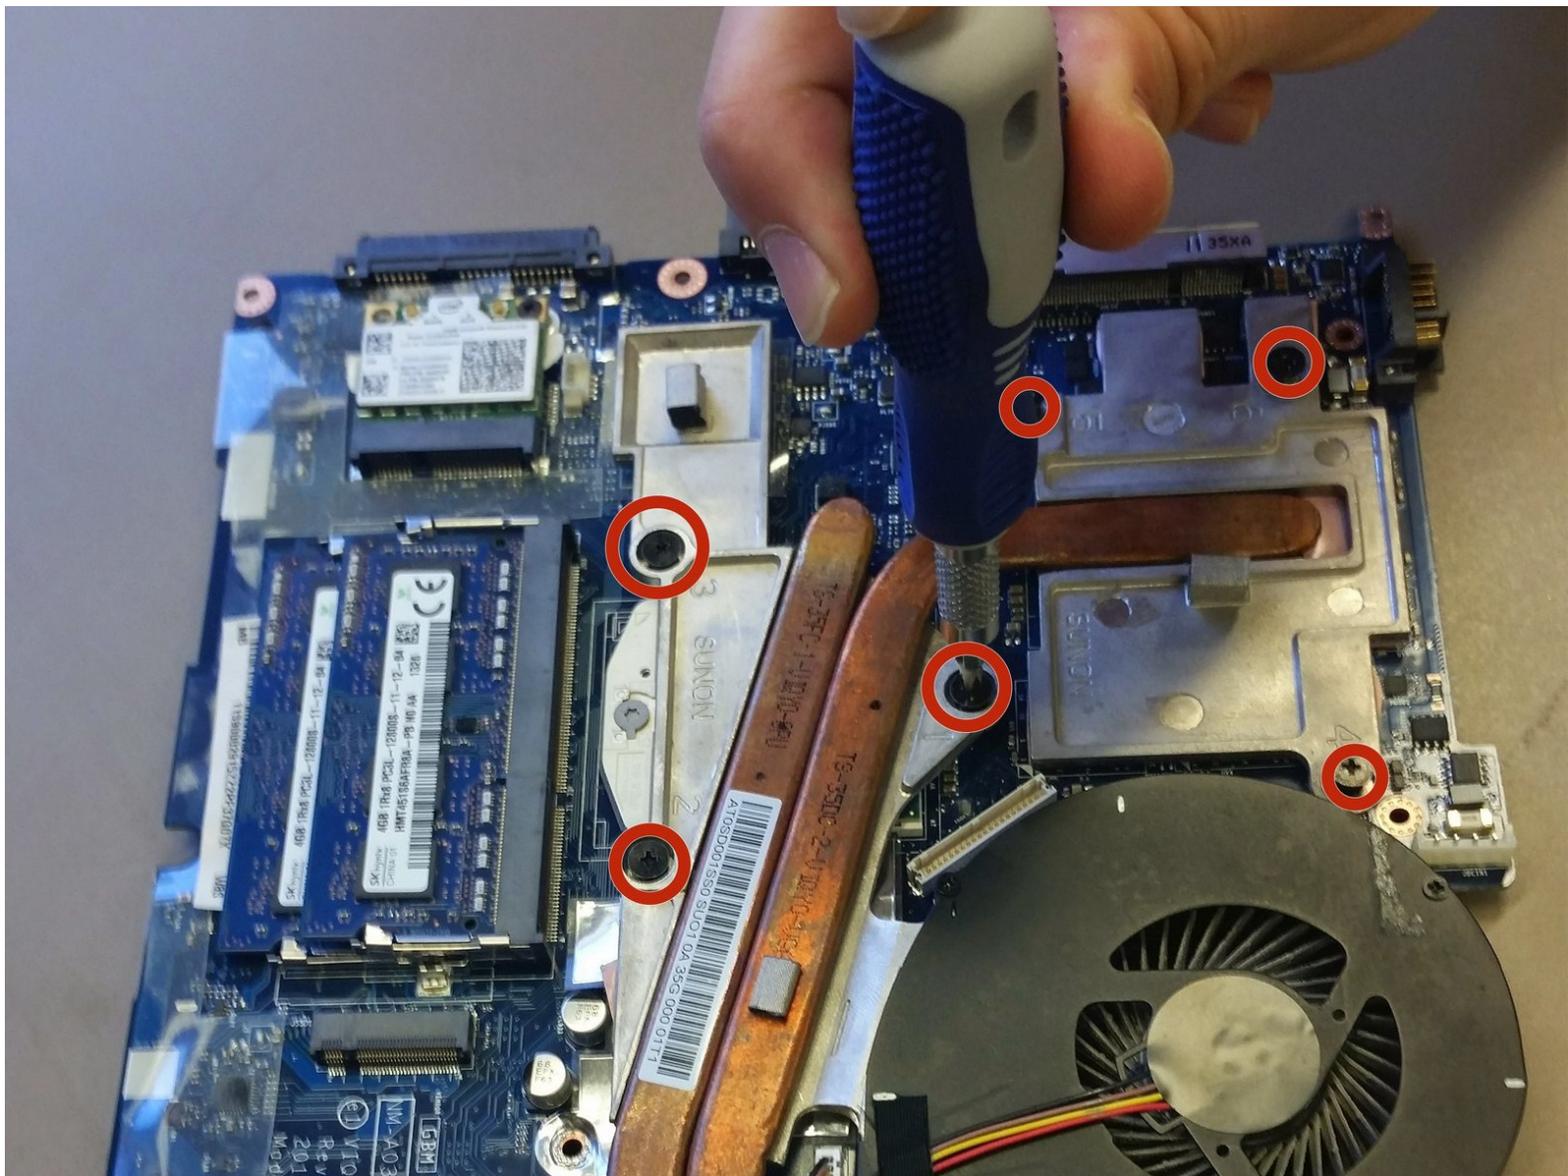

 **TOOLS:**



- Phillips #0 Screwdriver (1)
 - Phillips #00 Screwdriver (1)
-

Step 1 — Removal of Bottom Panel




- Remove eight M2.5 x 8mm Phillips head screws, using a Phillips #0 screwdriver, in the specified locations.
- Lift the bottom cover off and set it aside.

Step 2 — Removal of Hard Drive

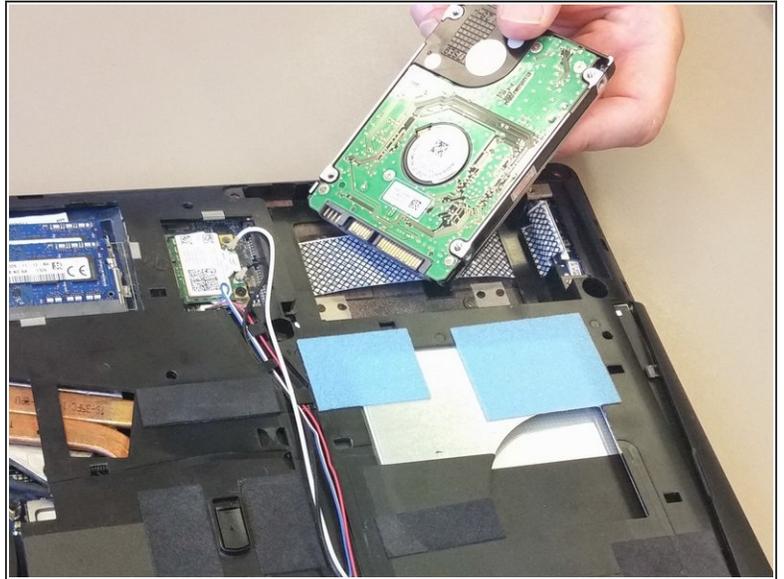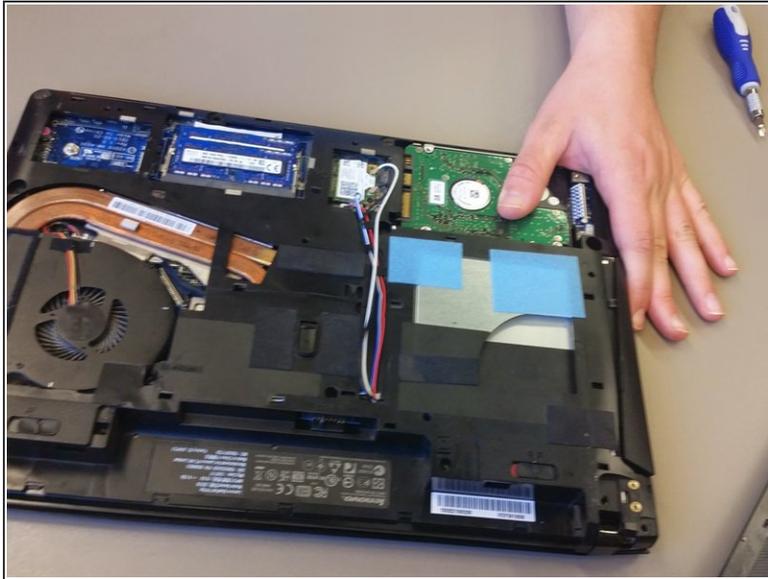



- Remove the two M2.5x4mm screws using a Phillips #0 screwdriver.
 - Slide the hard drive out of the casing.
- ⚠ Be careful when handling the hard drive; rough impacts may cause data loss.

Step 3 — Remove Optical Drive

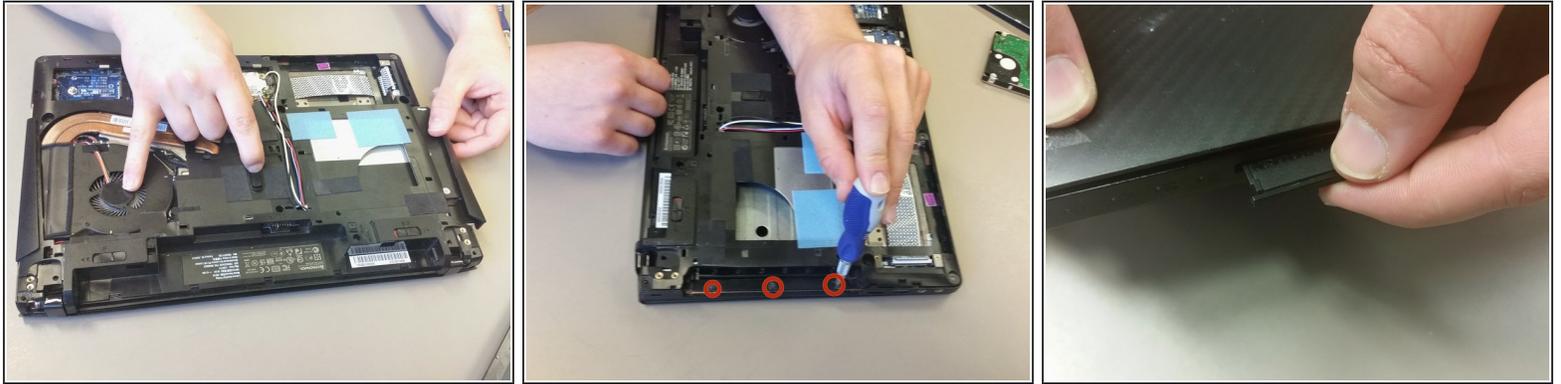


- With the laptop's bottom facing up, pull the optical drive release lever back and pull the optical drive out.
- Unscrew the three M2x3mm Phillips head screws shown.
- At the front edge of the laptop, empty the SD card holder by pressing on the card. This will allow for further disassembly in later steps.

Step 4 — Remove Keyboard and Cables

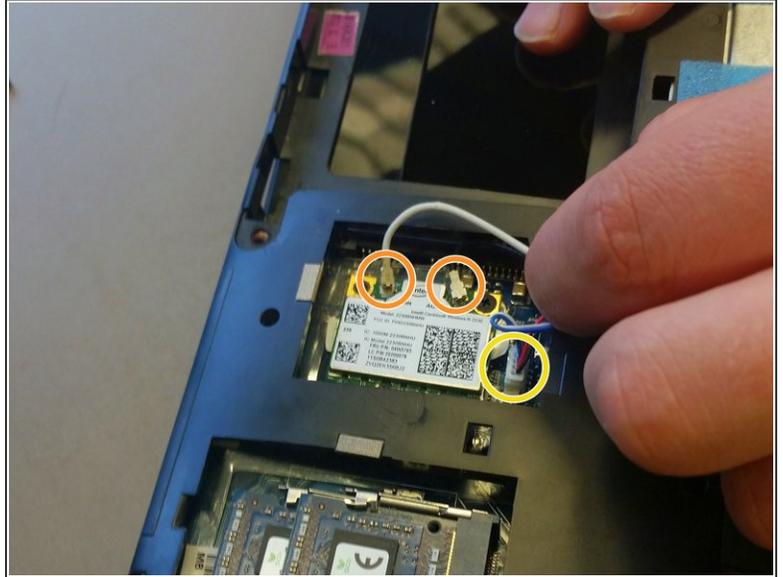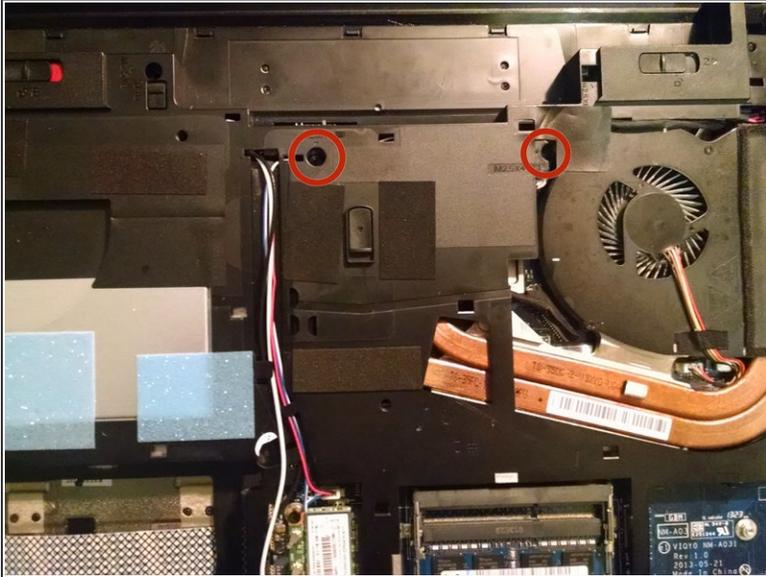



- Remove the two M2.5 x 6mm screws using a Phillips #00 screwdriver.
- Disconnect the two WiFi antenna cables.
- Disconnect the sound connector.

Step 5

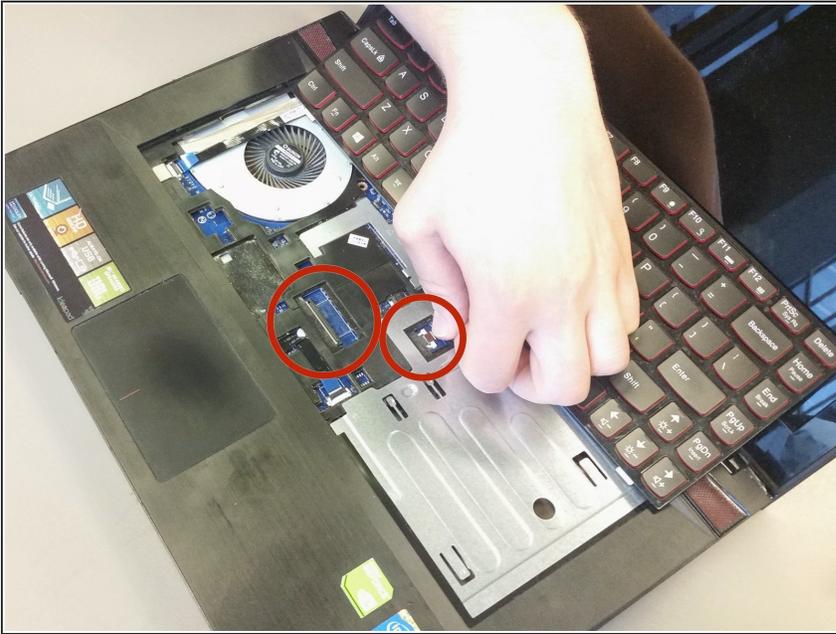

- Open the laptop hinge. Tip the laptop onto its side, and use the back end of the screwdriver to push the keyboard out from the optical drive area.
- Turn the laptop right side up and pry the keyboard up slowly, until it is clear of the case.
- ⚠ Be careful of the ribbon cable when removing the keyboard. The ribbon is still attached.
- Detach the ribbon cables by opening the specified latches.


Step 6 — Removal of Palm Rest

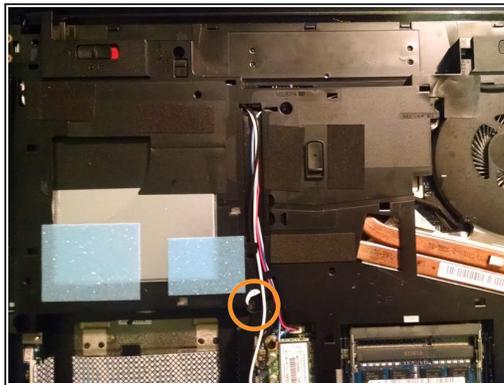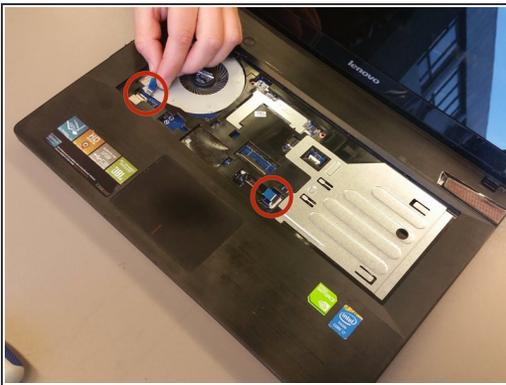

- Detach the ribbon cables by opening the specified latches.
- Turn the laptop upside down and remove the M2.5x8mm screw with Phillips #0 screwdriver.
- Turn the laptop on its side and pry the bottom from the top.
- ⚠ Only partially remove the palm rest; there is still a ribbon cable attached underneath it.
- Remove the ribbon cable by opening its respective latch.



This document was generated on 2020-11-15 08:15:01 AM (MST).

Step 7 — Removal of Motherboard

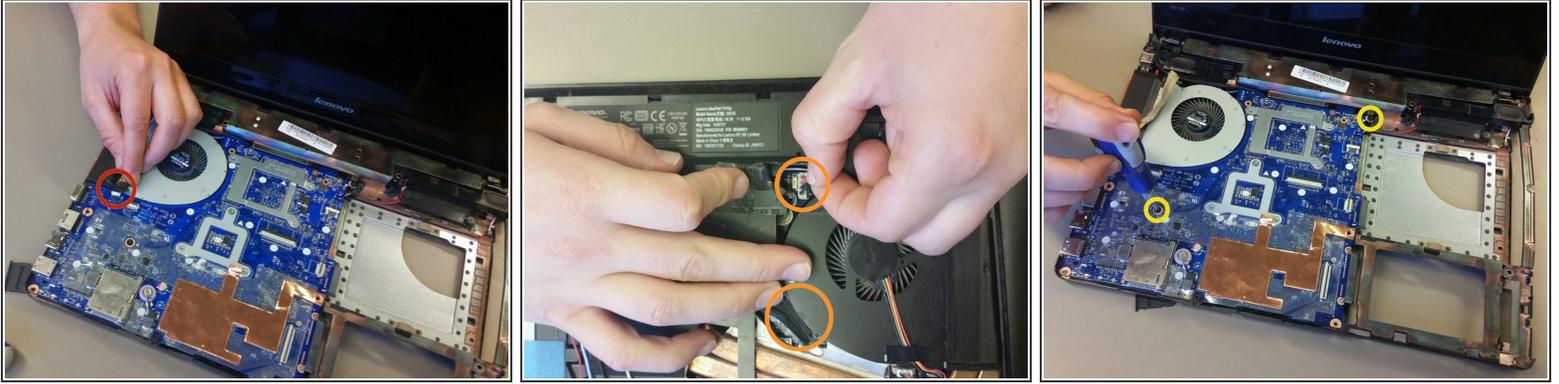


- Remove the specified cable on top of the motherboard.
- Flip the laptop over, and remove the specified cables.
- Remove the two M2.5x4mm screws with a Phillips #0 screwdriver
- Remove the motherboard with hands.

Step 8 — Unscrew Heatsink

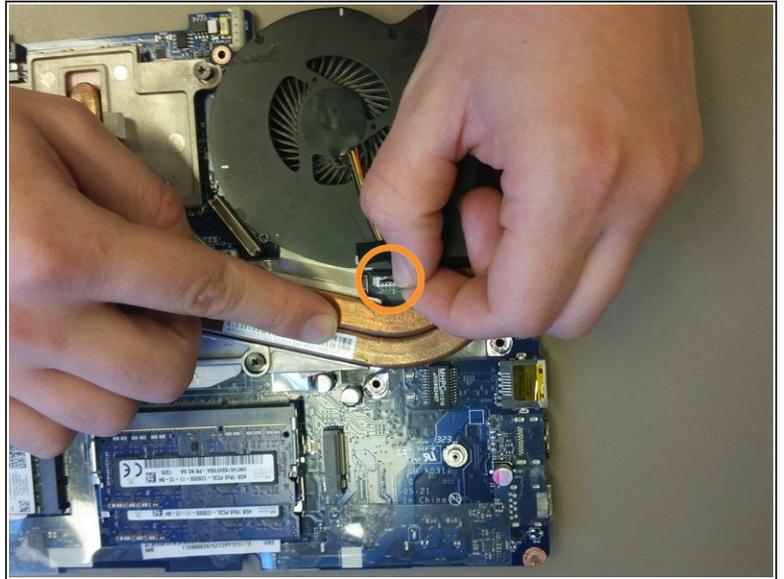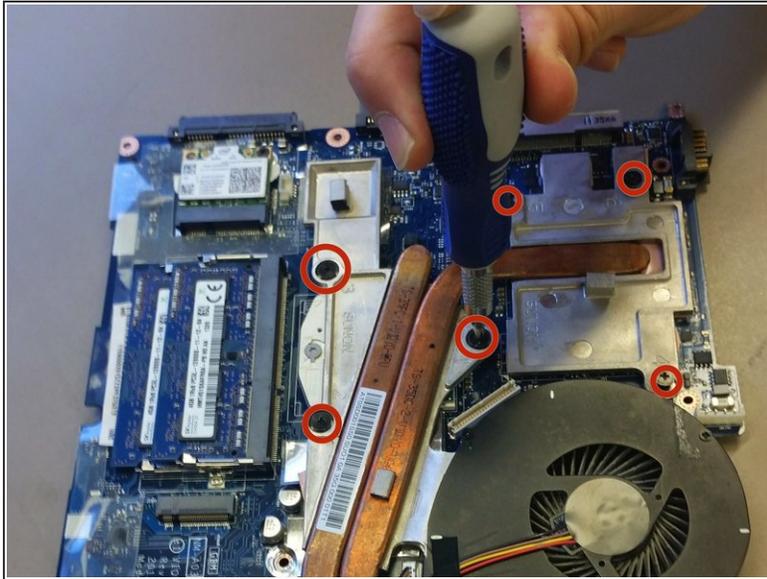



- Unscrew (adequately loosen) the six heatsink screws in the order written on the heatsink. Use a Phillips #0 screwdriver.
 - These six screws are built into the heatsink and will not detach from it.
 - Unplug the fan cable from the motherboard.

Step 9 — Remove the Heatsink

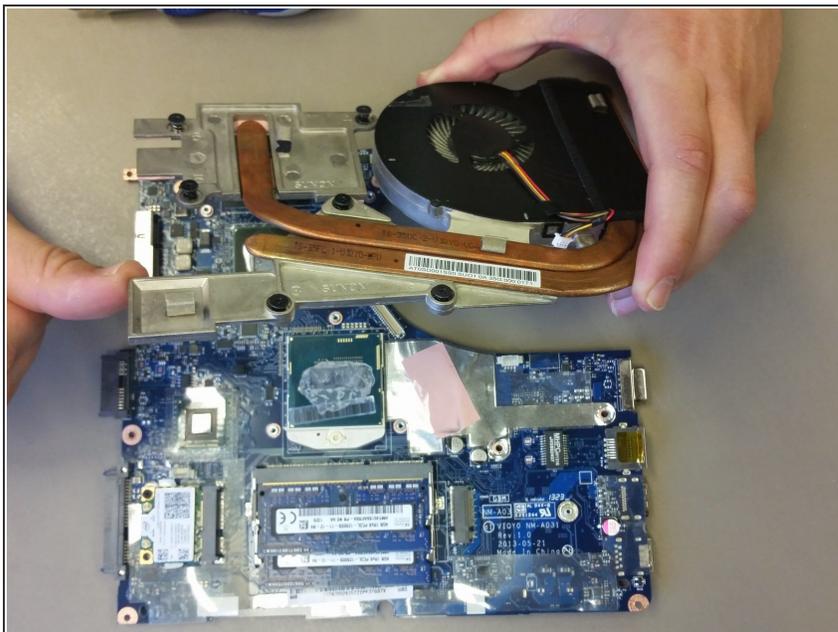


- Gently remove the heatsink with your hand
- ⓘ There may be some resistance due to dried up thermal paste, simply pry the heatsink from the board.

Step 10 — Remove Old Thermal Paste

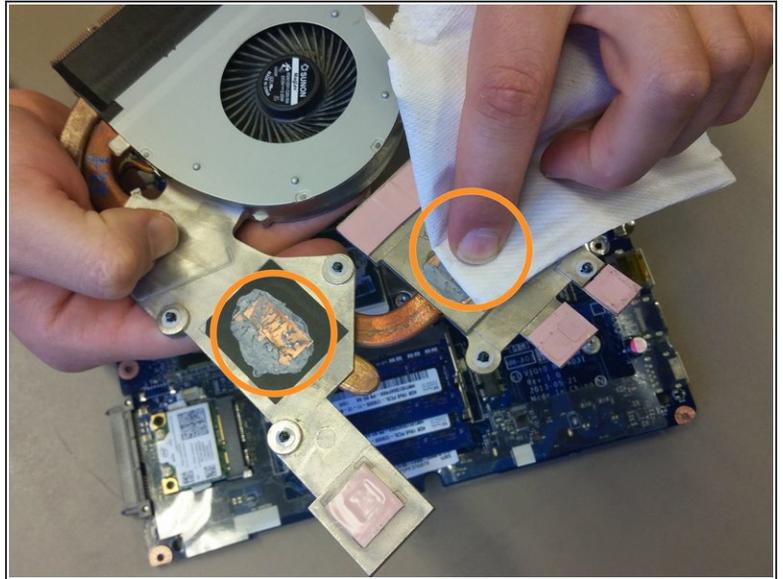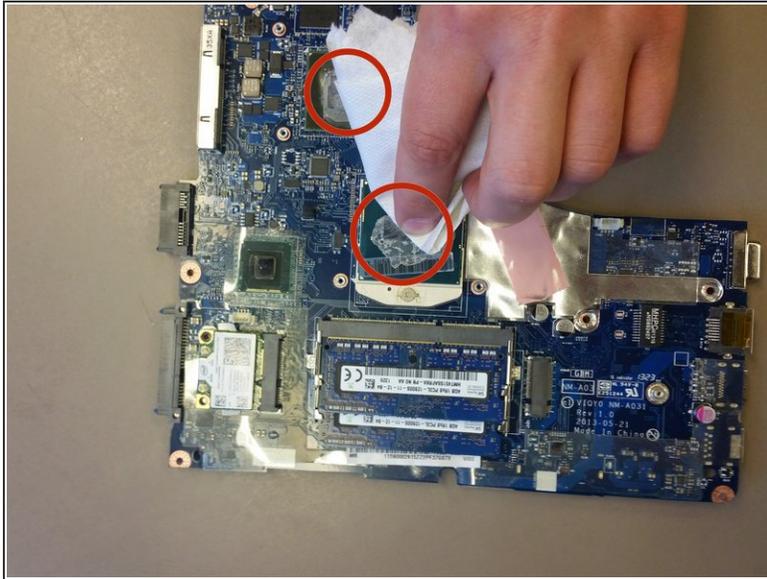

- Find an anti-microbial wipe and gently wipe the old thermal paste from the CPU and GPU
- Now wipe the old thermal paste from the underside of the heatsink
- ⚠ Be careful not to mess up any of the pink thermal pads, these are important for other chips

Step 11 — Apply New Thermal Paste

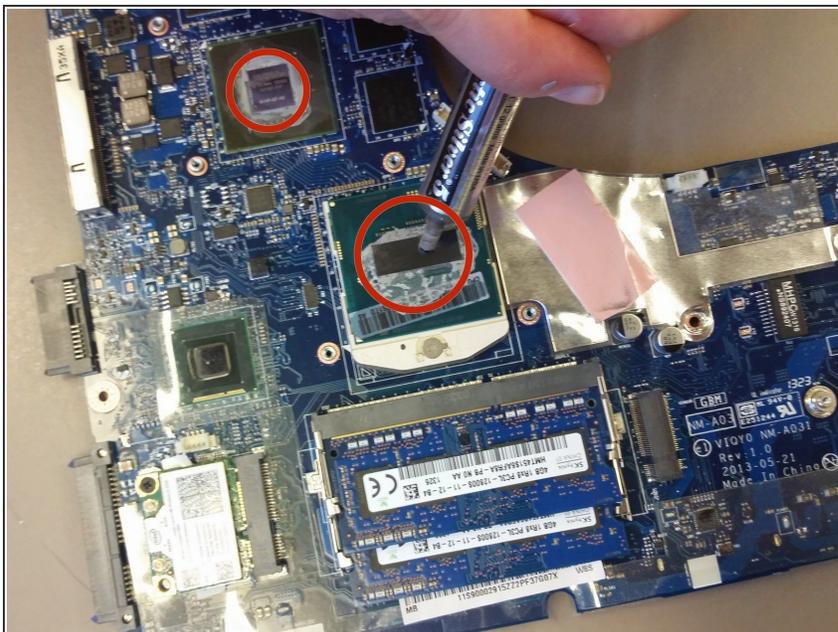

- Apply new thermal paste to the CPU and GPU
- ⓘ Only apply a small bead approximately the size of a pea

To reassemble your device, follow these instructions in reverse order.