


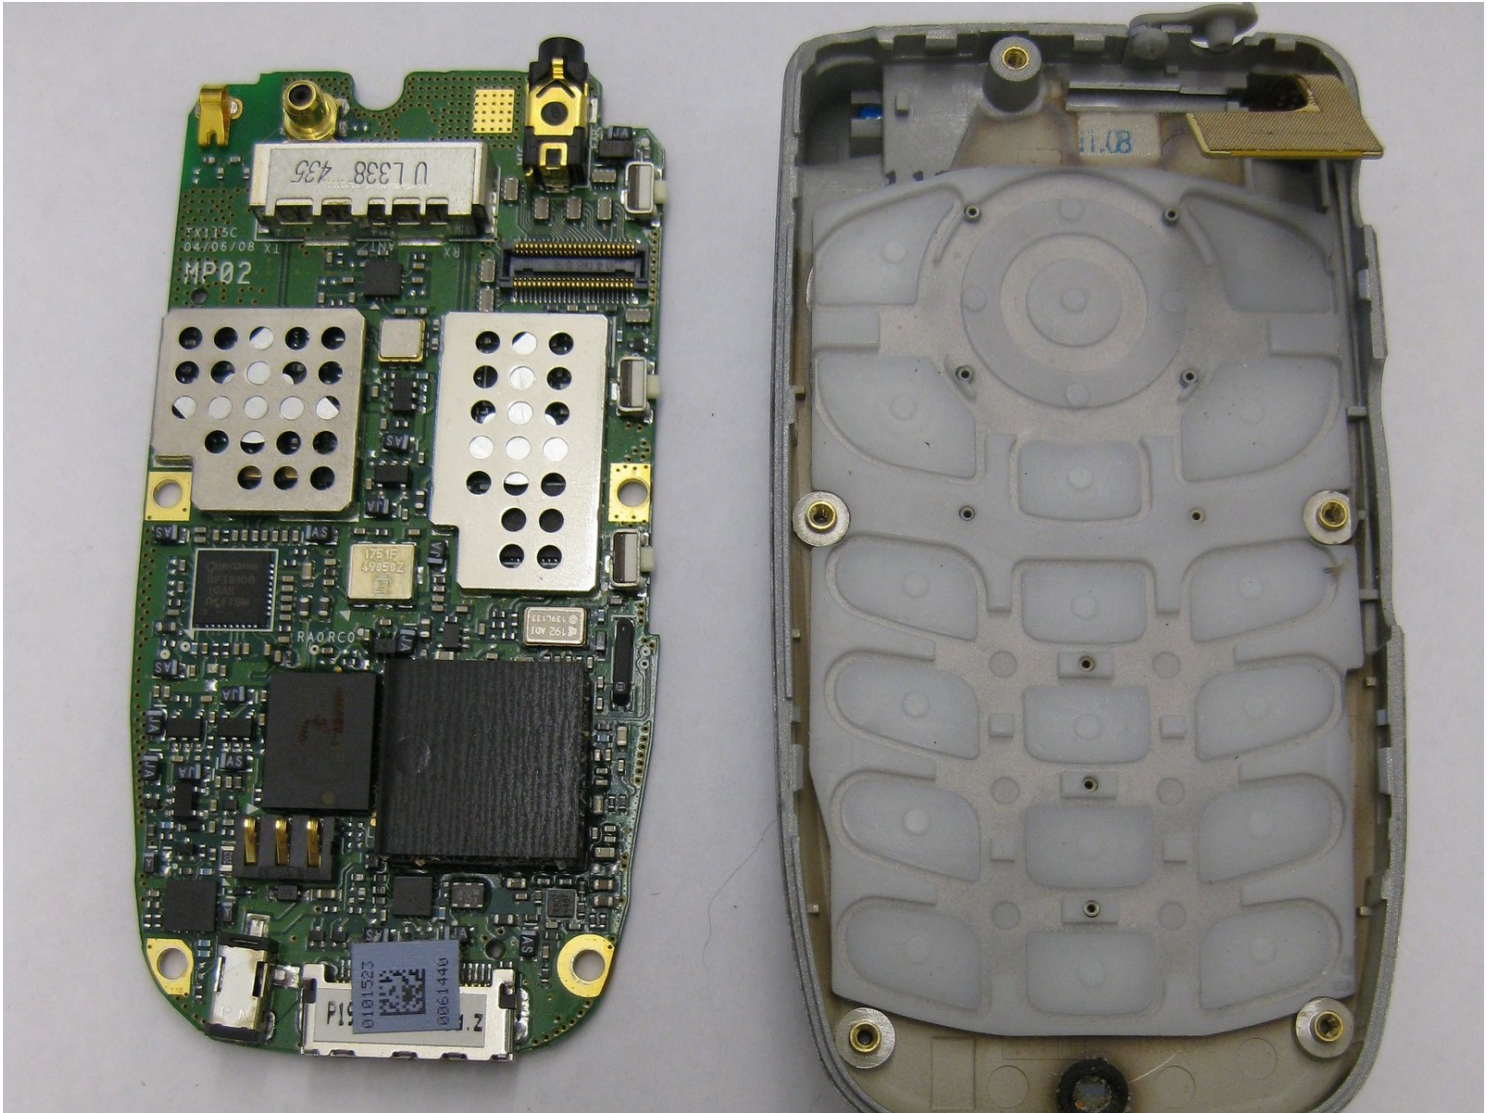

Audiovox CDM-8910 Motherboard Replacement

Written By: Sean Green



TOOLS:

iFixit Opening Tool (1)

Phillips #00 Screwdriver (1)

Step 1 — Battery



- Locate the back side of the phone.
- The battery is the large main compartment (red box).

Step 2



- Use your finger to slide the latch (circled) upwards.
- While holding the latch up, pull the battery off the phone.

Step 3



- The back of the phone will look like this when the battery is correctly removed.

Step 4 — Rear Case



- Peel the rubber indicated toward the top of the phone

Step 5



- Remove the screw that sits underneath the rubber covering.

Step 6



- Remove the five (5) total screws using a Philips head screwdriver.

Step 7






- Use spudger and insert it towards the bottom of the phone as pictured.
- Carefully working yourself around the phone with the spudger, pry it open. This may require a bit of force.
- The volume control button will be loose, so make sure to take it out once the rear case is fully removed.

Step 8




- The back case should now be completely removed and the motherboard will be visible.

Step 9 — Motherboard

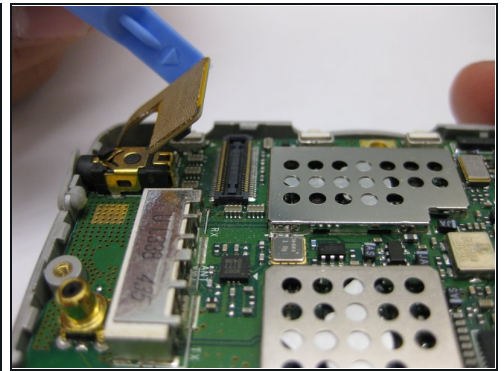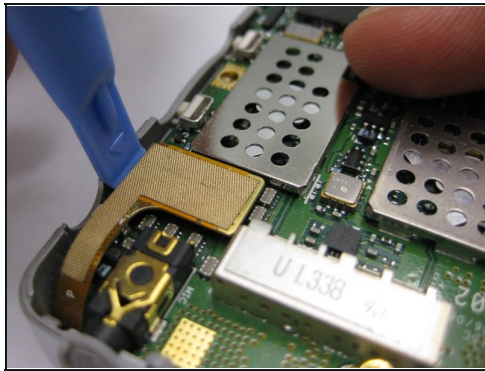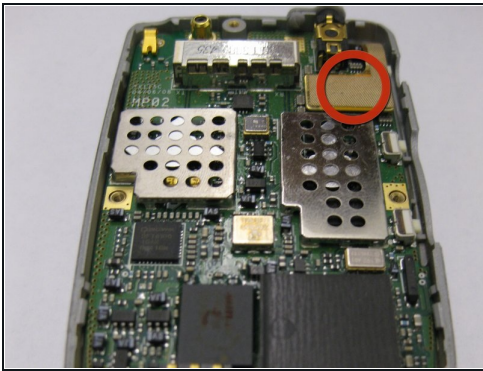


- Disconnect the gold connection patch
- Use a spudger or finger to disconnect the piece.

Step 10

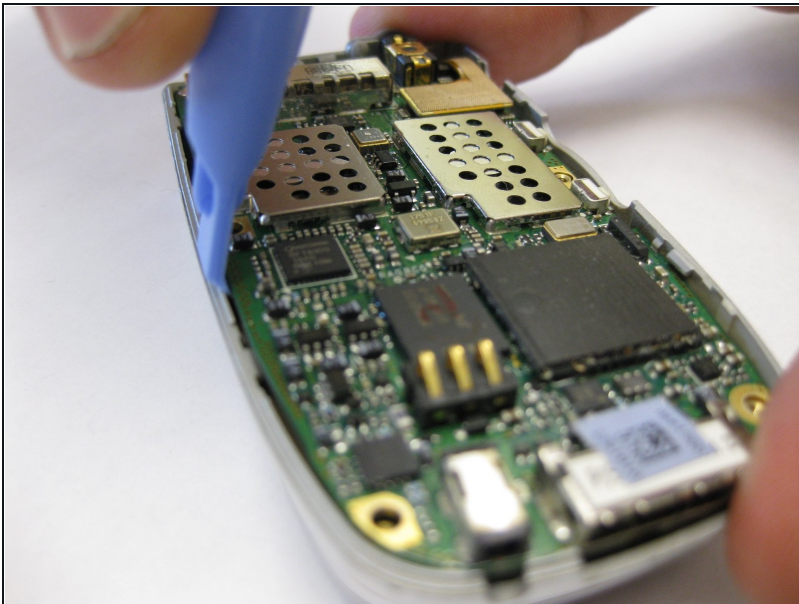

- Using a spudger, lift the motherboard out of the phone case as pictured.

Step 11

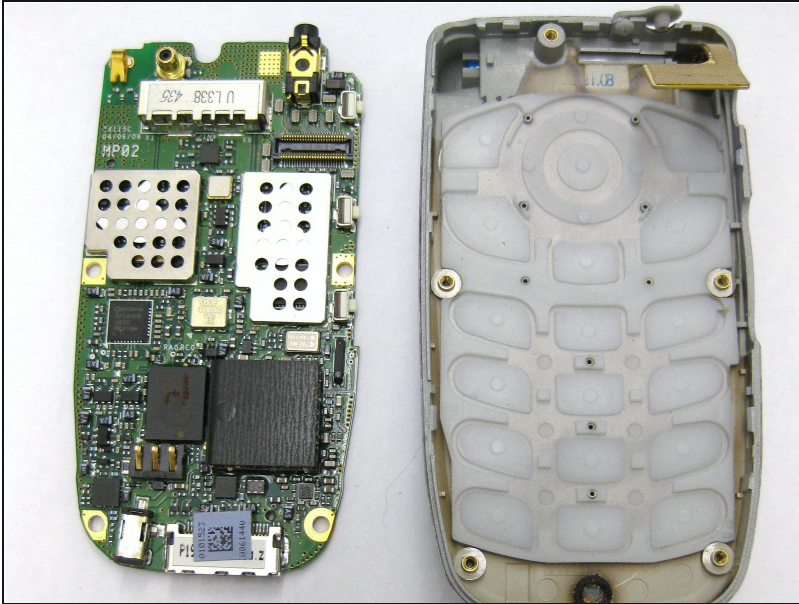

- The motherboard should now be completely removed from the phone.

To reassemble your device, follow these instructions in reverse order.