



Sony Cyber-shot DSC-W570 Case Cover Replacement

Replace front and back cover.

Written By: Zizheng Su



INTRODUCTION

Outline what you are going to teach someone how to do.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Case Cover



- Remove the two Phillips head, 2.93 mm long screws at the bottom of the camera.
- ⓘ Make sure the battery compartment door is in lock position.

Step 2



- Turn the camera sideways so the left side is facing upwards, remove the two Phillips head, 2.93 mm screws.

Step 3



- Now turn the device so the opposite side is facing upwards and remove the last two Phillips head, 2.93 mm screws.

Step 4



- To remove the front cover, use a plastic opening tool gently pry the top cover.
- Then gently lift the cover off.

Step 5



- To remove the back case cover from the body.
- First use a plastic opening tool gently pry along the side of the camera.
- Then slowly and gently lift the cover off.

To reassemble your device, follow these instructions in reverse order.