



# Motorola RAZR Maxx HD Front-Facing Camera Replacement

Use this guide to remove the front-facing camera.

Written By: Jacob Syage



---

## INTRODUCTION

The front-facing camera is an independent part attached to the main LCD display frame. This guide involves the removal of various screws and parts so make sure you are in a clean and organized environment to avoid the loss of any components.

---

### TOOLS:

- [Spudger](#) (1)
  - [Tweezers](#) (1)
  - [T3 Torx Screwdriver](#) (1)
  - [Paper Clip](#) (1)
  - [T5 Torx Screwdriver](#) (1)
-

## Step 1 — Screen Removal





- Use the Torx T5 Screwdriver to remove two 5.0 mm screws at the bottom of the phone.

## Step 2




- To remove the SIM card, use an unfolded paperclip to press down on the metal plate on the left side of the phone until it pops up.

### Step 3

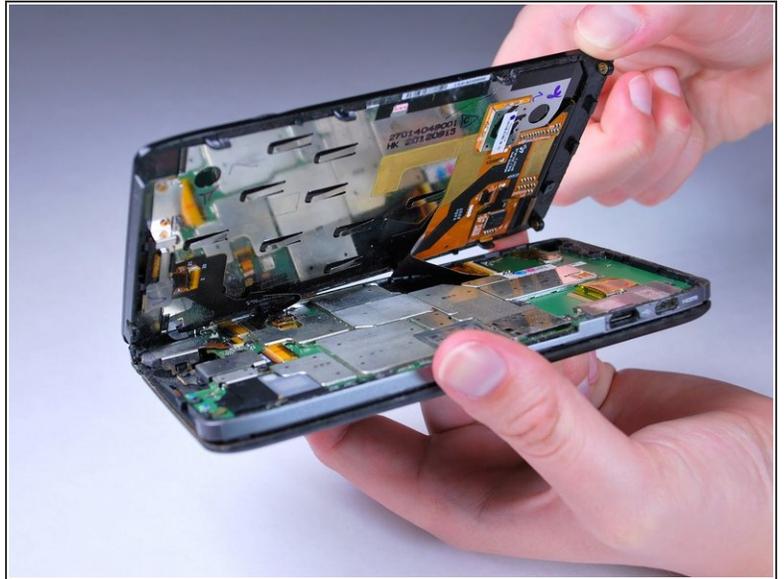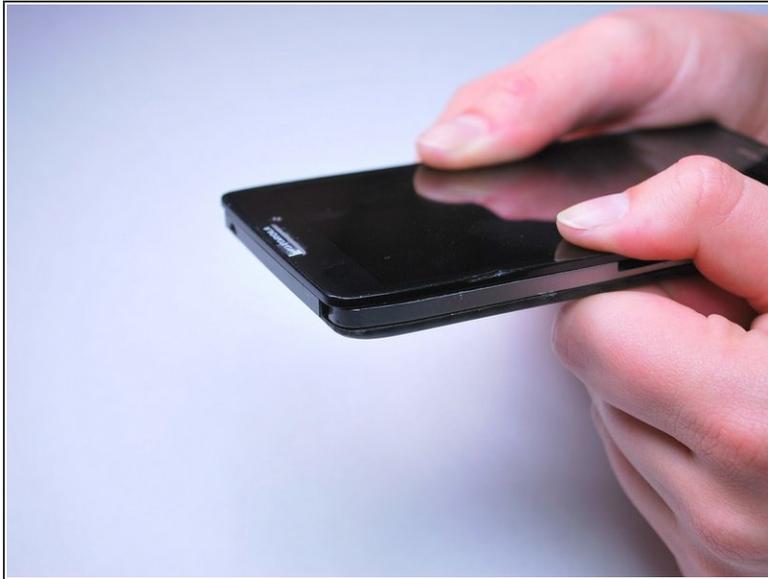

- Gently push the screen toward the top edge of the phone and tilt the screen to reveal the black flex cables.
-  Do NOT remove the screen all the way or the flex cables will be damaged.

## Step 4

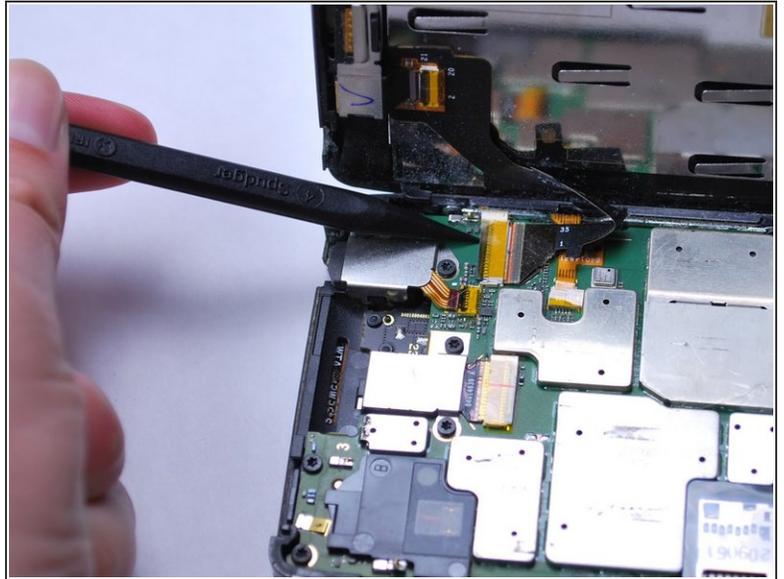


- Release the two black ribbon flex cables by gently pulling up on the connection using the spudger. Then lift the screen to remove.
  - ⚠ Make sure to remove the flex cables before completely removing the screen.
- ⓘ When reassembling, align the white bands on the edge of the screen so that a connection is made.

## Step 5 — Front-Facing Camera




- On the back of the LCD display, release the yellow front-facing camera ribbon cable by gently lifting upward on the black retaining clip with the spudger.

## Step 6

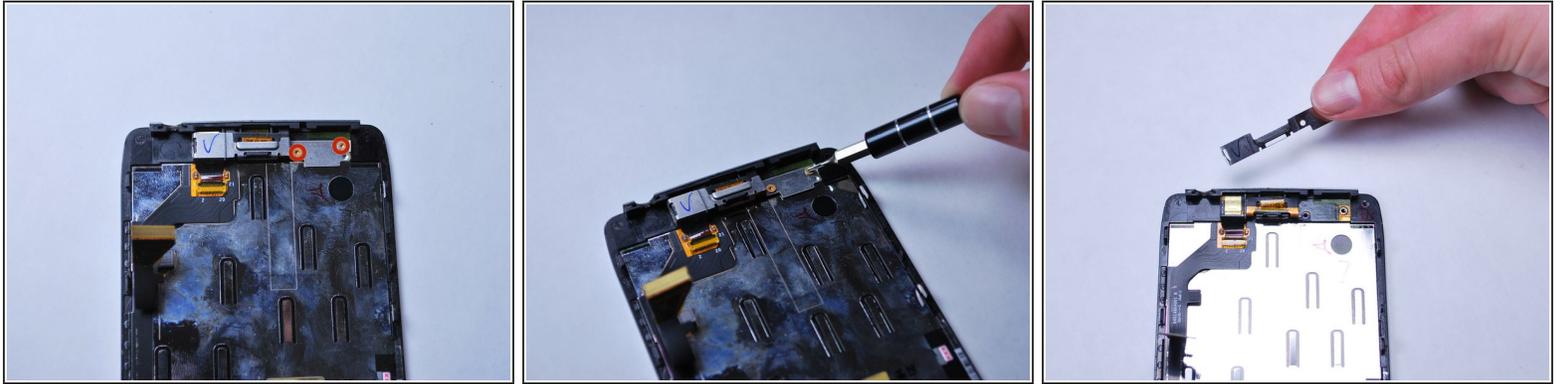

- With a Torx T3 screwdriver, unscrew the two 2.0 mm screws on front-facing camera mounting bracket. Then lift to remove it.

## Step 7

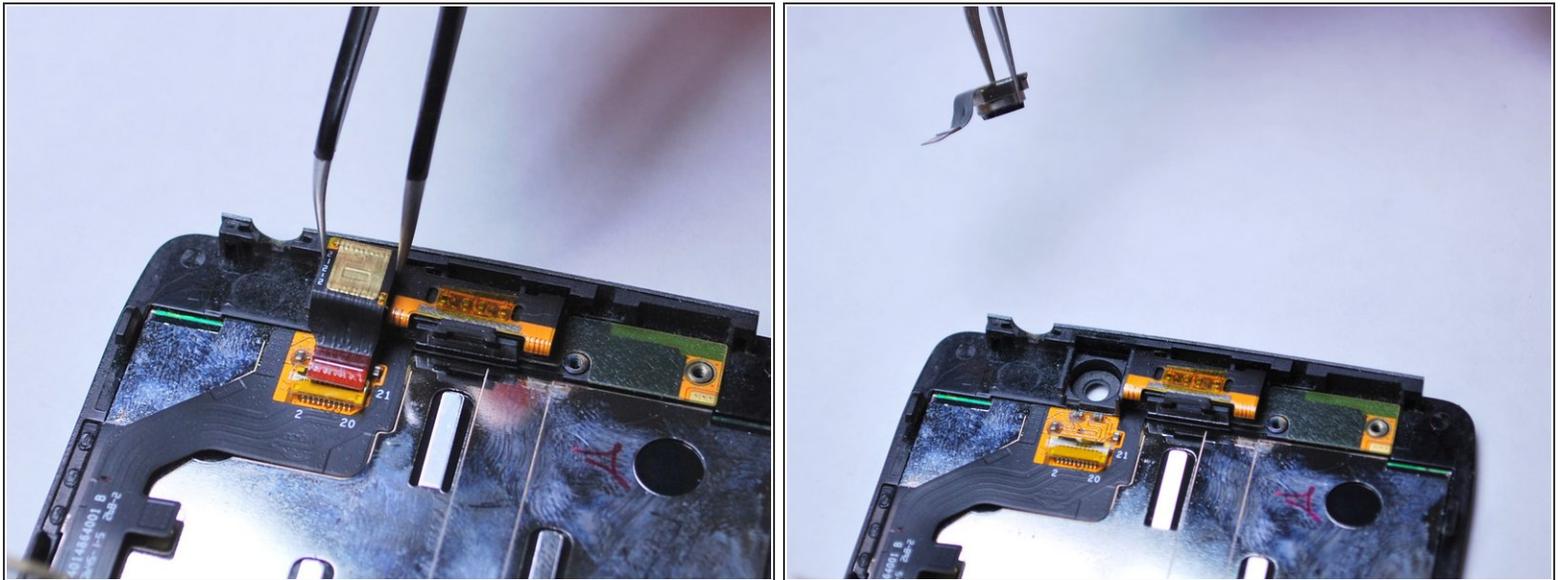

- Use tweezers to remove the front-facing camera by lifting it from the LCD display frame.

To reassemble your device, follow these instructions in reverse order.