

Canon PowerShot A590 IS Clock Battery Replacement

Locate and remove the clock battery from the...

Written By: Matt Wolfe



INTRODUCTION

Locate and remove the clock battery from the camera.


TOOLS:	PARTS:
 Phillips #00 Screwdriver (1) 	 AA Batteries (1)

Step 1 — Batteries



- (i) The battery hatch is on the bottom of the camera.
- CAUTION: Locate the switch to open the hatch and push gently toward the front of the camera. Too much force can break the hatch.
- While the switch is pushed forward, pull the cover away from the camera.

Step 2

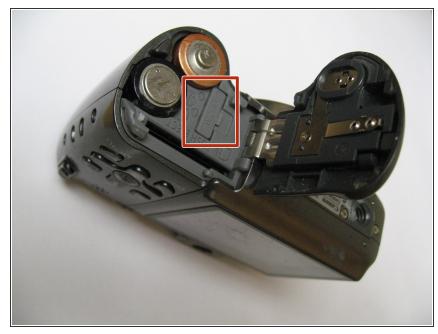


- (i) This camera requires AA batteries.
- To remove batteries, simply allow them to fall out of the camera.
- Use a fingernail to lift the clock battery out of the camera.

Step 3



When replacing the AA batteries, verify they are oriented correctly by following the (+) and (-) signs on the camera.

Step 4 — Locate Clock Battery

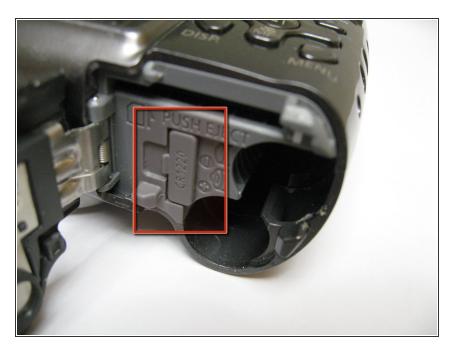


• To access the clock battery, find the clock battery cover, shown here in the red square.

Step 5 — Remove Battery Tab



• When accessing the clock battery, use a fingernail or similar small instrument to gently pull the tab out.

Step 6 — Remove Battery from Tab

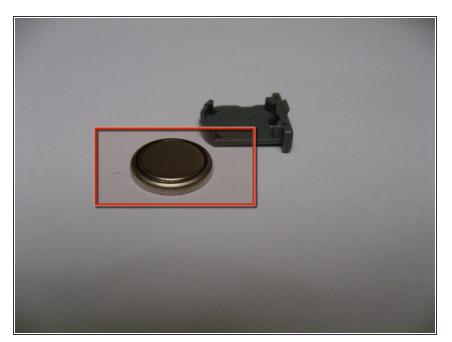

- Now that you have the tab and battery removed, use a fingernail or other small tool to remove the battery from the tab.
- This battery is a CR1220 type watch battery.

Step 7 — Replacing Clock Battery



- When replacing the clock battery, be sure to have the battery oriented properly, as shown in the picture.
- Remember, the tab goes in with the exposed side of the battery facing towards the lens.

To reassemble your device, follow these instructions in reverse order.