




Panasonic Lumix DMC-FX01 LCD Screen Replacement

This guide shows how to remove the LCD screen...

Written By: Andrew

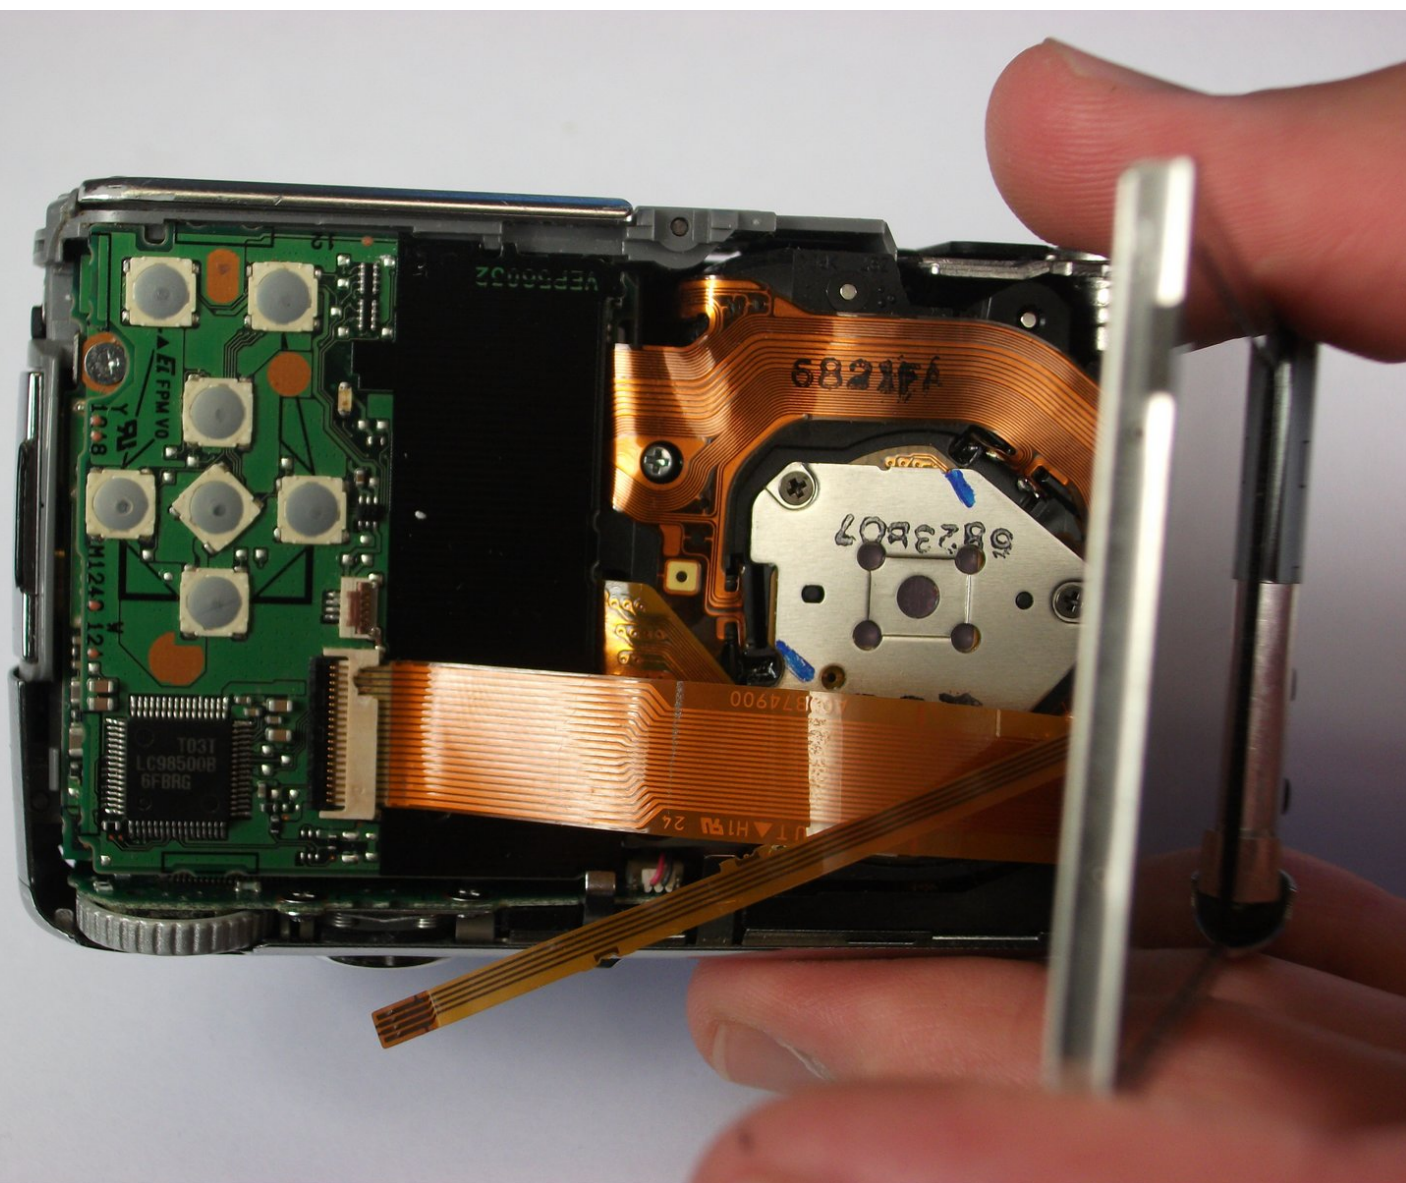

INTRODUCTION

This guide shows how to remove the LCD screen from the circuit board and replace it.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tool](#) (1)
-

Step 1 — Battery



- Locate the memory card and battery card latch on the bottom of the camera.
- Slide the latch to the open position.

Step 2



- Open the battery latch, and slide the battery release lever to the right.

Step 3



- Remove the battery from the camera.

Step 4 — Rear Casing



- Remove the three 4.6 mm screws on the bottom of the camera using a Phillips #00 screwdriver.

Step 5



- Remove the single 3.2 mm screw on the left side of the camera using a Phillips #00 screwdriver.

Step 6




- Remove the left side casing.

Step 7



- Remove the two 3.2 mm screws on the right side of the camera using a Phillips #00 screwdriver.

Step 8

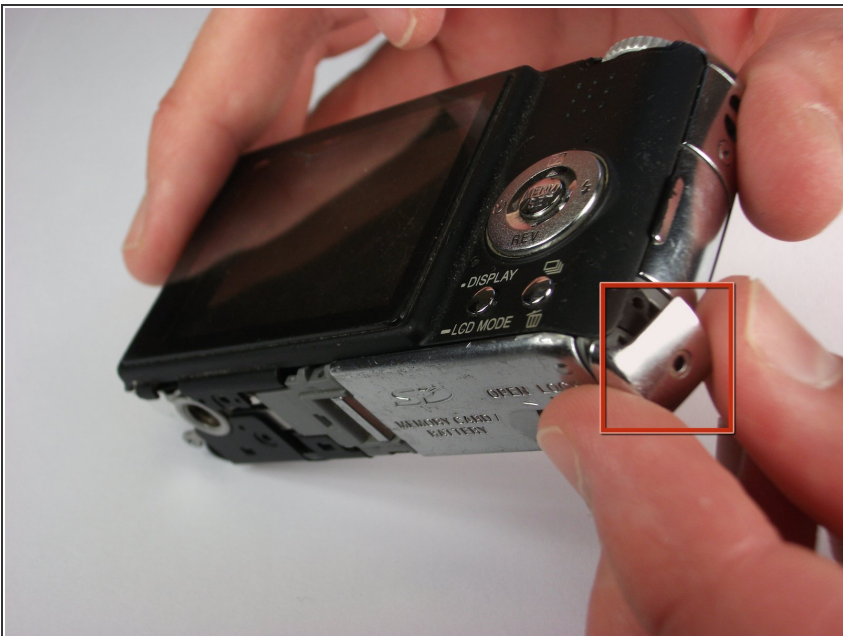


- Remove the bottom right panel.

Step 9




- Gently remove the back casing.
- Start at the bottom and carefully pry towards the top to get this piece free.

Step 10 — LCD Screen

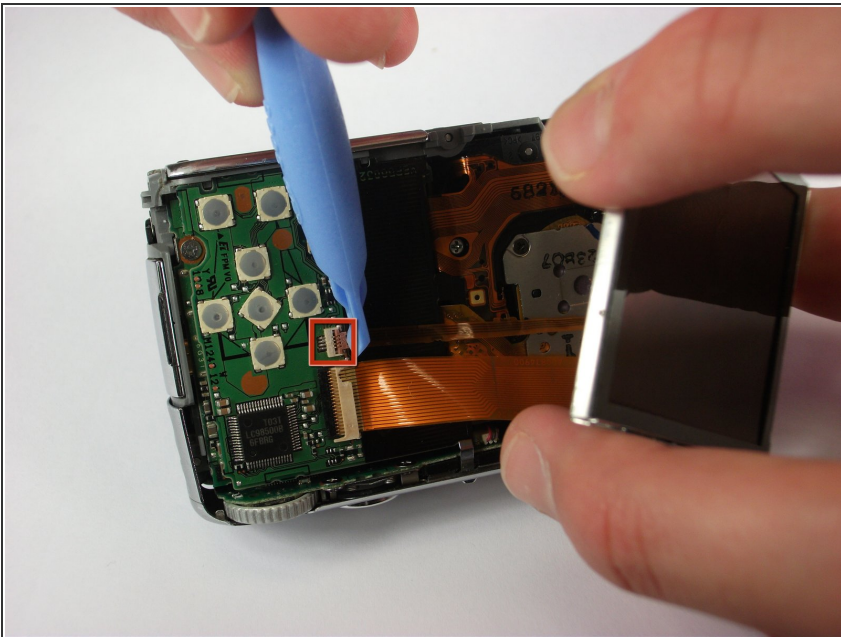

- Gently lift up the LCD screen.
- Using a plastic prying tool, flip up the latch that holds the thin ribbon in place.
- It should fall out on its own or with a gentle tug.

Step 11

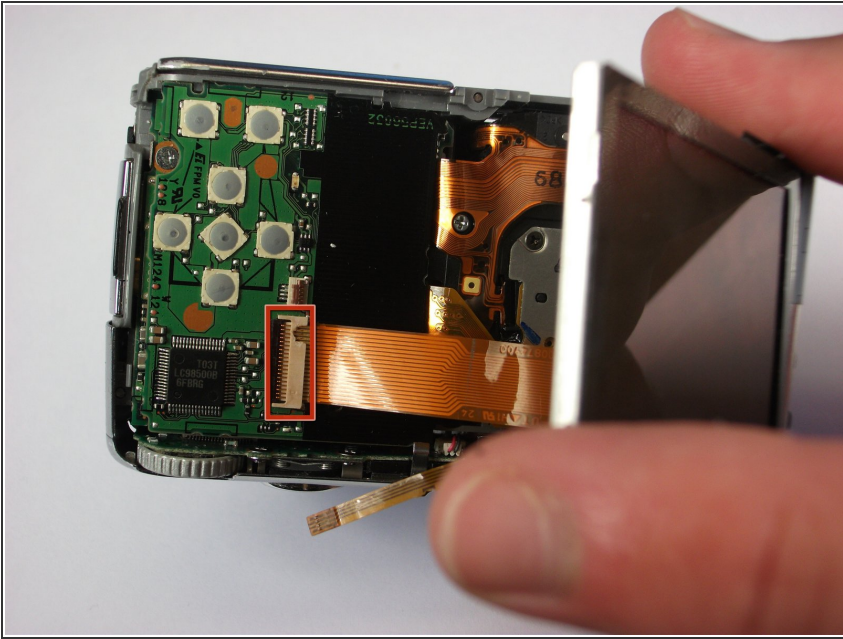

- Gently tug the thicker ribbon to remove it from its housing.

To reassemble your device, follow these instructions in reverse order.