



Fujifilm FinePix XP50 Battery Replacement

Replace the battery in your Fujifilm FinePix XP50.

Written By: Catherine Daniel



INTRODUCTION

In order to keep your camera functioning properly, and working battery is vital. A dead or drained battery will prevent the camera from turning on, taking photos, using flash, etc. Replacing the battery or removing for charge is quick and simple.



PARTS:

- [Fujifilm Li-Ion Battery NP-45A](#) (1)

Step 1 — Battery



- Slide the lower silver tab labeled "1" down.
- Slide the upper silver tab labeled "2" down. Once the second tab is flipped, the door will spring open.

Step 2



- Slide small orange tab to release the battery.

Step 3



- Simply insert the new battery following the black arrow printed on the battery, matching the orange side of the battery to the orange rubber of the inner battery door.
- The orange tab will automatically move to hold the battery in place upon insertion.

To reassemble your device, follow these instructions in reverse order.