



Waka Waka Power Plus Battery Replacement

This guide explains how to open the Waka Waka Power Plus and remove the battery.

Written By: Emma



INTRODUCTION

In this guide you will learn, step-by-step, how to open the Waka Waka Power Plus and remove the battery.



TOOLS:


- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Open plastic cover



- Lay device so power button is facing up.
- Lift the plastic cover from the center of the device.

Step 2 — Rubber dots

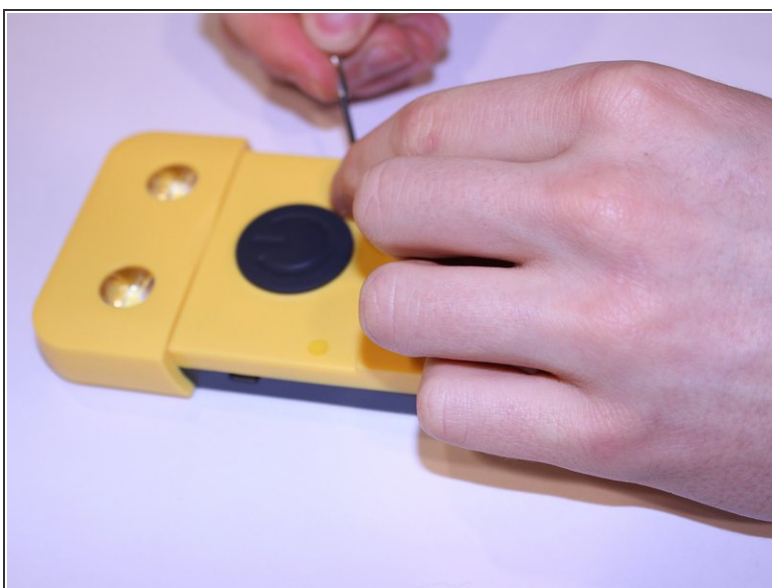


- Remove yellow rubber dots.

Step 3 — Screws



- Remove the two 5mm screws with a #0 Phillips screwdriver.

Step 4 — Remove casing

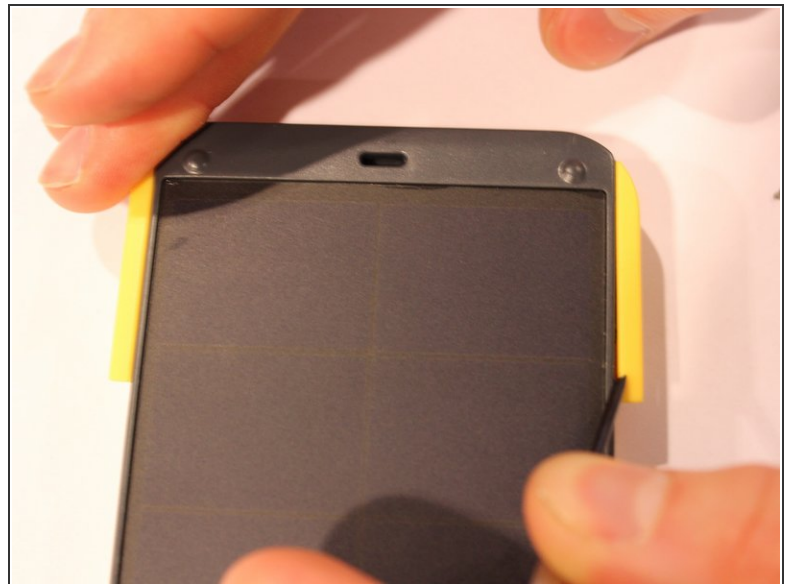

- Carefully remove yellow casing.


⚠ This might take prying force.

Step 5 — Black casing with battery





- You now separated the black part containing the battery and the yellow case.
- Remove the springs and their white casings to easily reach the battery.

Step 6 — Unplug

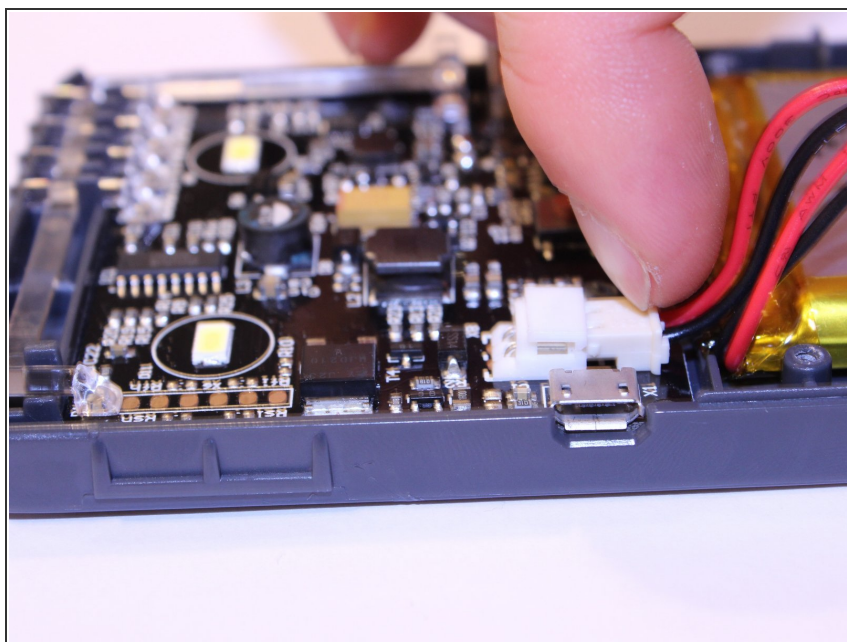

- Unplug the battery from the motherboard.

Step 7 — Lift out

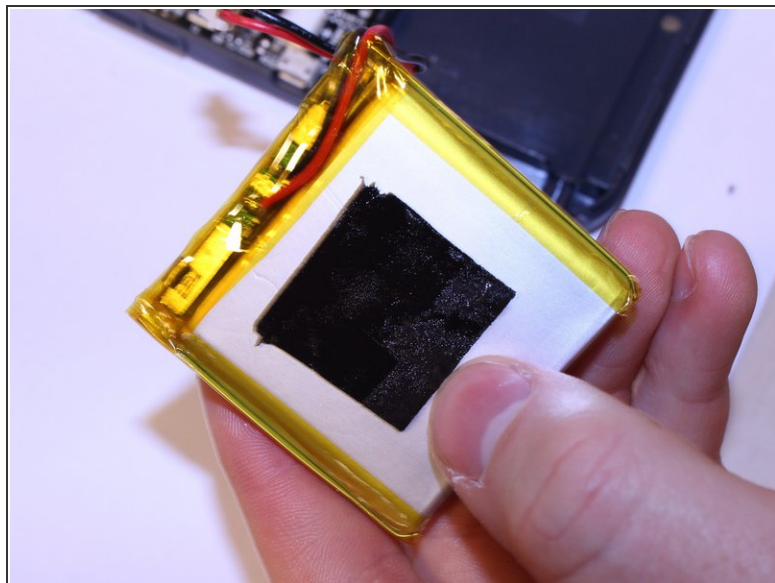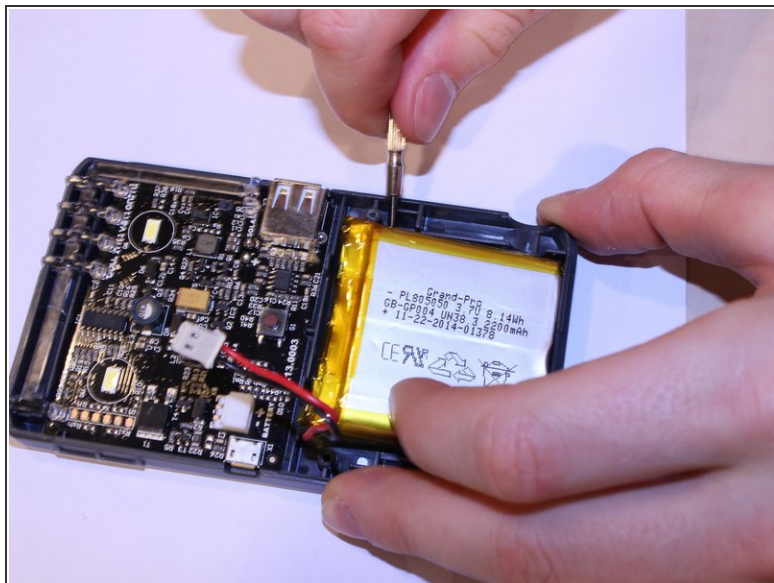

- Remove the battery by lifting it out.
- ⓘ The battery is stuck with double sided tape and may take some effort to remove.

Replacement batteries can be found online. After placing in the new battery reassemble your device, follow these instructions in reverse order.