



# Garmin StreetPilot C330 Outer Casing Replacement

How to replace the outer casing of a Garmin StreetPilot C330.

Written By: Adrian Leon



---

## INTRODUCTION

This guide will help you replace the outer casing of your Garmin StreetPilot C330.

---

### TOOLS:

- [Spudger](#) (1)
  - [Tweezers](#) (1)
  - [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Outer Casing



- At the top of the outer frame, insert the plastic spudger into the groove in the center.
- Lever the frame gently until it pops out of the case.

## Step 2



- Use a Phillips #00 screwdriver to remove the four screws around the screen.

## Step 3



- Gently pull from both ends of the casing to separate the front and back panels.

**⚠ Do not force the pieces apart wider than the length of the connecting wires, or you will damage the wiring.**


## Step 4



- Gently unplug the white cable connector using either your fingers or tweezers.



## Step 5

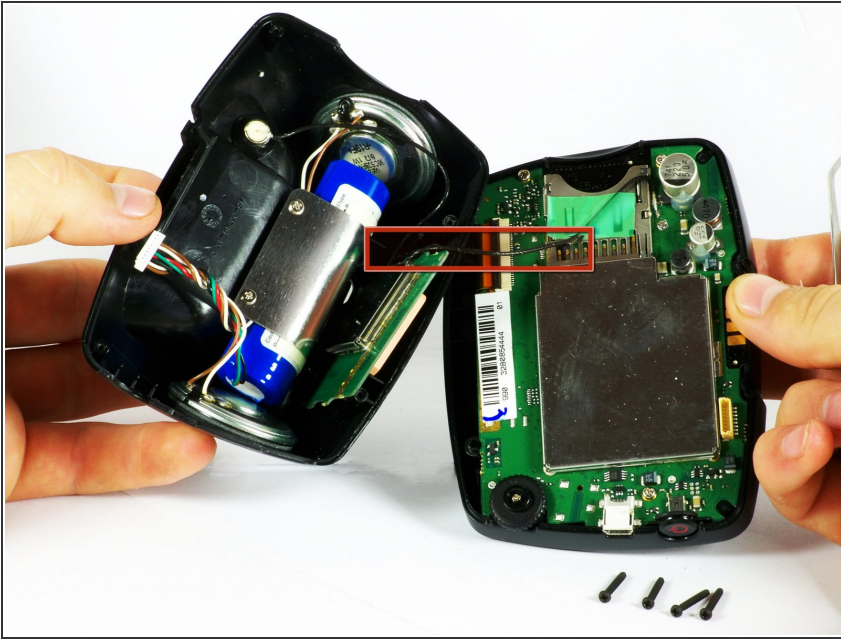

- Carefully expose both halves of the device.
- ⚠ Be sure not to pull the two halves apart further than the black wire can reach.

To reassemble your device, follow these instructions in reverse order.