



Kodak EasyShare C913 LCD Screen Replacement

If your Kodak EasyShare C913 screen is cloudy...

Written By: Alan Galarza



INTRODUCTION

If your Kodak EasyShare C913 screen is cloudy or scratched, use this guide to remove and replace the screen. Special skills needed.

Before replacing screen, you will need to remove batteries and the casing of the camera.

TOOLS:

[Desoldering Braid](#) (1)

[Phillips #00 Screwdriver](#) (1)

[Lead-Free Solder](#) (1)

[Soldering Iron 60w Hakko 503F](#) (1)

Step 1 — Batteries



- Position the camera with the bottom facing up.
- Slide the battery cover in the direction of the arrow with your finger gently.
- Remove the batteries

Step 2 — Back Case




- Remove the seven 4.5mm screws with a Phillips #00 screwdriver.
 - 2 on the left
 - 2 on the right
 - 3 on the bottom

Step 3




- Firmly grasp the back of the camera and pull the away the casing.

Step 4 — Front Case

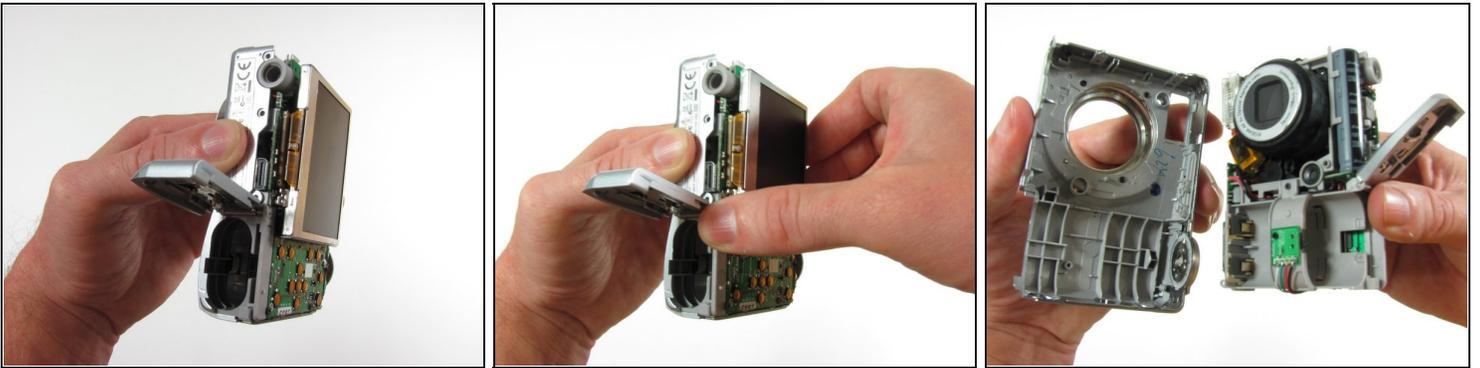


- Keep the battery door open
- Firmly grasp the front casing and pull away from the camera.

Step 5 — LCD Screen

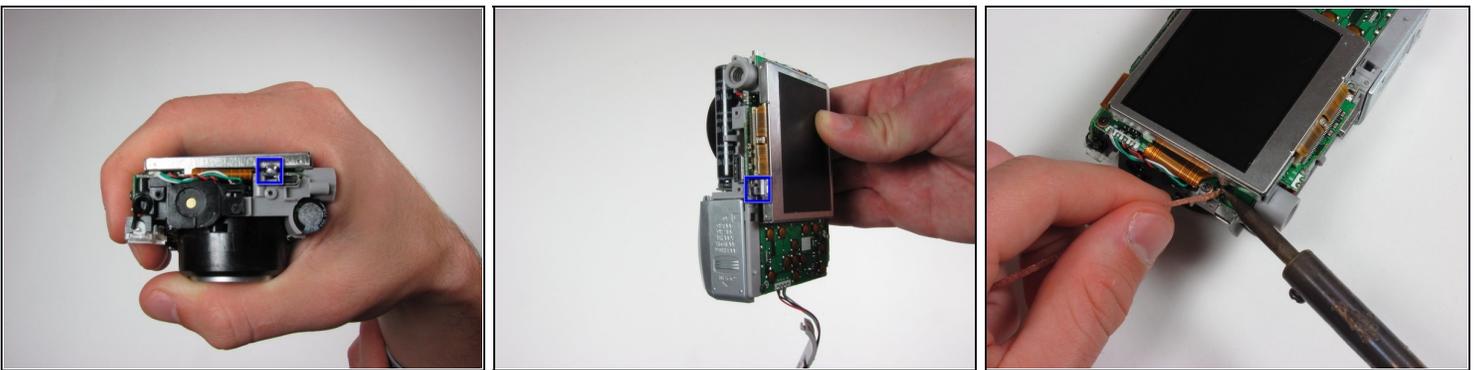


- Locate the 2 solder joints on both sides of the LCD casing.
- De-solder the joints.

Step 6

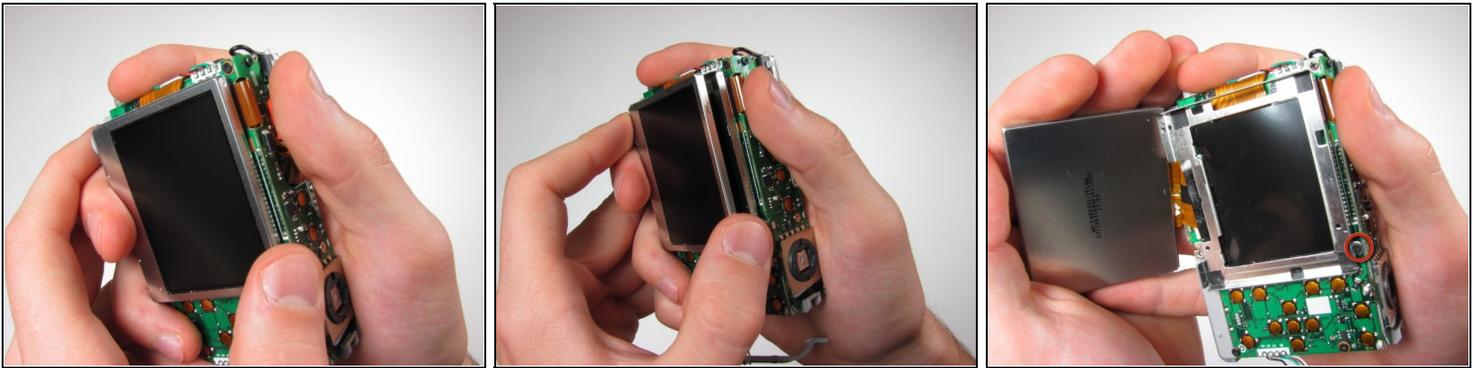



- Gently grasp the lower right side of LCD screen.
- Lift the screen out of its casing.
- Remove 3mm screw from LCD casing using #00 screwdriver.

Step 7

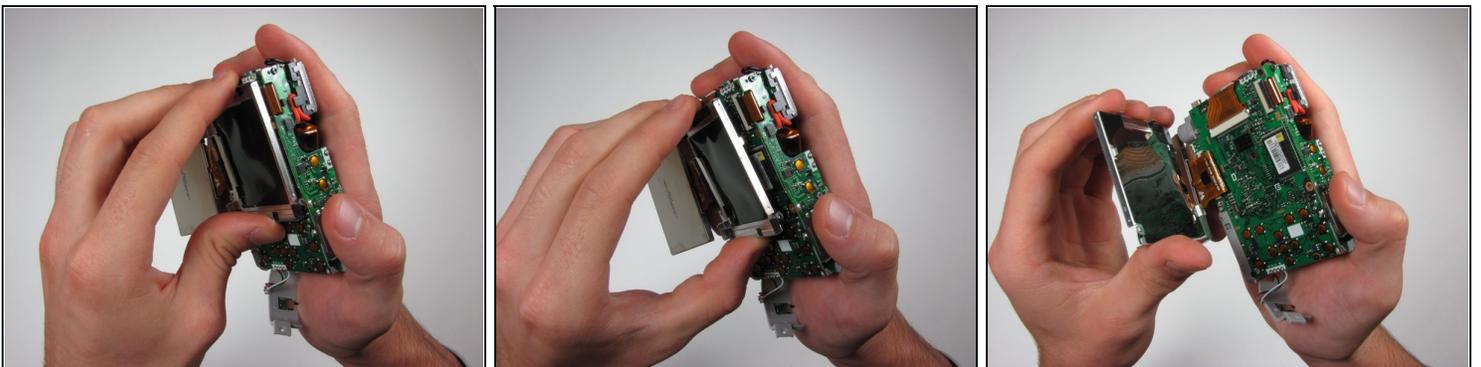

- Gently grab the sides of the LCD casing and remove it from the camera

Step 8

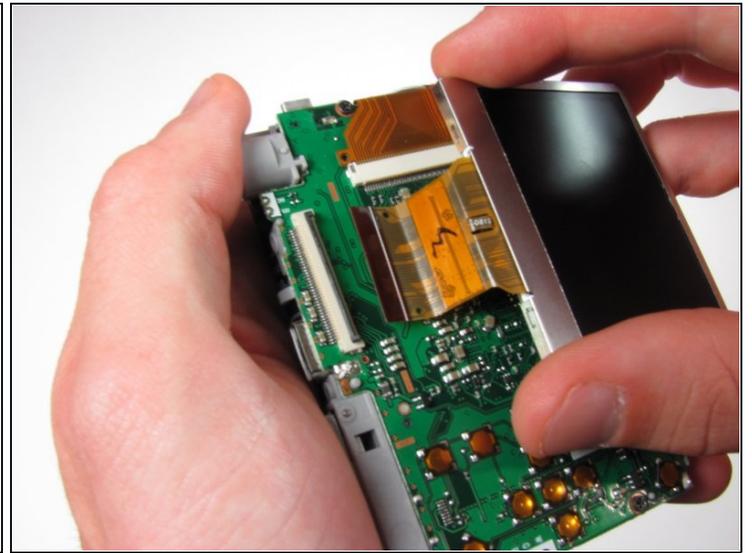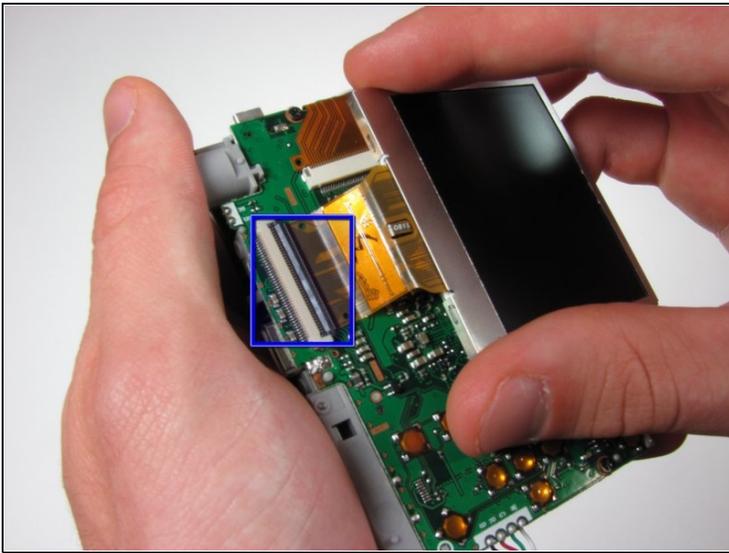

- Lift the black tab with your finger
- Gently remove ribbon from underneath black tab.

To reassemble your device, follow these instructions in reverse order.