




Garmin StreetPilot c330 Speakers Replacement

Written By: Michael

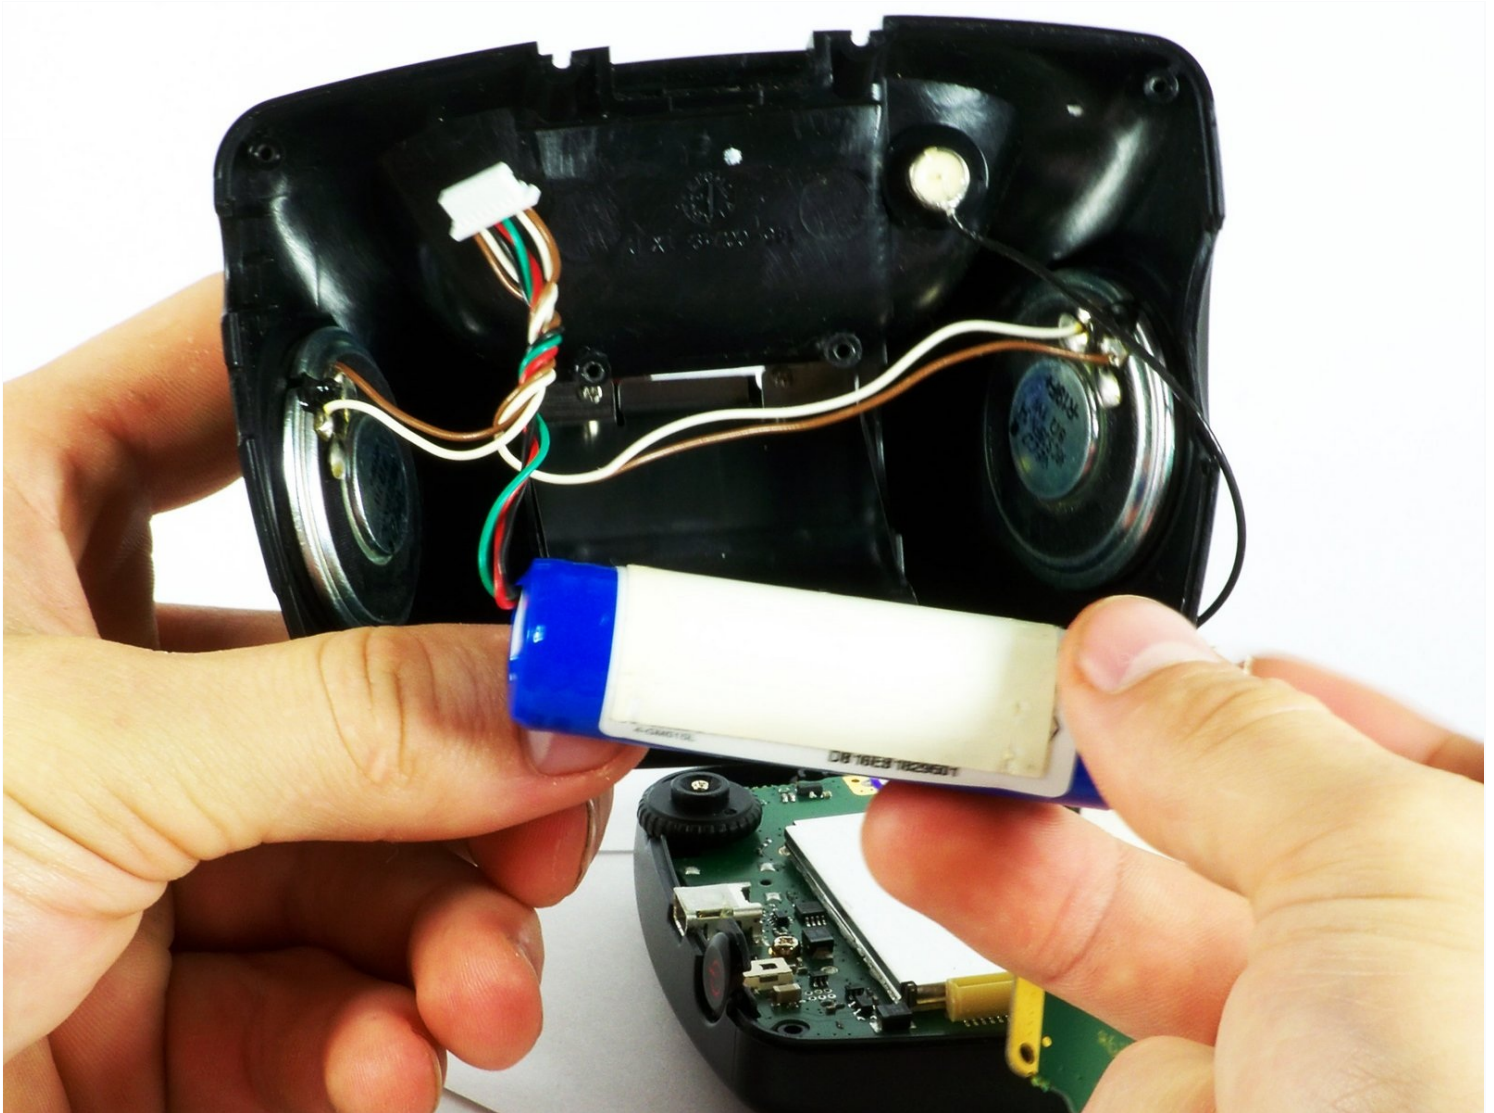

TOOLS:

Spudger (1)

Tweezers (1)

Phillips #00 Screwdriver (1)

Soldering Workstation (1)

Step 1 — Outer Casing



- At the top of the outer frame, insert the plastic spudger into the groove in the center.
- Lever the frame gently until it pops out of the case.

Step 2



- Use a Phillips #00 screwdriver to remove the four screws around the screen.


Step 3



- Gently pull from both ends of the casing to separate the front and back panels.

⚠ Do not force the pieces apart wider than the length of the connecting wires, or you will damage the wiring.

Step 4

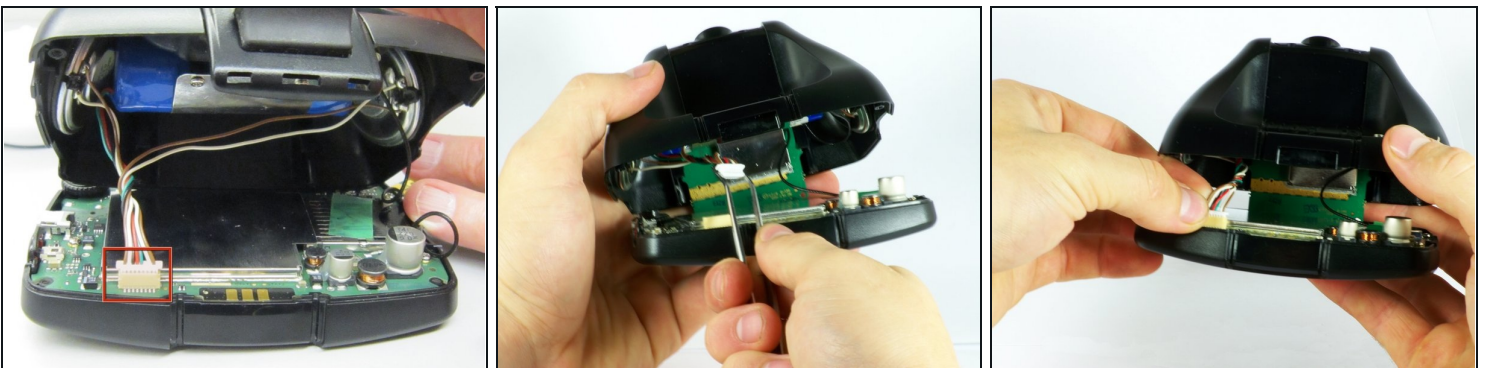

- Gently unplug the white cable connector using either your fingers or [tweezers](#).



Step 5



- Carefully expose both halves of the device.


⚠ Be sure not to pull the two halves apart further than the black wire can reach.

Step 6 — Battery

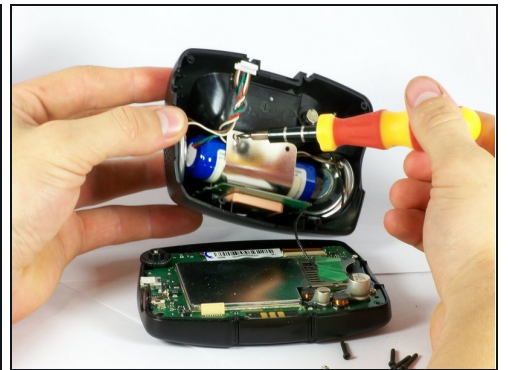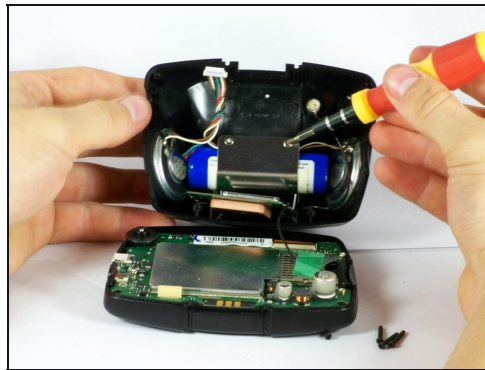


- Use a Phillips #00 screwdriver to remove the two screws from the battery bracket.

Step 7

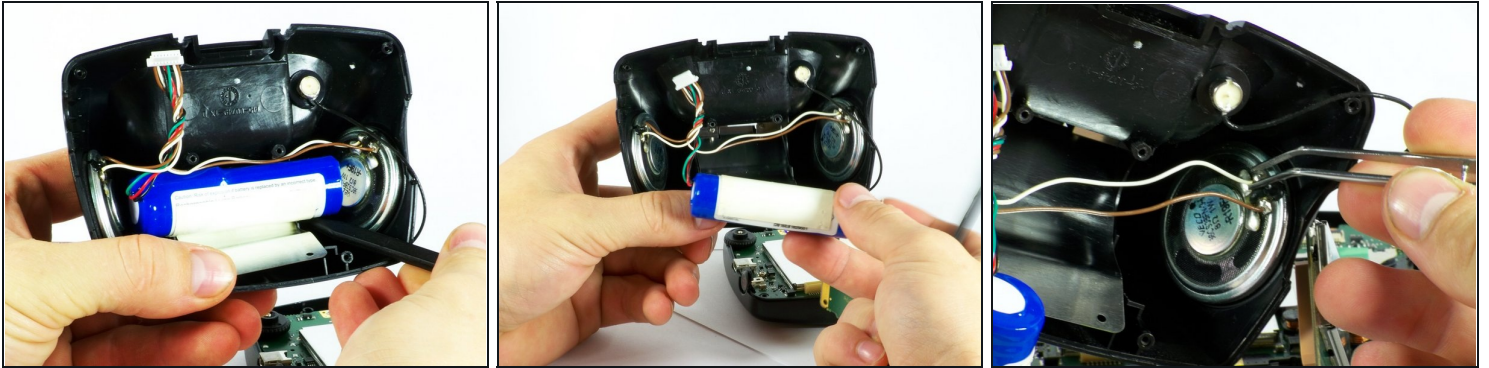

- Carefully peel the metal bracket away from the battery.
- Pull the battery away from the back cover.
- Desolder the wires from the speakers using a [soldering iron](#).

Step 8 — Speakers

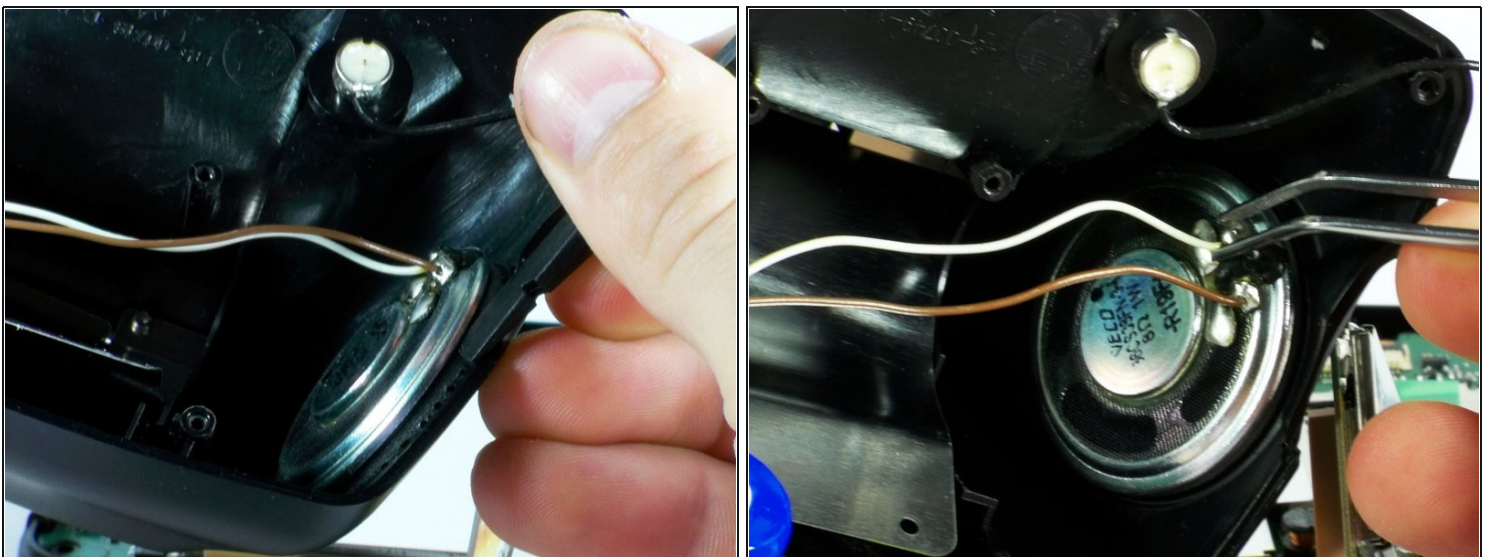

- Carefully use the spudger to pry the speakers from the outer casing.
- Once removed, you may use a soldering iron to remove the wires from the speakers.

To reassemble your device, follow these instructions in reverse order.