



# Disassembling Canon PowerShot SD800 IS Back Cover

Removing back cover.

Written By: Jeremy Rabaino



---

## INTRODUCTION

Removing the back cover allows access to the LCD display and the flash assembly.

---

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Back Cover



- Remove one 2.25mm screw on the bottom.

## Step 2



- Remove two 2.25mm screws on the right side looking from the front.

### Step 3



- Remove one 4.7mm screw on the side with the AV output.

### Step 4



- Pull off the back cover.
- ⓘ The back cover tends to stick in the top corner (near the mode dial) due to a metal clip. Jiggle the cover side to side as you pull it out.

To reassemble your device, follow these instructions in reverse order.