



Canon PowerShot SX160 IS Clock Battery Replacement

This guide walks you through how to replace the...

Written By: Jamie Secretan



INTRODUCTION

This guide walks you through how to replace the internal CR1220 battery on your Canon PowerShot SX160 IS by removing the battery tray on your camera.

TOOLS:

[Spudger](#) (1)

[Fingers](#) (1)

PARTS:

[CR 1220 Battery](#) (1)

Step 1 — Clock Battery



- Locate the internal battery tray on the side of your camera.

Step 2



- Use your finger or a spudger to gently pry the battery tray out of the camera.

Step 3



- Fully remove the battery tray from the camera.

Step 4



- Remove battery from tray and replace.

Congratulations, you have successfully replaced the internal battery. To reassemble your device, follow these instructions in reverse order.