



RCA RCT6272W23 Case Replacement

In this guide, we will go through disassembling...

Written By: Stephen Radachy



INTRODUCTION

In this guide, we will go through disassembling your RCA RCT6272W23 tablet's case to access internal components. This will allow you to replace vital components such as the motherboard or battery.

TOOLS:

[Phillips #00 Screwdriver](#) (1)


[iFixit Opening Tool](#) (1)

Step 1 — Case



- Use a Phillips #00 screwdriver to remove both 4.1 mm screws at the top of the device which hold it together.

Step 2

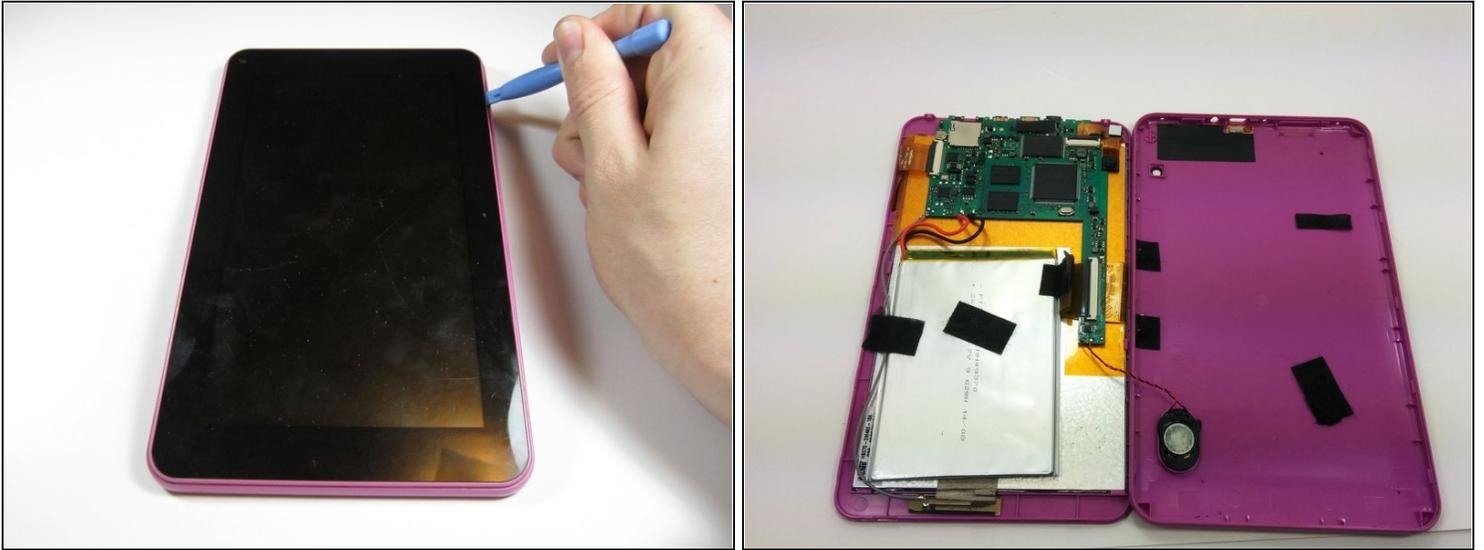

- Press the plastic opening tool into the space between the front and back portions of the case.
- Run it along the perimeter of the device to unhook the plastic tabs.
- Gently pull both sides apart.
⚠ The speaker is connected to the back cover, so be careful when separating.

To reassemble your device, follow these instructions in reverse order.