




Nokia 2128i LCD Screen Replacement

This guide will show you how to replace your phone's LCD screen.

Written By: Curtis Lutje

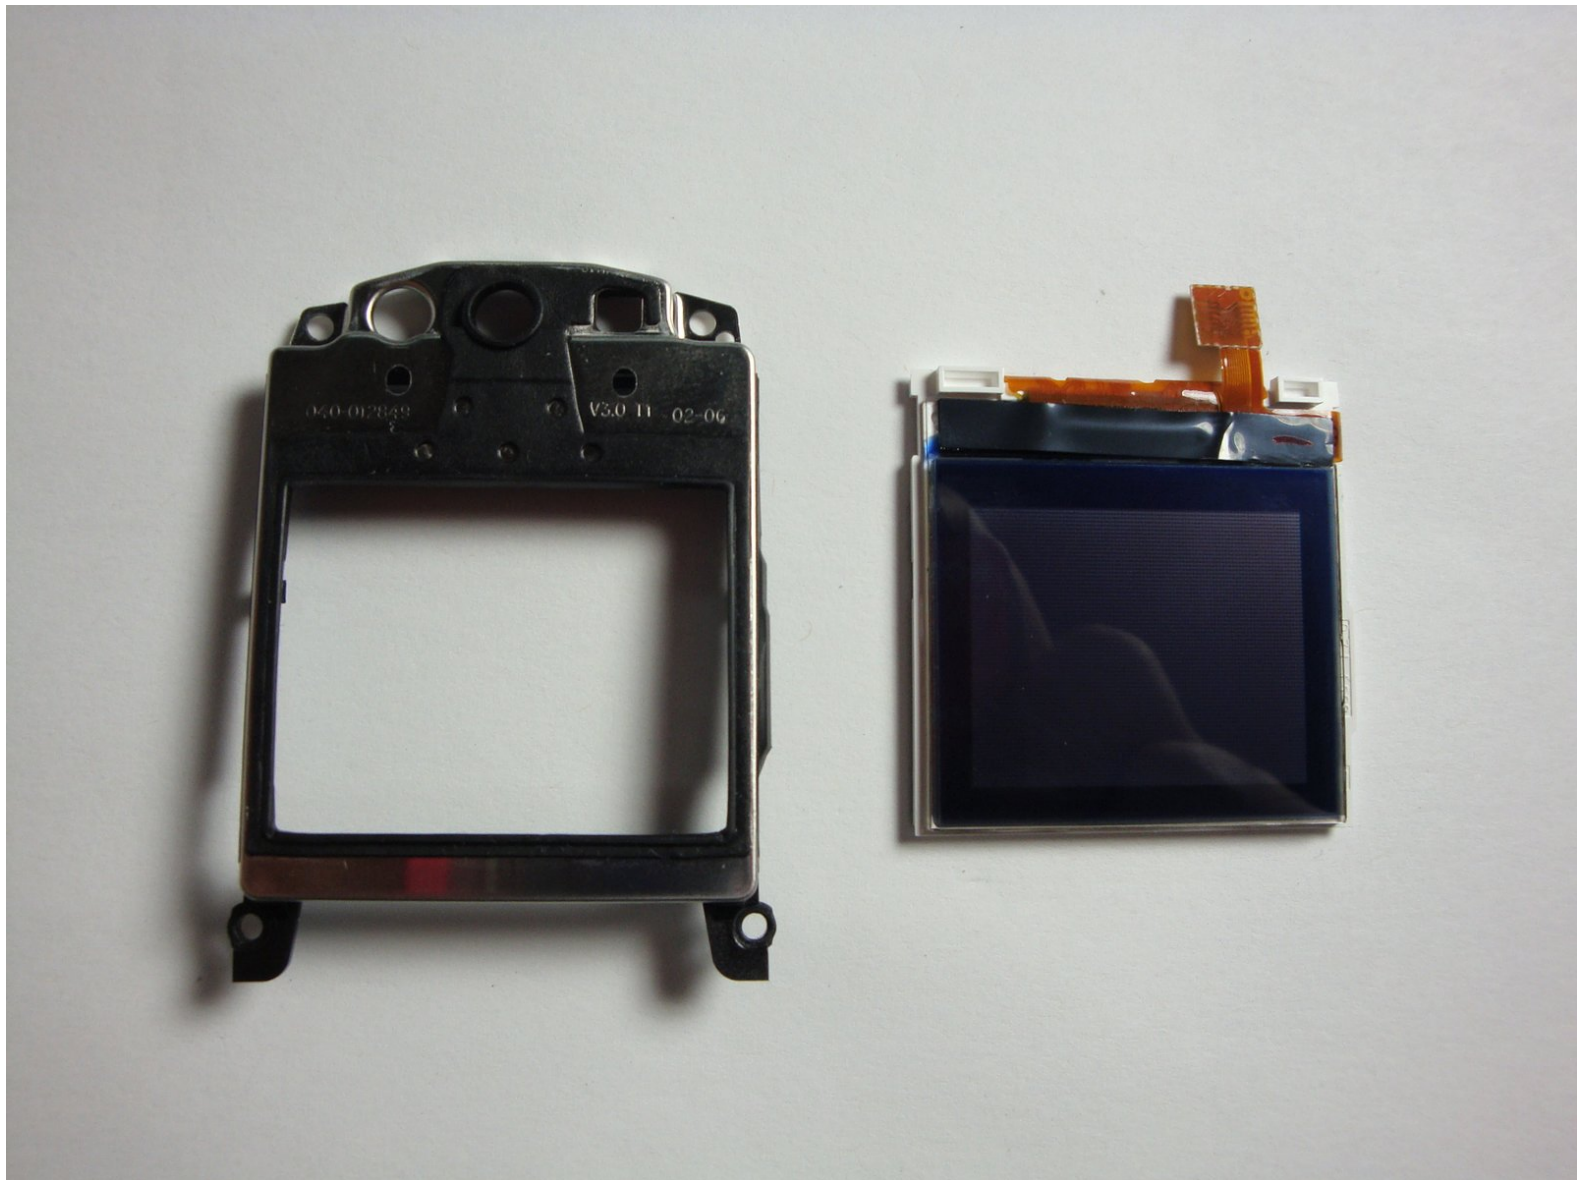

INTRODUCTION


When there is a crack in your screen or it just won't display, change the LCD screen out.



TOOLS:

- [iFixit Opening Tools](#) (1)
 - [T6 Torx Screwdriver](#) (1)
-

Step 1 — Battery

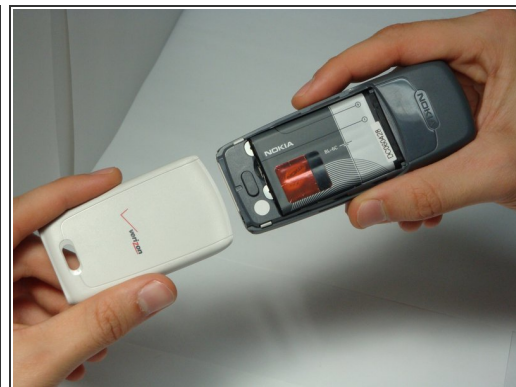

- Be sure cell phone is off before you begin to disassemble the phone.
- Press the button on the bottom of the back of the cell phone.
- Slide rear panel down and remove it.

Step 2



- Using your fingernail, pry the back of the battery upwards and pull out.

Step 3 — Faceplate




- Insert the plastic opening tool under the faceplate.
- Separate the faceplate from main body by twisting the prying tool with some force.
- The faceplate is held by three plastic fasteners, so pry evenly on both sides of phone.

Step 4 — Keypad






- With the faceplate removed, simply peel off rubber key pad and remove.

Step 5 — Motherboard Assembly

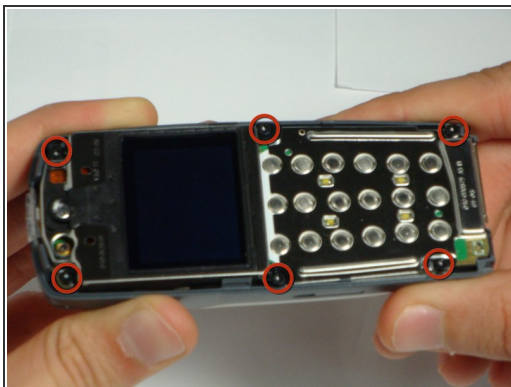




- Locate and remove the six screws on the front of the phone using a T6 Torx.
- All 6 screws are 6.9mm long.

Step 6

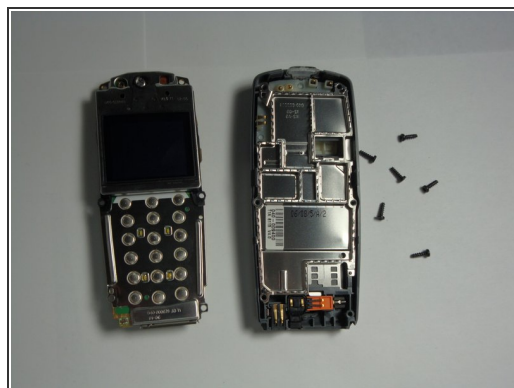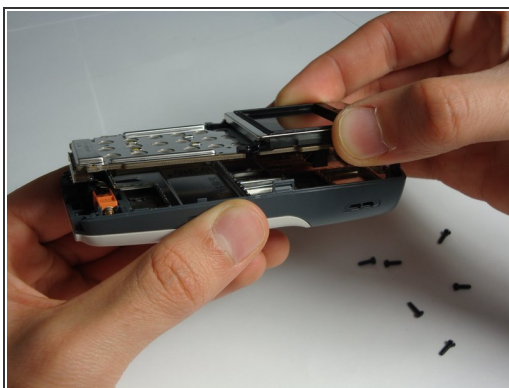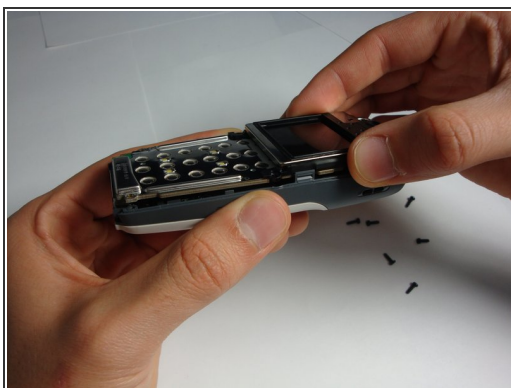




- After removing screws, lift the motherboard assembly straight off the cell phone body.

Step 7 — Speaker

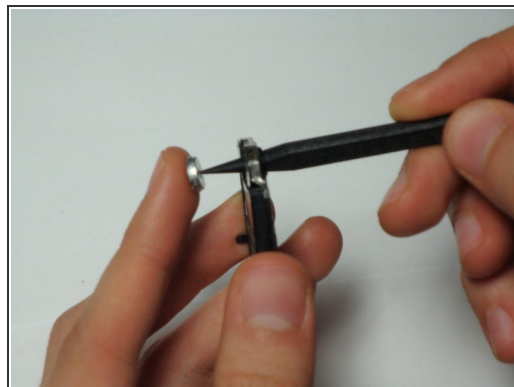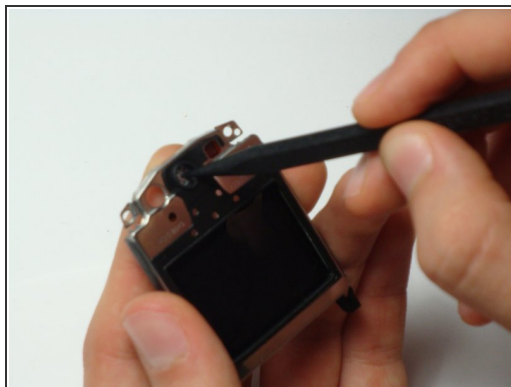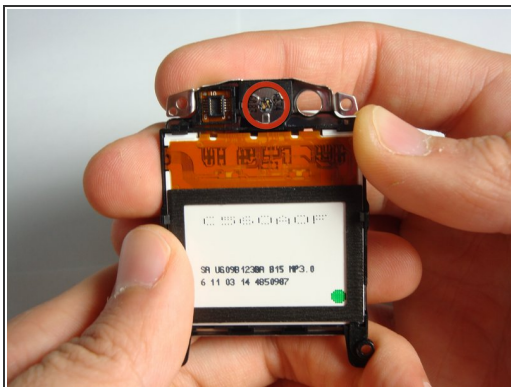


- With the LCD unit removed, gently press out the speaker with a non-metallic pointed object.

Step 8 — LCD Screen

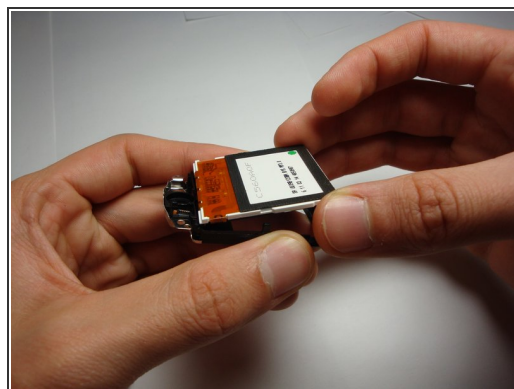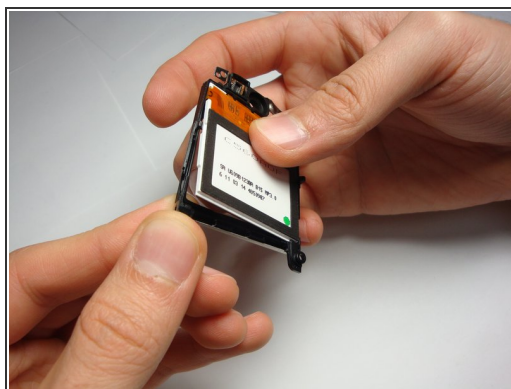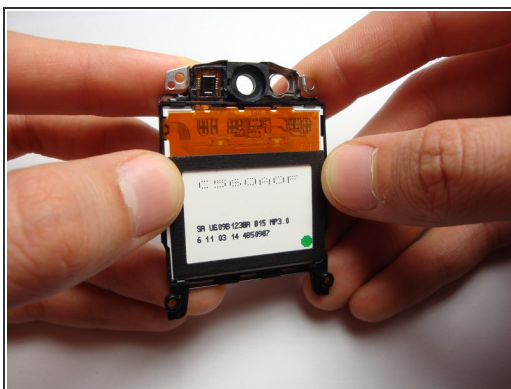


- Pull one of the bottom corners of the rubber casing outward and detach LCD screen.

Step 9

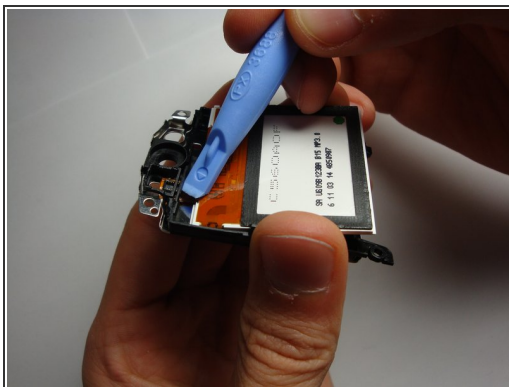

- Once the LCD screen is detached from a majority of the rubber casing, pry out the highlighted portion.

Step 10

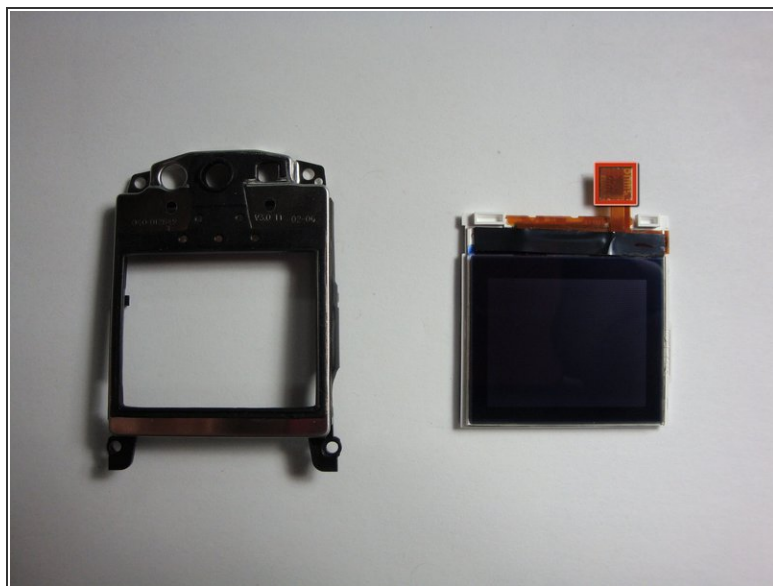

- The highlighted portion is fragile. Pry gently when removing from rubber casing.

To reassemble your device, follow these instructions in reverse order.